




## User instructions

### Knikmops wheel loader KM 140, KM 180 and KM 250

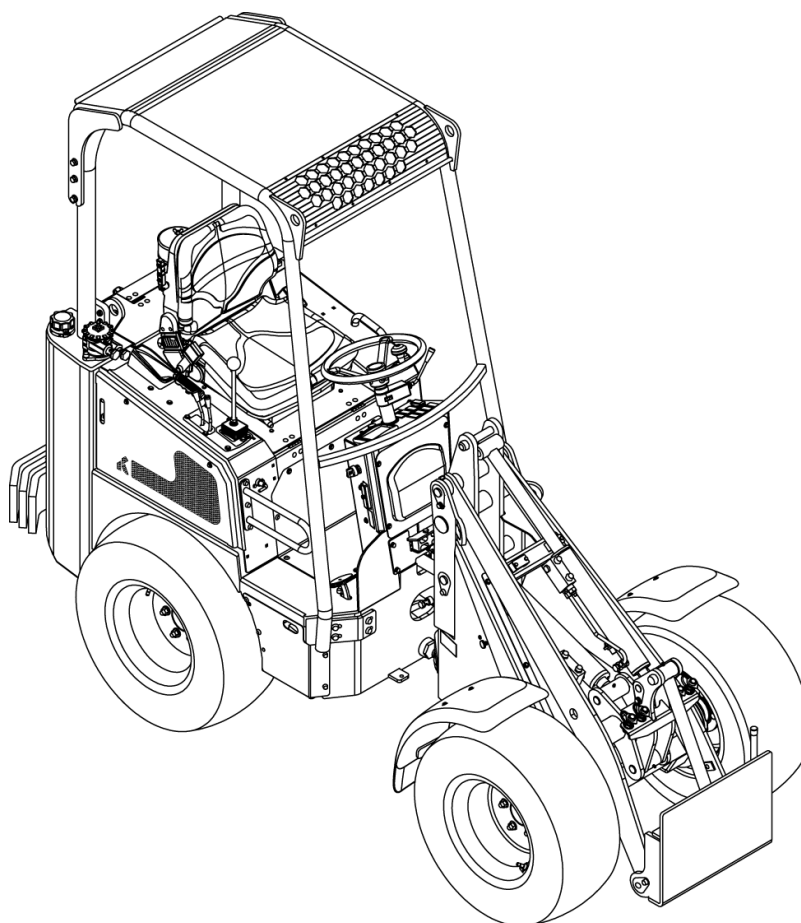



# Copyright and contact details

© 2021 Gebroeders Geens N.V. All rights reserved.

This document and parts thereof may not be reproduced, copied, distributed or stored in a search-based system or sent, in whatever form, whether electronic or otherwise, without the written consent of Gebroeders Geens N.V.

Specifications and illustrations may be modified without prior notification.

Gebroeders Geens N.V. cannot be held liable for modifications or typing errors.

Details and values provided in this document are average values and have been determined with care. Details and values are non-binding. Gebroeders Geens N.V. cannot be held liable for damage sustained as a result of a reliance on the information provided in this document or the use of products, processes, or equipment to which this document refers.

## Contact details

Gebroeders Geens N.V.

Hinnenboomstraat 5

2320 Hoogstraten (Belgium)

Tel. +32 (0)3-314 79 30

Fax +32 (0)3-314 84 56

E-mail: [info@knikmops.be](mailto:info@knikmops.be)



# Table of Contents

1. Introduction	1
1.1 About these instructions	1
1.2 Version history	1
1.3 Target group	1
1.4 Symbols used	2
2. Machine numbers	3
2.1 Machine identification	3
2.2 Type plate	3
3. Intended use	4
4. Safety	5
4.1 Safety instructions	5
4.1.1 Instructions before use of the machine and attachments	5
4.1.2 Instructions for the user	7
4.1.3 Instructions for use of the machine and attachments	7
4.1.4 General safety instructions	9
4.2 Safety symbols on the machine	10
4.2.1 General safety symbols	10
5. Description of components	13
5.1 Overview	13
5.2 Dashboard	14
5.2.1 Dashboard type 1 – standard version	14
5.2.2 Dashboard type 2	15
5.2.3 Dashboard type 3	16
5.3 Hydraulic operation	17
5.3.1 Hydraulic operation – standard version	17
5.3.2 Hydraulic operation – TE version	17
5.3.3 Hydraulic operation – eHC version	18
5.3.4 Sticker for hydraulic operation	20
5.4 Connector plate	21
5.4.1 Connector plate with manually operated locking pin	21
5.4.2 Connector plate with hydraulically operated locking pin	22
5.5 Display	22



6. Operating the machine	24
6.1 Operator's seat	24
6.2 Starting	24
6.2.1 Preparatory work	24
6.2.2 Starting a machine with a Yanmar engine	25
6.3 Stopping	26
6.3.1 Stopping a machine with a Yanmar engine	26
6.4 Driving	27
6.4.1 Operating principle – wheel propulsion	27
6.4.2 Locking differential	27
6.4.3 Driving: standard version	29
6.4.4 Driving - TE version	30
6.4.5 Driving: eHC version	32
6.5 Operating the arm	33
6.5.1 Operating the arm – standard version	34
6.5.2 Operating the arm – TE version	35
6.5.3 Operating the arm – eHC version	35
6.6 Coupling an attachment	36
6.6.1 Releasing the hydraulic pressure	36
6.6.2 Coupling with a manually operated locking pin	36
6.6.3 Coupling with a hydraulically operated locking pin	38
6.7 Uncoupling an attachment	39
6.7.1 Uncoupling with a manually operated locking pin	39
6.7.2 Uncoupling with a hydraulically operated locking pin	40
6.8 Checking the fuel tank	42
6.8.1 Checking the fuel tank with dashboard type 1	42
6.8.2 Checking the fuel tank with dashboard type 2	42
6.8.3 Checking the fuel tank with dashboard type 3	42
6.9 Filling the fuel tank	43
6.10 Fitting counterweights	45
6.10.1 Installing the first weight	45
6.10.2 Installing the second and third weight	46
6.11 Installing and removing the articulation lock	47
6.11.1 Fitting the articulation lock	47





6.11.2	Removing the articulation lock_____	48
6.12	Preheating_____	49
6.13	Operating the display_____	50
6.13.1	Adjusting the language settings on the display_____	50
6.13.2	Adjusting the screen brightness_____	50
6.13.3	Checking soot filter information_____	51
6.13.4	Checking engine and control information_____	51
6.13.5	Checking error messages_____	51
6.13.6	Checking other symbols_____	53
7.	Attachment – bucket_____	54
7.1	Overview_____	54
7.2	Commissioning_____	54
7.3	Coupling_____	54
7.4	Using_____	55
7.5	Driving_____	55
7.6	Uncoupling_____	55
8.	Attachment – pallet fork_____	56
8.1	Overview_____	56
8.2	Commissioning_____	56
8.3	Coupling_____	56
8.4	Using_____	57
8.5	Driving_____	57
8.6	Uncoupling_____	58
9.	Transport and storage_____	59
9.1	Transportation – safety instructions_____	59
9.2	Driving onto the mode of transportation_____	59
9.3	Lifting the machine and attachments_____	59
9.4	Storage_____	60
10.	Maintaining the machine_____	61
10.1	Daily maintenance_____	61
10.2	Maintenance table – maintenance of machine when switched off_____	62
10.3	Maintenance table – maintenance of machine when switched on_____	63



10.4	Periodic maintenance (accredited maintenance engineer)	63
10.5	Opening the engine compartment	66
10.5.1	Opening the engine compartment – type 1	66
10.5.2	Opening the engine compartment – type 2	67
10.5.3	Opening the engine compartment – type 3	68
10.6	Cleaning the cyclone filter	68
10.7	Checking the fan belt tension	70
10.8	Checking the parking brake	70
10.9	Lubricating the hinge points	71
10.9.1	Location of the lubrication nipples – standard version	71
10.9.2	Location of the lubrication nipples – TE version	72
10.9.3	Location of other lubrication points	73
10.9.4	Lubricating via the lubrication nipples	73
10.10	Checking/topping up the engine oil	74
10.10.1	Checking the engine oil level	74
10.10.2	Topping up the engine oil	74
10.11	Checking/topping up the coolant	76
10.11.1	Checking the coolant level	76
10.11.2	Topping up the coolant	76
10.12	Checking/topping up the hydraulic fluid	77
10.12.1	Checking the hydraulic fluid level	78
10.12.2	Topping up the hydraulic fluid	78
10.13	Replacing the air filter	79
10.13.1	Removing the cover	79
10.13.2	Replacing the air and fine filter	80
10.14	Replacing hydraulic fluid filters	80
10.14.1	Replacing the suction filter	81
10.14.2	Replacing the return filter	82
10.15	Soot filter	83
10.15.1	Description and operation of the soot filter	83
10.15.2	Soiling level of the soot filter	83
10.15.3	Carrying out the manual regeneration process	84
10.15.4	Stopping/preventing the regeneration process	85
10.16	Cleaning the machine	87



10.16.1	Cleaning with a high-pressure cleaner	87
10.16.2	Problems caused by improper cleaning	88
11.	Maintaining the buckets and pallet fork	89
11.1	Daily maintenance	89
11.2	Maintenance and repair	89
12.	Decommissioning and disposal	90
13.	Troubleshooting	91
13.1	Procedure	91
13.2	Troubleshooting	91
14.	Technical specification	94
14.1	Consumables	94
14.2	Machine dimensions	95
14.3	Maximum machine load	98
14.4	Other technical machine data	102
14.5	Sound level	105
14.6	Bucket dimensions	105
14.7	Pallet fork dimensions	107
15.	Options and attachments	108
15.1	Options	108
15.2	Attachments	110
16.	Maintenance carried out	114
17.	Glossary	115
18.	CE declaration of conformity	116





# 1. Introduction

## 1.1 About these instructions

These instructions provide all information required to work with the Knikmops wheel loader and corresponding attachments – pallet fork, volume buckets, shovel buckets, and rubble buckets.

The Knikmops wheel loader is referred to as the "machine" in these instructions. The volume buckets, shovel buckets, and rubble buckets are referred to as the "buckets" in these instructions. The attachments known as "pallet fork" and "buckets" are jointly referred to as "attachments" in these instructions.

The instructions apply to the following types of machine: KM 140, KM 180, KM 250, including both the H and TE versions (telescopic arm).

The "pallet fork" and "buckets" must be coupled to the Knikmops, articulated loader, wheel loader, telescopic handler, excavator, or a similar machine. The term "machine" is used in these instructions as a reference term, even if an intermediate attachment is used.

These instructions were originally compiled in Dutch. All other language versions are translations of the original. In the event of doubt about the accuracy of a translation, the Dutch version takes precedence.

It is not always possible to provide a detailed illustration of each separate part of the machine. The illustrations in this document may, therefore, show a standard structure. The illustrations are solely for instruction purposes.

## 1.2 Version history

Date	Version	Notes
December 2021	1.0	First version

## 1.3 Target group




These instructions are intended for the following target groups:

- machine operators
- personnel who carry out daily maintenance on the machine



## 1.4 Symbols used

The following symbols are used in this document:

Symbol	Function	Description
	Warning!	"Warning" means that there is a risk of physical injury or death if the instructions are not followed.
	Caution	"Caution" means that there is a risk of damage to the equipment if the instructions are not followed.
	Note	"Note" is used to provide additional information.



## 2. Machine numbers

### 2.1 Machine identification

Model:

Chassis number:


Engine number:

Color:

Delivery date:

Stamp of accredited Knikmops distributor:

### 2.2 Type plate

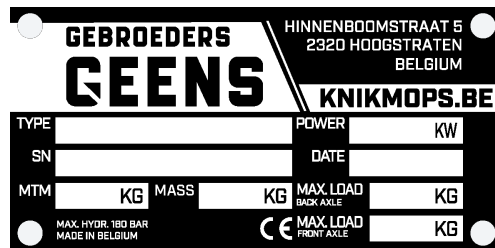

The figure below shows an example type plate on the machine or the attachment. The actual type plate shows the correct data according to the type of machine or attachment.



### 3. Intended use

The machine has been designed for work and transportation activities in road construction, garden landscaping, and related industries. Attachments can be coupled to and uncoupled from the machine for use in different applications. Only use attachments that are intended for your machine and that have been approved by the manufacturer.

The "pallet fork" attachment is used for moving pallets.

The "bucket" attachments are used for shoveling, moving, and pouring bulky goods.





## 4. Safety

### 4.1 Safety instructions

#### 4.1.1 Instructions before use of the machine and attachments

- Read the instructions carefully before using the machine.
- Ensure that no one is at risk.
- Carry out the procedures fully and in the specified order.
- Retain these instructions with the machine and corresponding attachments. If no instructions are available, inform your employer.
- Ensure that all warning symbols on the machine and attachments are legible. Replace illegible warning symbols promptly.
- Allow the machine to warm up in a well-ventilated environment before use.
- Assess the terrain on which you intend to drive beforehand and demarcate hazardous points.
- Use the machine on ground with sufficient load-bearing capacity only.
- Workplace environment:
  - The machine is suitable for driving on public roads provided that it has the correct registration certificates, lighting, and warning elements.
  - The operator must comply with the legal traffic regulations if driving on public roads.
  - The workplace must always be sufficiently illuminated.
- Replace damaged protective devices promptly.
- Never remove the safety bar or safety roof.
- Do not modify the machine or attachments unless this has been approved in advance by the manufacturer.
- Use only attachments and machines from the manufacturer.
- Use the machine and the attachments only as intended. If you intend to use them for a different purpose, please contact the manufacturer.
- The manufacturer is not liable for damage that results from improper use of the machine or attachments.
- If you replace parts, always contact the manufacturer and use only parts that are supplied by the manufacturer.
- Start the machine only when sitting in the operator's seat.
- When starting or switching off the machine's engine, the hydraulic drive unit must be switched off and the handbrake must be engaged.
- Keep the operator's seat, pedals, and steps clean.



- Stow materials and tools when not in use.
- Avoid prolonged overloading of the hydraulic systems. Failure to do so will cause the machine to overheat. Always move the hydraulic control of the machine to the neutral position when starting up.
- Avoid jerky movements, other than necessary for normal use.
- Avoid heavy lifting when the machine is running at fully capacity.
- Avoid excessive swinging of the machine when the attachments is on the ground.
- All connections between the attachments and machine must be fitted with proper latches.
- The mechanical and hydraulic coupling parts must be properly lubricated and accessible.
- If the machine is equipped with an attachment which requires periodic inspection, evidence of inspection must always be present in the machine.
- If using the attachment in combination with a machine not from the manufacturer, or if using other attachments, the manufacturer is unable to accept responsibility for use of the combination.
- Take the weight of the attachment into account when checking the load values of the machine. This weight is indicated on the type and in the instructions.
- When using an attachment, subtract the weight of the attachment from the load values.
- The load on the arm must not cause the machine to tip, as this could cause the machine to tip over.
- The arm must be adjusted such that the load is suspended stationary when the control lever is in the neutral position.
- Do not operate the arm unnecessarily.
- Ensure that attachments are correctly locked at all times.
- Follow the instructions for the attachment in question.
- The capacity and stability of the machine to which the attachment is coupled must be matched to the attachment.
- The coupling on the machine must be consistent with the hinge coupling on the attachment.
- The weights being lifted must not exceed the prescribed value of the machine and the attachment. The maximum lifting weight is stated on the type plate and in the instructions.
- Avoid unevenly distributed lifting loads.
- Use of counterweights other than those recommended by the manufacturer may cause overloading and thus prove hazardous to the operator and bystanders.



#### **4.1.2 Instructions for the user**

- Only personnel who have been trained by the manufacturer or importer are permitted to use, maintain, and repair the attachments.
- Personnel must:
  - be eighteen years of age or older.
  - be physically and mentally healthy.
  - have the requisite knowledge and skills.
  - have a driver's license (for driving on public roads).
- Personnel in training may only use the machine and the attachments under the supervision of trained personnel.
- Not wear loose clothing or jewelry. Tie long hair back.
- Use personal protective equipment, such as safety clothing, safety shoes, safety goggles, and proper work gloves.
- Use ear protection. The sound level is more than 93 dB(A).
- It is the operator's responsibility to ensure that bystanders are unable to access the immediate vicinity of the machine, interchangeable equipment, and loads.

#### **4.1.3 Instructions for use of the machine and attachments**

- Observe all safety instructions for the machine while working with the machine and attachment.
- In the event of a malfunction or damage to the machine, stop the machine and report it to your employer. Ensure the malfunction is resolved promptly.
- Avoid slopes and bumps to the fullest extent possible. The machine may become unstable.
- If you must drive on a slope, bear the following in mind:
  - Driving on a slope without a safety bar or cab is extremely dangerous and strictly prohibited.
  - Driving parallel to the slope is permitted only if the following conditions are met:
    - The slope must not exceed 10°.
    - The arm must be retracted and be as low to the ground as possible.
    - The travel speed must not exceed 3 km/h.
  - If the machine tips over:
    - Keep the safety belt on.
    - Remain in the machine.
    - Switch the machine off completely.
- Always drive with the arm retracted when driving a TE version machine.



- Avoid turning the steering wheel when the machine is stationary.
- Never transport people with the machine or attachments.
- Do not make sharp turns at high speed.
- Keep the safety belt on at all times.
- If you notice that the machine is becoming unstable or skidding, stop the machine as promptly as possible with the attachment on the ground.
- Avoid high speeds with a low oil temperature – drive at low revolutions (1,500 rpm) unladen for the first five minutes.
- In the event of pending danger, give a warning signal and stop the machine, if necessary.
- In poor visibility and darkness, always keep the machine's lights on.
- If you do not have sufficient visibility, you must be accompanied by trained personnel. Personnel must be recognizable as such and always remain in your line of sight.
- Do not use the machine at landfill sites where there is a risk of the machine falling unless there are facilities in place to prevent rolling or crashing.
- Never leave the machine running if no one is at the steering wheel.
- Before stopping the machine, lower the attachment as close to the ground as possible. This prevents people from falling over the attachment and prevents the arm from suddenly tilting downward.
- If the hydraulic steering cylinder fails, fit the articulation lock.
- If driving the machine with a pallet fork:
  - The pallet fork must be suspended low above the ground.
  - Draw attention of people around the machine to the risk of falling loads.
- If driving the machine with a bucket:
  - The bucket must not be suspended too far above the ground. Bulky goods may fall from the bucket and impact the operator if the bucket is too far from the ground, resulting in serious injury.
  - The underside of the bucket can only withstand light loads. In the lowermost position, the edge of the bucket can hit the ground when tilted forward, which can cause an overload.
  - If the bucket is too low to the ground, the ground and the bucket itself may become permanently damaged.
- If possible, park on level ground and pull the parking brake upward.
- Carefully consider how you use the attachment.
- If the hydraulic fast attachment for connecting the attachment is not working properly, stop immediately to avoid accidents.



- Lifting and hoisting equipment must not be used if it has not been inspected or not inspected promptly.
- When the machine is stationary, operations under the attachment, whether the attachment is laden or unladen, are not permitted.

#### **4.1.4 General safety instructions**

- Lifting and hoisting equipment such as chains, plastic straps, and steel straps must satisfy these requirements:
  - sufficiently strong, properly dimensioned, and in good condition
  - comply with local labor and safety regulations
- Follow local labor and safety regulations and environmental laws
- Ensure that you know where fire extinguishing equipment is located.
- In the event of a fire, you must keep a sufficient distance from the machine. If the hydraulic fluid lines become overheated, they are at risk of rupturing and causing intense flames of burning hydraulic fluid.
- Use only fuses from the manufacturer.
- Ensure that no oil or grease gets on to the machine. In the event of a spillage, clean it immediately.
- Only use the machine in well-ventilated spaces.
- Never use the machine as an anchoring point.
- The ROPS/FOPS safety cab is compulsory in any situation in which material can fall downward or the operator is undertaking hazardous activities on a slope.
- To prevent life-threatening situations, do not modify the safety cab in any way.
- Mirrors, light fittings, and similar fixtures may only be fitted to the safety bar with a clamp.
- Welding, drilling, and similar activities on the bar are not permitted. Replace a damaged ROPS/FOPS safety cab promptly.
- If you wish to start the regeneration process, take the following into account:
  - Regenerate outdoors only or in an adequately ventilated space.
  - Keep a safe distance from the machine.
  - Do not switch the machine off.
  - Keep the engine compartment closed.



## 4.2 Safety symbols on the machine

The safety symbols on the machine and the attachments must always be legible and be replaced if damaged.

### 4.2.1 General safety symbols

Symbol	Description
	Personnel not operating the machine must stay out of its vicinity.
	Safety instructions that you must read before starting the machine. You must always follow these safety instructions carefully.
	Standing under the load is prohibited.
	Safety instructions that you must read to avoid overturning the machine.
	Safety instructions that you must read to avoid being crushed by the machine.
	Verify the full engagement of the loader attachment bracket locking pin to the attachment to avoid being crushed.
	Verify Diesel fuel specifications.



Symbol	Description
	Install the FOPS if there is a risk of falling objects.
	Safety instructions on what to do when the machine tips over.
	Use hydraulic fluid only.
	Safety instructions that you have to read carefully to avoid injury or death.
	Never remove the ROPS.
	Do not open when the engine is running.




Symbol	Description
	Always read the operator manual and safety instructions.
	Maintain 3-point contact during entry and exit if you are the operator and keep a safe distance from the machine during entry and exit if you are not the operator.
	Risk of burns: beware of hot machine parts.
	Handbrake on/off.
	Valve operation (see Sticker for hydraulic operation <a href="#">on page 20</a> for more information).





## 5. Description of components

### 5.1 Overview

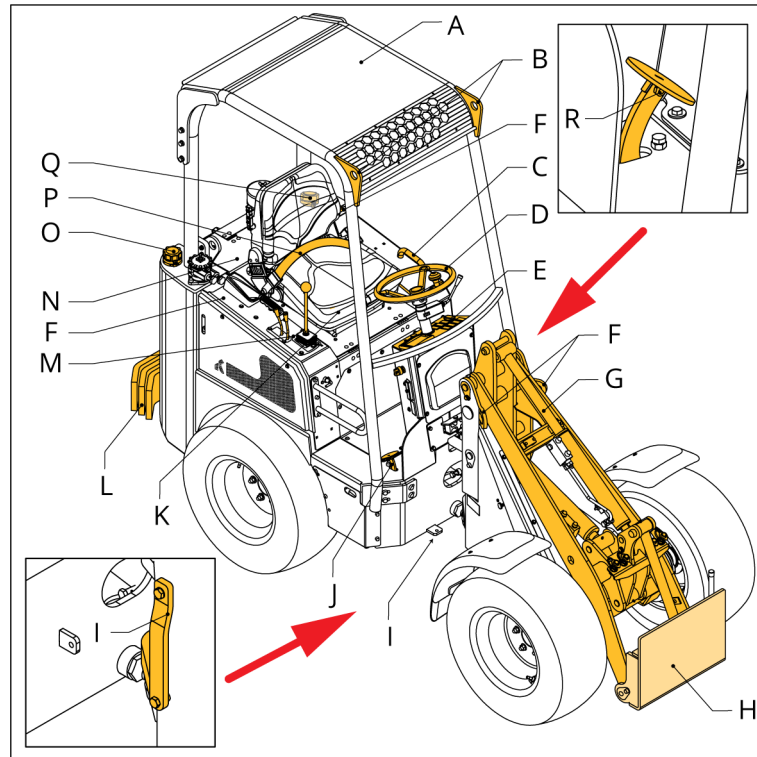

**Figure 1:** Overview of the machine


A	Safety cab (compulsory when working on slopes or where there is a risk of falling materials)	J	Accelerator pedal
B	Lifting eyelets for hoisting the machine with a safety cab	K	Operator's seat
C	Parking brake	L	Counterweights (optional)
D	Steering wheel	M	Hydraulic operation
E	Dashboard	N	Engine compartment
F	Lifting eyelets for hoisting the machine without a safety cab	O	Hydraulic tank
G	Arm	P	Safety belt
H	Connector plate	Q	Fuel tank
I	Articulation lock locking pin	R	Inching pedal



## 5.2 Dashboard

Different dashboard types are available according to the machine.

### 5.2.1 Dashboard type 1 - standard version

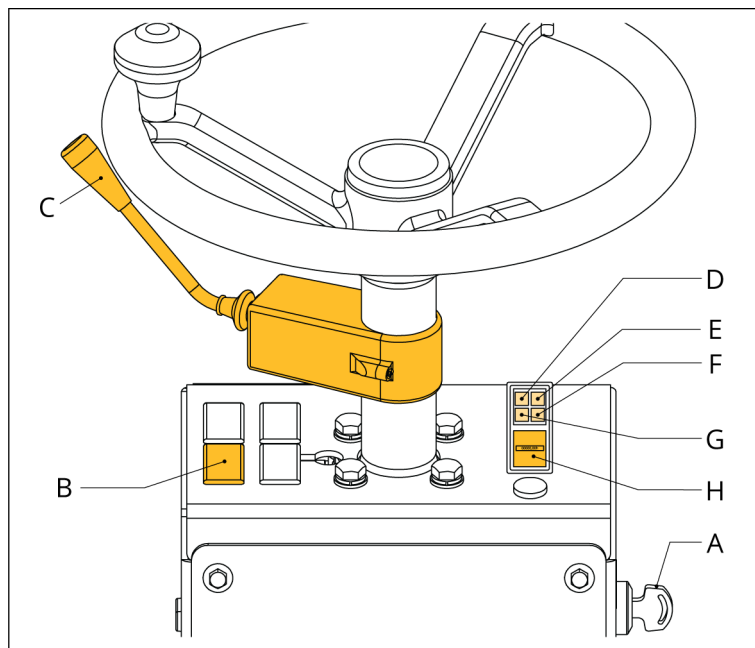


**Figure 2:** Overview of dashboard type 1 – standard version

A	Ignition key	F	Glow plug lamp for the diesel engine
B	Shurlock button (only for the "hydraulically operated locking pin on the connector plate" option)	G	Engine temperature lamp
C	VNA switch	H	Operating hours counter
D	Battery voltage lamp		
E	Oil pressure lamp		



## 5.2.2 Dashboard type 2

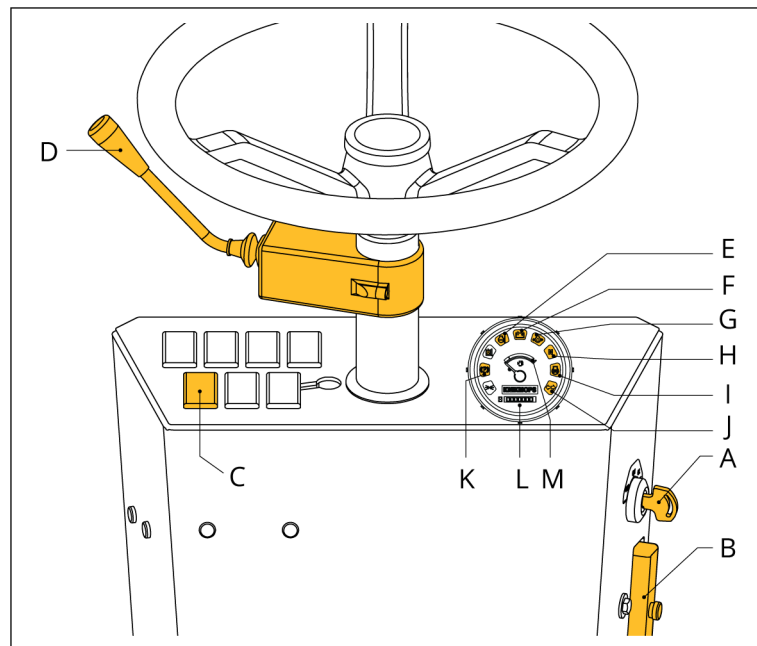


**Figure 3:** Overview of dashboard type 2

A	Ignition key	H	Neutral position indicator
B	Fuse box	I	Glow plug lamp for the diesel engine
C	Shurlock button (only for the "hydraulically operated locking pin on the connector plate" option)	J	Direction indicator
D	VNA switch	K	Parking brake
E	Coolant temperature	L	Operating hours counter
F	Battery voltage	M	Fuel indicator
G	Engine oil pressure		



### 5.2.3 Dashboard type 3

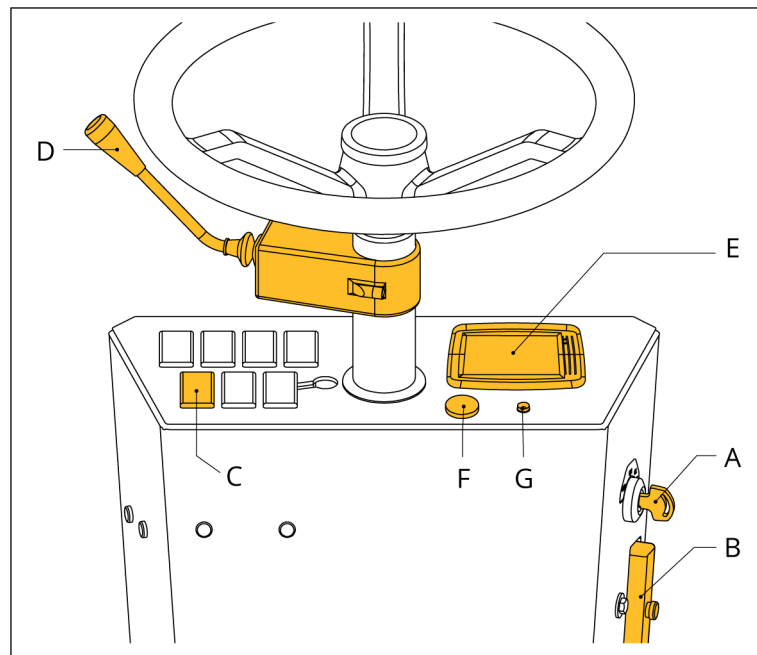


**Figure 4:** Overview of dashboard type 3

A	Ignition key	E	Display
B	Fuse box	F	Blind stop/hand throttle option (potentiometer)
C	Shurlock button: optional with hydraulically operated locking pin(s)	G	Engine oil pressure indicator
D	VNA switch		



## 5.3 Hydraulic operation

### 5.3.1 Hydraulic operation - standard version

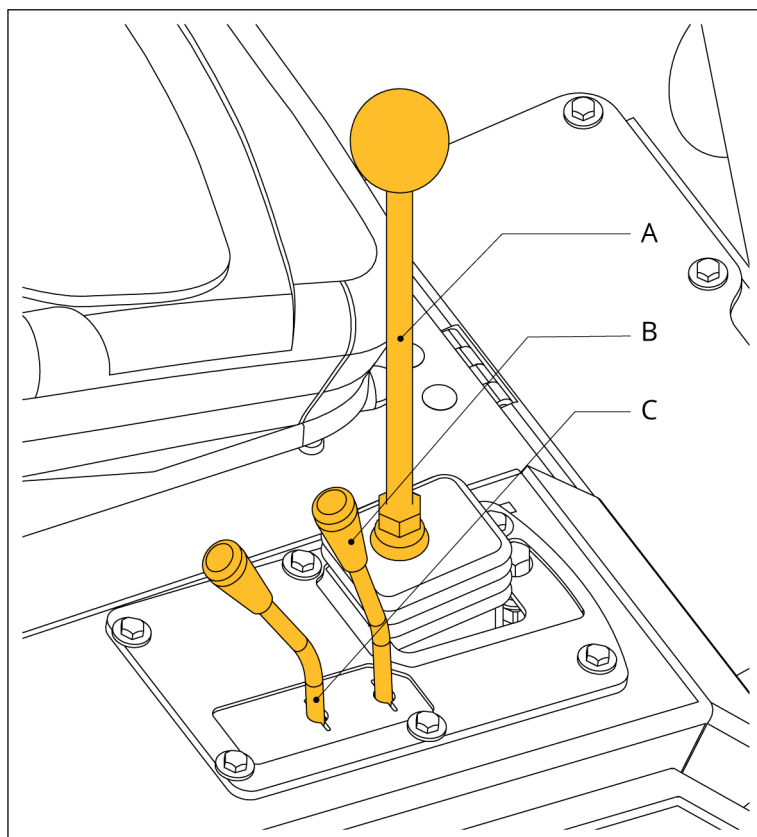

**Figure 5:** Hydraulic operation – standard version

A Cross lever

C Lever for hydraulic assistance function,  
right


B Lever for hydraulic assistance function,  
left



If the machine is equipped with a hydraulically operated locking pin, the "lever for hydraulic assistance function, left" is also used to uncouple the attachment.

### 5.3.2 Hydraulic operation - TE version

This version is also available as an option on other types of machine. In that case, the standard VNA switch is omitted.

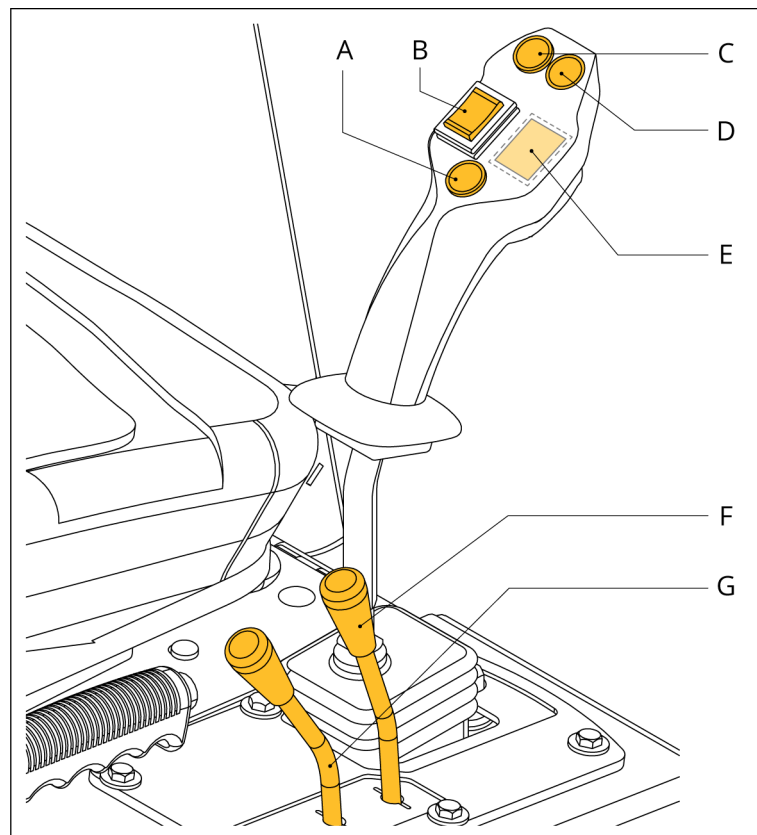

**Figure 6:** Hydraulic operation – TE version


A	Horn	E	High/low adjustment button (only on types KM 125 and KM 250)
B	Travel direction button	F	Lever for hydraulic assistance function, left
C	Telescope button	G	Lever for hydraulic assistance function, right
D	Spare button (optional: horn)		

### 5.3.3 Hydraulic operation - eHC version

This version is also available as an option on other types of machine. In that case, the standard VNA switch is omitted.



eHC stands for electric hydraulics control.

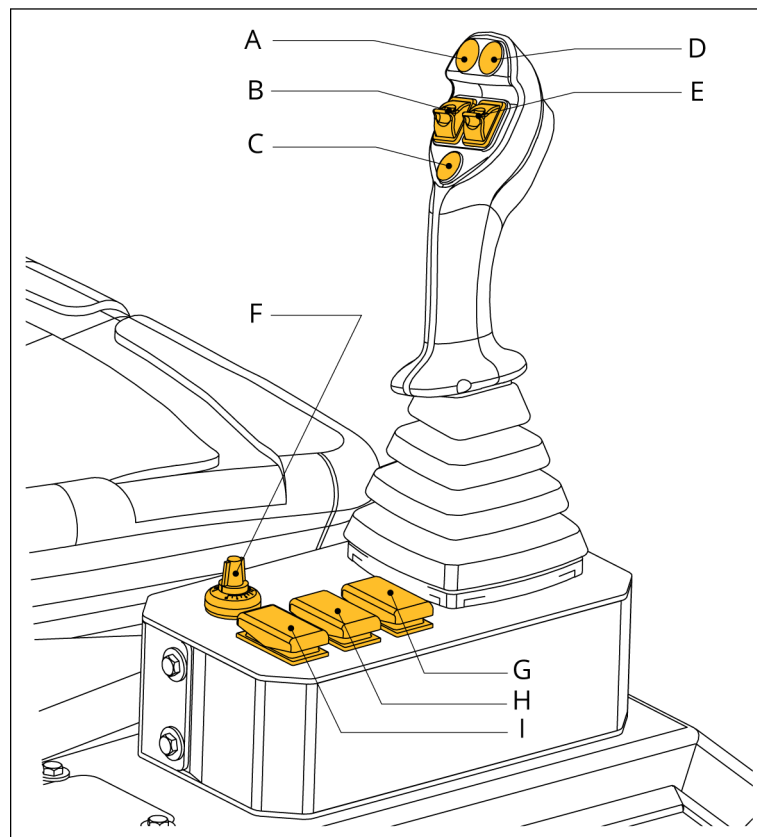


**Figure 7:** Hydraulic operation – eHC version

A	Button for hydraulic function, A direction	F	Flow control
B	Travel direction button	G	Switch for locking the right-hand function
C	Spare button (optional: horn)	H	Switch for selecting fixed stop or double action
D	Button for hydraulic function, B direction	I	High/low transmission button (types KM125 and KM250 only) or laser function on/off switch
E	Telescope button		



### 5.3.4 Sticker for hydraulic operation

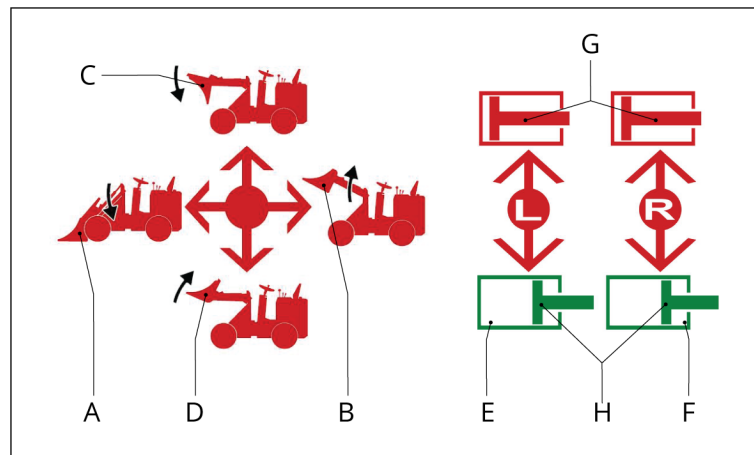

**Figure 8:** Sticker for hydraulic operation


A	Lower arm	E	Hydraulic assistance function, right
B	Raise arm	F	Hydraulic assistance function, left
C	Connector plate, front	G	Hydraulic pressure on hydraulic connection side with red dust cap
D	Connector plate, rear	H	Hydraulic pressure on hydraulic connection side with green dust cap





## 5.4 Connector plate

### 5.4.1 Connector plate with manually operated locking pin

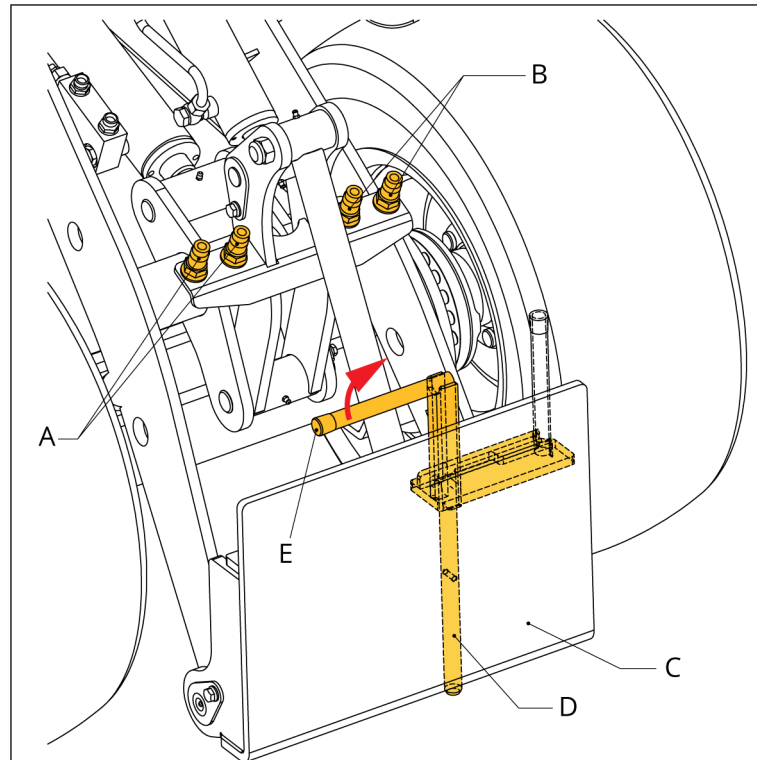


**Figure 9:** Connector plate with manually operated locking pin

- |   |   |   |               |
|---|---|---|---------------|
| A | Connection for hydraulic assistance function, right | D | Locking pin   |
| B | Connection for hydraulic assistance function, left  | E | Locking lever |
| C | Plate of connector plate                            |   |               |



## 5.4.2 Connector plate with hydraulically operated locking pin

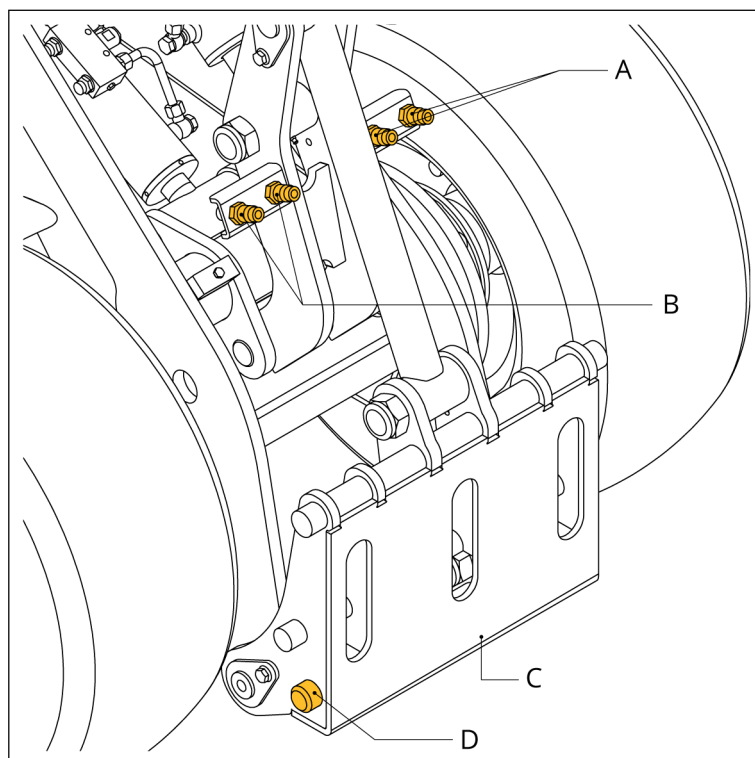


**Figure 10:** Connector plate with hydraulically operated locking pin

- |   |   |   |                          |
|---|---|---|--------------------------|
| A | Connection for hydraulic assistance function, left  | C | Plate of connector plate |
| B | Connection for hydraulic assistance function, right | D | Locking pins             |

## 5.5 Display

This section provides more information on the start screen of your display. For more information on the actions that you can carry out via the screen, see Operating the display [on page 50](#).

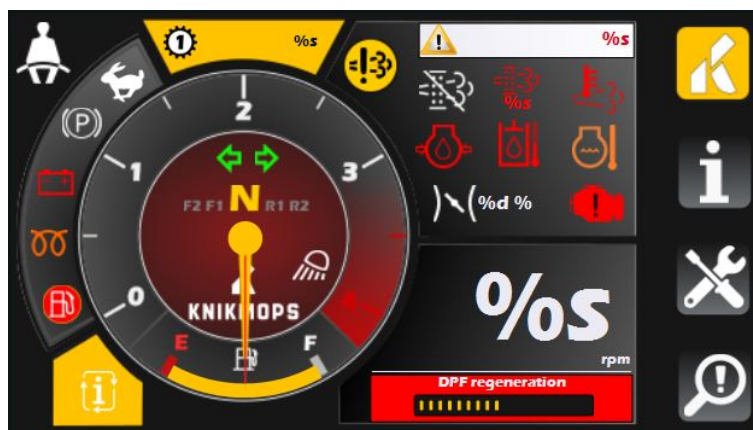



You can find the following information on the start screen:

- The quantity of fuel remaining in your tank.
- The engine revolutions.
- Regeneration of the soot filter.
- Possible alarm signals, such as engine overheating, coolant, and more.



## 6. Operating the machine

### 6.1 Operator's seat

The illustration below is a standard depiction of the operator's seat. A different operator's seat may be optionally requested. Please contact your distributor for more information. If you opt to use a different operator's seat, follow the instructions supplied with that seat.

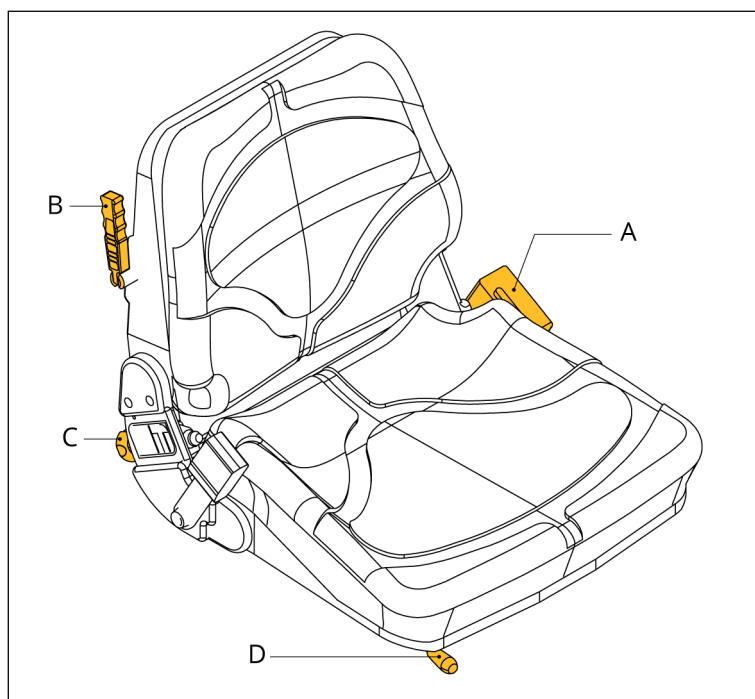


Figure 11: Operator's seat

- |   |   |   |   |
|---|---|---|---|
| A | Lever for adjusting the backrest angle          | C | Button for backrest   |
| B | Button for adjusting the weight of the operator | D | Lever for adjusting the operator's seat forward or backward |

### 6.2 Starting

#### 6.2.1 Preparatory work

Before actually starting the machine, a number of precautionary measures and actions are required.

- 1 Carry out daily maintenance.  
See Daily maintenance [on page 61](#).
- 2 Check the fuel level and the level of the hydraulic fluid.

**Optional:** top up the tank in question.



For more information on how to check the fuel tank, see Checking the fuel tank [on page 42](#).

For more information on how to top up the hydraulic fluid, see Checking/ topping up the hydraulic fluid [on page 77](#).

- 3 If you are working in a dusty environment, ensure that the cyclone filter is still usable.


**Optional:** Clean the cyclone filter.

For more information on how to clean the cyclone filter, see Cleaning the cyclone filter [on page 68](#).

- 4 Put the following controls in the neutral position:
  - VNA switches
  - Levers for operating the connector plate and hydraulic assistance functions
- 5 Sit down on the operator's seat.
- 6 Put on the safety belt and click it in place.

## 6.2.2 Starting a machine with a Yanmar engine

Once you have completed all preparatory work, you can start the machine.

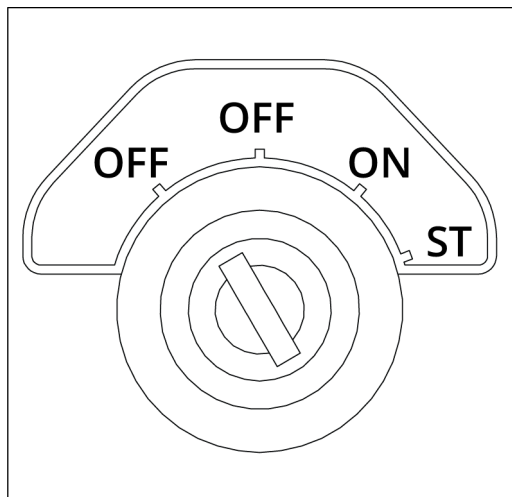

**Figure 12:** Yanmar engine ignition

- 1 Insert the key into the ignition.
- 2 Move the VNA switch to neutral and, if applicable, the manual throttle lever to the central position.
- 3 Turn the key to the **ON** position and wait for the glow plugs to finish preheating.
- 4 Check that the following lamps are on:
  - Battery voltage lamp
  - Oil pressure lamp




- 5 If you have a display:
  - The display starts up
  - The oil pressure LED indicator lights up
- 6 Turn the key to the **ST** position.
- 7 The key returns to the **ON** position.

## 6.3 Stopping

### 6.3.1 Stopping a machine with a Yanmar engine

Proceed as follows to stop the machine.

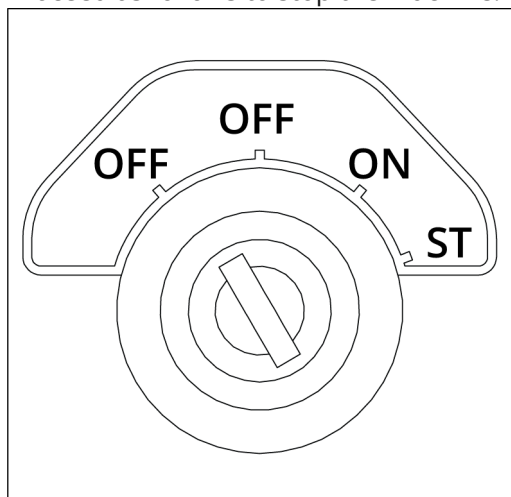

**Figure 13:** Yanmar engine ignition

- 1 Bring the machine to a halt on a level surface, if possible.
- 2 Do one of the following:
  - Lower the arm to the ground if no load is present.
  - Place the load against the ground.
- 3 Pull the parking brake upward as far as it will go.
- 4 Put the following levers in the neutral position:
  - VNA switch
  - Arm lever
  - Both levers for the hydraulic assistance functions
- 5 Move the key to the central **OFF** position.
- 6 Remove and store the key.



## 6.4 Driving

### 6.4.1 Operating principle - wheel propulsion


Hydraulic wheel motors propel the front wheels of the machine. There is one motor per wheel. The hydraulic pressure comes from a hydraulic pump which is in turn powered by a diesel engine.

The machine's accelerator pedal controls the speed of the diesel engine and, indirectly, the power and speed of the hydraulic system. The inching pedal can be used as a pedal to decrease or determine the speed. That way, the engine speed of the Knikmops is separate from the actual travel speed. This means you can adjust the speed of a specific attachment without changing the speed of the Knikmops itself.

You can use the inching pedal at the same time as the accelerator pedal or clutch pedal in order to drive slowly over uneven ground, for example, or to drive slowly to lift heavy loads. The inching pedal itself has no effect on the speed of the engine. You can, therefore, use the accelerator pedal (for force) and inching pedal (to limit the speed) at the same time. Depressing the inching pedal fully stops the machine.

### 6.4.2 Locking differential

The illustration provides more information on the location of the locking differential on the machine. A locking differential is a differential with the facility to limit the permissible difference in speed between two driven wheels of the machine.

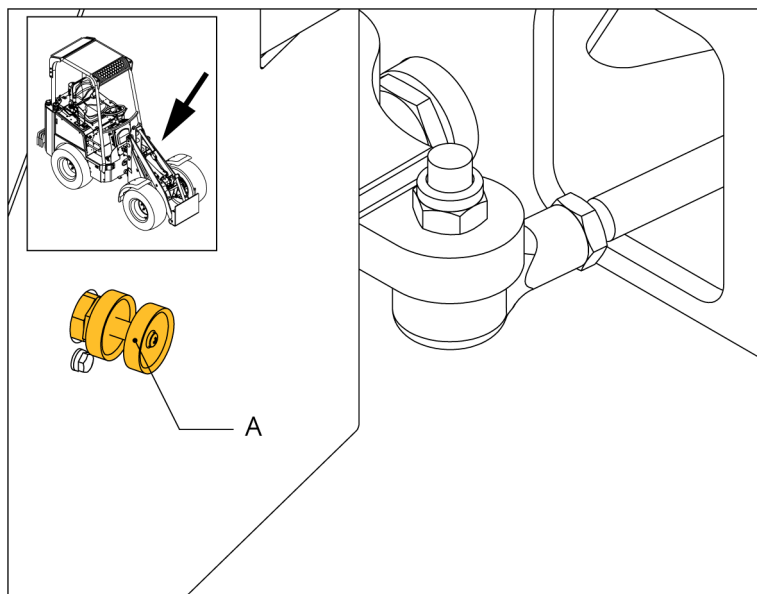

**Figure 14:** Locking differential

A Locking differential adjustment button



The locking differential adjustment button is used to activate the differential. This may be necessary when driving on wet, muddy, or uneven ground.

For more information, see [Switching the locking differential on/off manually on page 28](#).

**Caution!**

If used incorrectly, the tires will exhibit excess wear and the machine will become harder to steer.


#### 6.4.2.1 Switching the locking differential on/off manually

**Caution!**

If used incorrectly, the tires will exhibit excess wear and the machine will become harder to steer.



If your machine is equipped with an electronic locking differential control, press the button on the dashboard to switch the locking differential off and on.

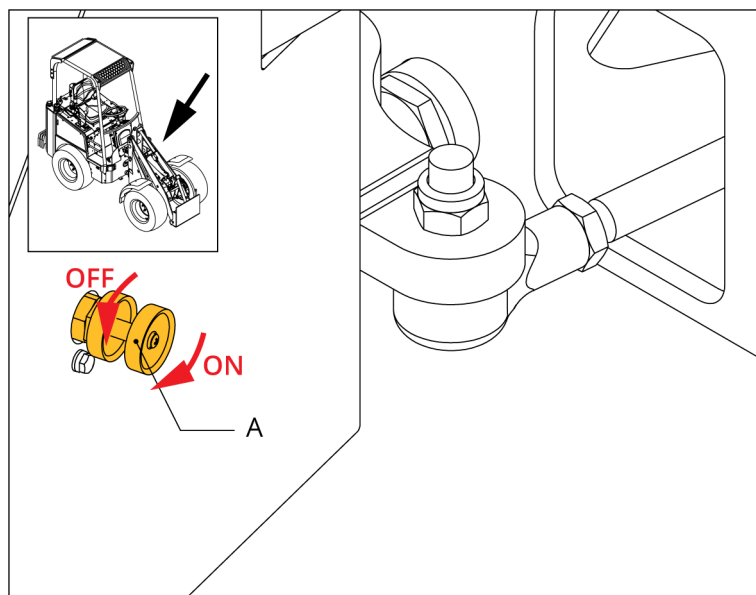

**Figure 15:** Locking differential

- 1 Turn the locking differential adjustment button (A) clockwise as far as it will go to switch the differential on.
- 2 Turn the locking differential adjustment button (A) counter-clockwise as far as it will go to switch the differential off.





### 6.4.3 Driving: standard version

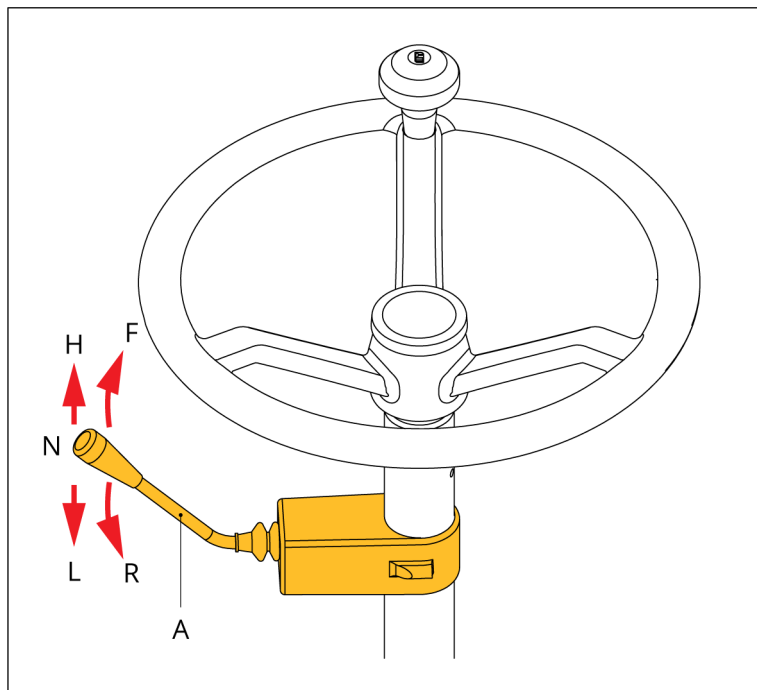


Figure 16: Driving: standard version



**Warning!**

If you notice that the machine is becoming unstable or skidding, stop the machine as quickly as possible with the attachment on the ground.

- 1 Press the button on the parking brake and push the parking brake down as far as it will go.
- 2 Choose a travel direction.
  - To move forward, move the VNA switch (A) into the forward position (F).
  - To move in reverse, move the VNA switch (A) into the reverse position (R).



When the VNA switch is in the neutral position (N), the machine will not move.

- 3 Depress the accelerator pedal.
- 4 Push the VNA switch upward (H) or downward (L) to change the machine's gear.




On type KM 250, you must do this at low revolutions.

- 5 Release the accelerator pedal again and depress the inching pedal to brake.



#### 6.4.4 Driving - TE version

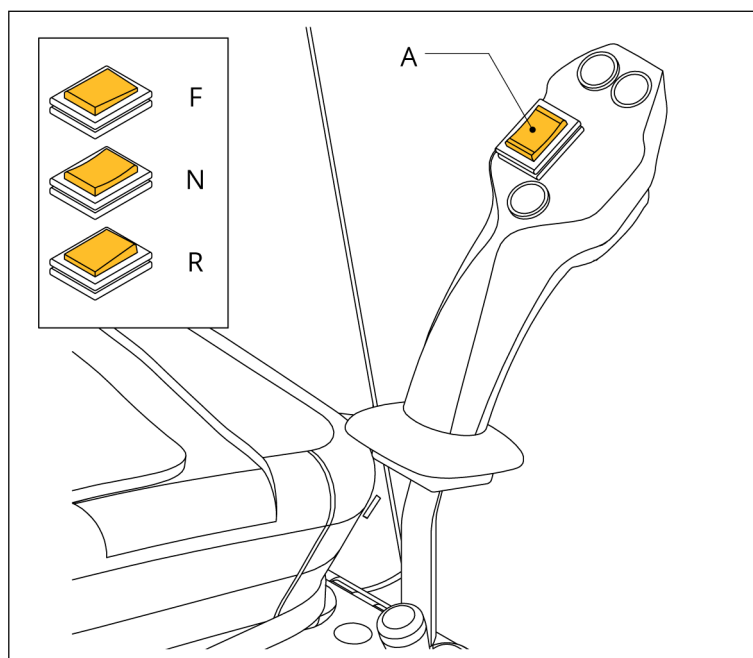

**Figure 17:** Driving - TE version



**Warning!**

If you notice that the machine is becoming unstable or skidding, stop the machine as quickly as possible with the attachment on the ground.



This version is also available as an option for other types. In that case, the standard VNA switch is omitted.

- 1 Press the button on the parking brake and push the parking brake down as far as it will go.
- 2 Choose a travel direction.
  - To move forward, move the driving direction button (A) into the forward position (F).
  - To move in reverse, move the driving direction button (A) into the reverse position (R).



When the driving direction button is in the neutral position (N), the machine will not move.

- 3 Depress the accelerator pedal.
- 4 Use the driving direction button to change machine's gear.




This function is standard on types KM125 and KM250 and optional on other types.



- 5 Release the accelerator pedal again and depress the inching pedal to brake.



### 6.4.5 Driving: eHC version

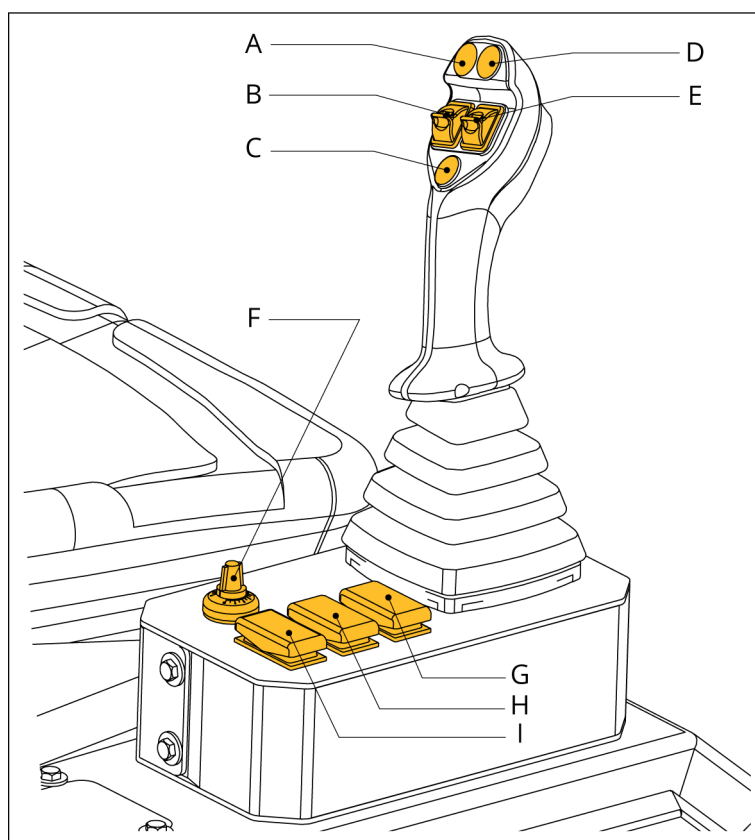

**Figure 18:** Driving: eHC version



**Warning!**

If you notice that the machine is becoming unstable or skidding, stop the machine as quickly as possible with the attachment on the ground.



This version is also available as an option for other types. In that case, the standard VNA switch is omitted.

- 1 Press the button on the parking brake and push the parking brake down as far as it will go.
- 2 Choose a travel direction.
  - To move forward, move the driving direction button (B) into the forward position.
  - To move in reverse, move the driving direction button (B) into the reverse position.



When the driving direction button (B) is in the neutral position, the machine will not move.

- 3 Depress the accelerator pedal.



- 4 Use the driving direction button to change machine's gear.



This function is standard on types KM125 and KM250 and optional on other types.


- 5 Release the accelerator pedal again and depress the inching pedal to brake.

## 6.5 Operating the arm

An arm is the lifting section of the machine. The arm can be used for activities such as excavation, laying stones, carrying pallets, and more, depending on the attachment that is coupled to the machine.



### 6.5.1 Operating the arm - standard version

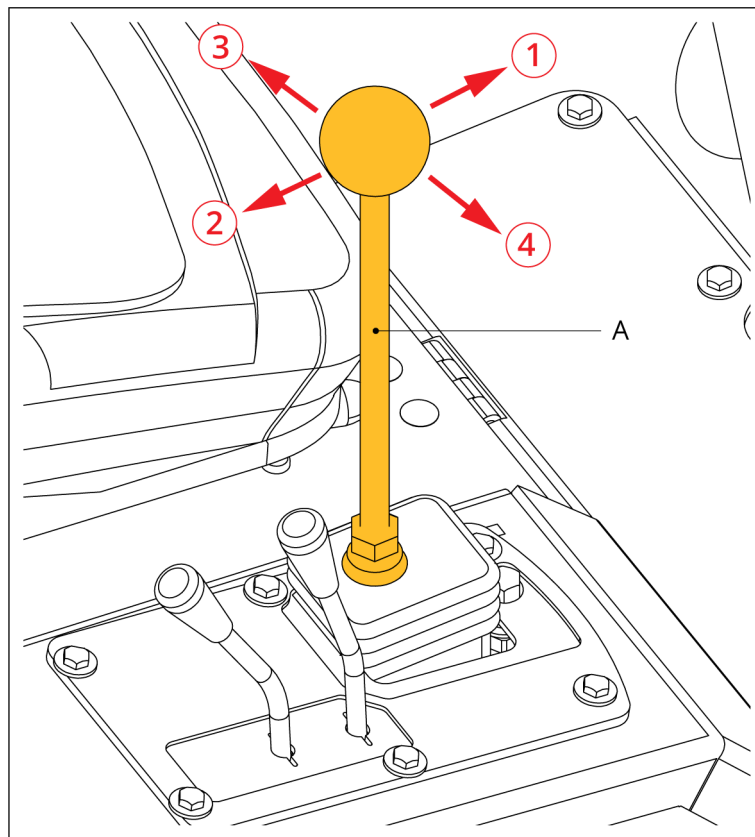

**Figure 19:** Operating the arm – standard version

- 1 Push the arm lever (A) forward (1) to lower the arm.
- 2 Pull the arm lever (A) backward (2) to raise the arm.
- 3 Pull the arm lever (A) to the left (3) to tilt the connector plate backward.
- 4 Push the arm lever (A) to the right (4) to tilt the connector plate forward.



### 6.5.2 Operating the arm - TE version

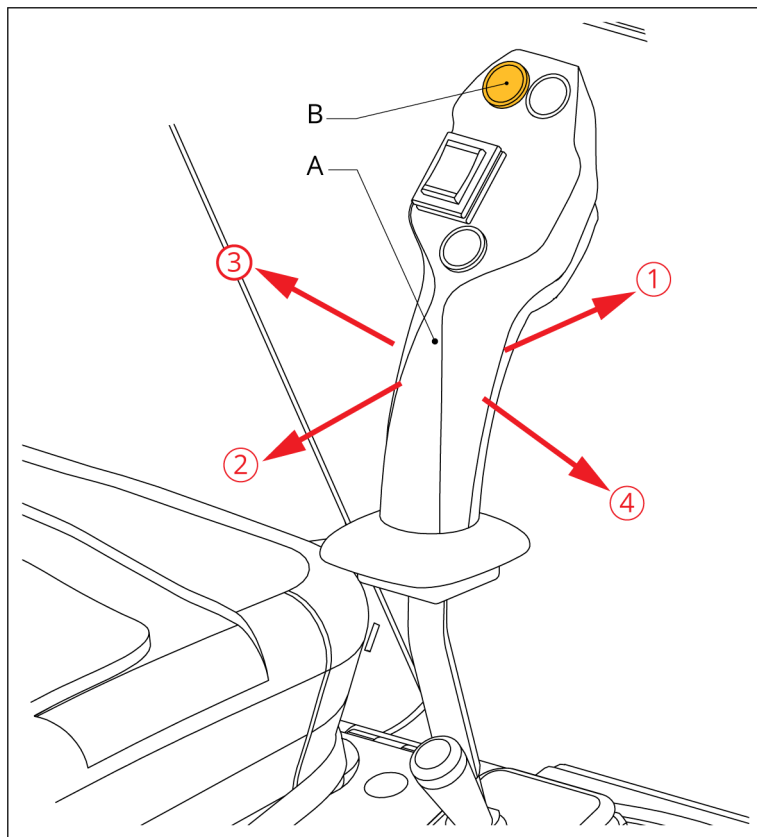


Figure 20: Operating the arm - TE version




This version is also available as an option for other types. In that case, the telescope button will be non-functional.

- 1 Push the arm lever (A) forward (1) to lower the arm.
- 2 Pull the arm lever (A) backward (2) to raise the arm.
- 3 Pull the arm lever (A) to the left (3) to tilt the connector plate backward.
- 4 Push the arm lever (A) to the right (4) to tilt the connector plate forward.
- 5 Press and hold the telescope button (B) and push the arm lever backward (2) to extend the arm.
- 6 Press and hold the telescope button (B) and push the arm lever forward (1) to retract the arm.

### 6.5.3 Operating the arm - eHC version



This version is also available as an option for other types. In that case, the telescope button will be non-functional.

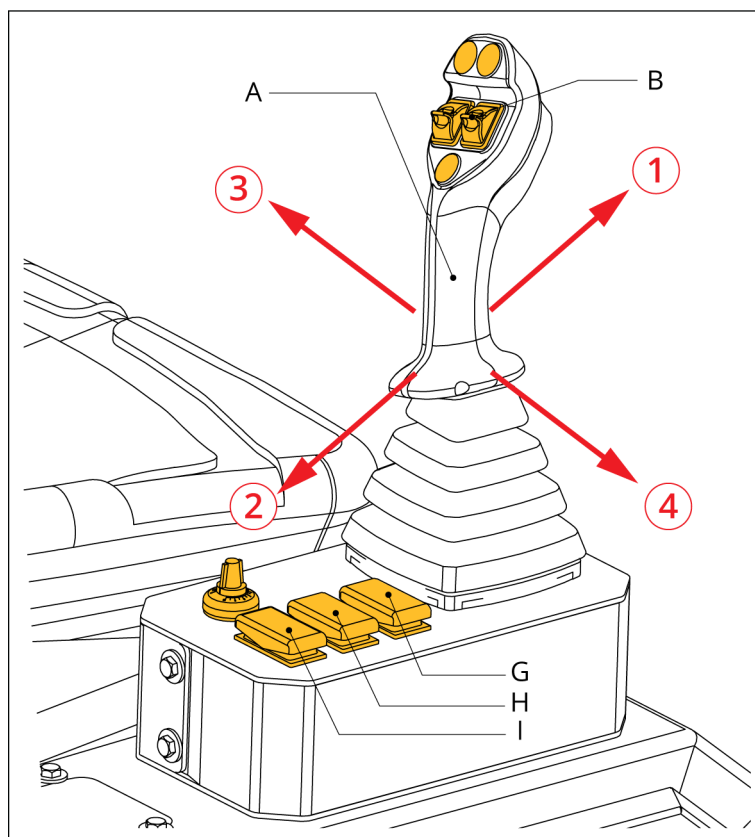

**Figure 21:** Operating the arm – eHC version

- 1 Push the arm lever (A) forward (1) to lower the arm.
- 2 Pull the arm lever (A) backward (2) to raise the arm.
- 3 Pull the arm lever (A) to the left (3) to tilt the connector plate backward.
- 4 Push the arm lever (A) to the right (4) to tilt the connector plate forward.
- 5 Move the telescope button (B) upward to extend the arm.
- 6 Move the telescope button (B) downward to retract the arm.

## 6.6 Coupling an attachment


### 6.6.1 Releasing the hydraulic pressure

- 1 Turn the key to the OFF position to switch the engine off.
- 2 Move the levers for the hydraulic assistance function to the left and right once.

### 6.6.2 Coupling with a manually operated locking pin

Start by releasing the hydraulic pressure. For more information, see Releasing the hydraulic pressure [on page 36](#). In addition, ensure that the hydraulic fast attachments are clean.



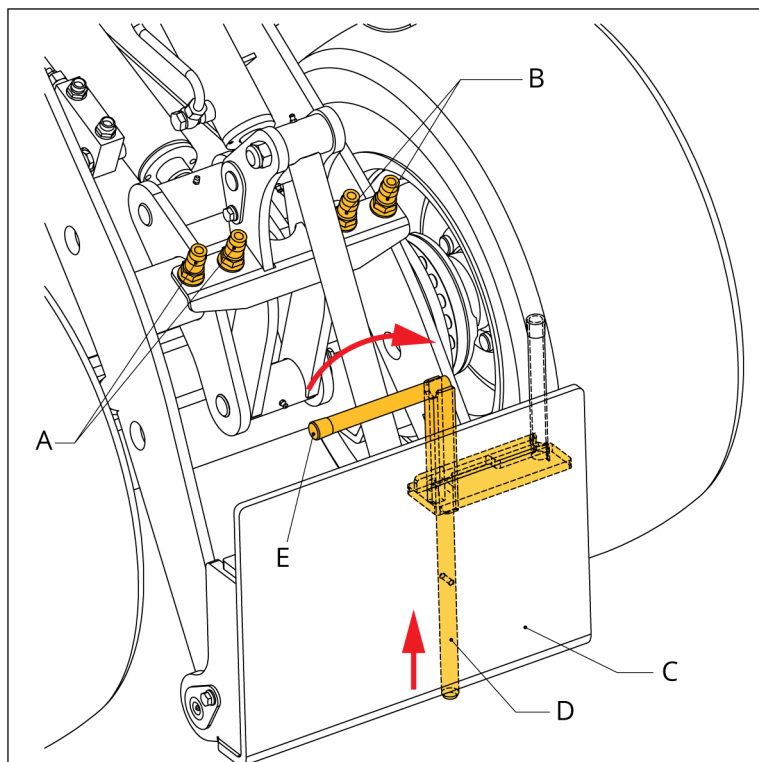

**Figure 22:** Coupling with a manually operated locking pin

- 1 Drive the machine up to the attachment that you wish to couple.
- 2 Lower the arm as low to the ground as possible.
- 3 Tilt the connector plate (C) forward.
- 4 Drive the machine forward until the connector plate makes contact with the attachment.
- 5 Raise the connector plate until the attachment is fully against the connector plate.



You may need to tilt the connector plate backward slightly in this step.

- 6 Move the locking pin lever (E) to the lock position.
- 7 Check that the locking pin (D) has been ejected and that the locking pin has secured the attachment.
- 8 If necessary, connect the hydraulic hoses for the attachment to the connections for the hydraulic assistance functions (A) and (B).



**Warning!**


Ensure that the assistance functions are properly connected.



A hydraulically operated locking pin may also be installed on a connector plate with manually operated locking pin.

### 6.6.3 Coupling with a hydraulically operated locking pin

Start by releasing the hydraulic pressure. For more information, see Releasing the hydraulic pressure [on page 36](#). In addition, ensure that the hydraulic fast attachments are clean.

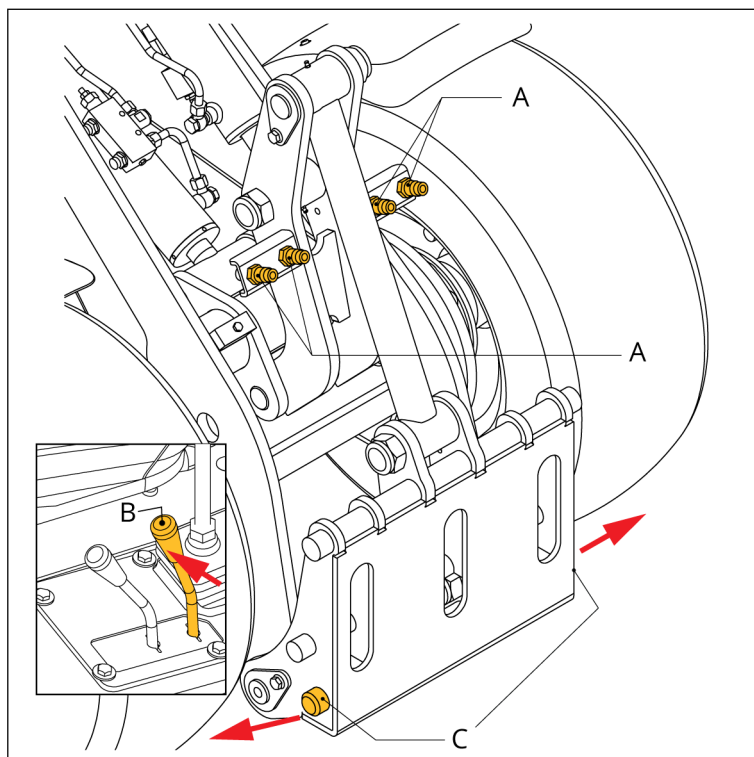

**Figure 23:** Coupling with a hydraulically operated locking pin

- 1 Drive the machine up to the attachment that you wish to couple.
- 2 Lower the arm as low to the ground as possible.
- 3 Tilt the connector plate (C) forward.
- 4 Drive the machine forward until the connector plate makes contact with the attachment.
- 5 Raise the connector plate until the attachment is fully against the connector plate.



You may need to tilt the connector plate backward slightly in this step.

- 6 Move the lever for the hydraulic assistance function (B) toward the machine until the locking pins (C) have extended.



- 7 Choose one of the following options based on your dashboard type:
  - Press and hold the corresponding button on dashboard type 1 so that the locking pins temporarily retract.

For more information, see button B in Dashboard type 1 – standard version [on page 14](#).

- Press and hold the corresponding button on dashboard type 2 or 3 so that the locking pins temporarily retract.

For more information, see button C in Dashboard type 2 [on page 15](#) and Dashboard type 3 [on page 16](#).

- 8 Once the attachment has slid over the connector plate, release the button to allow the locking pins to extend.
- 9 Check that both locking pins have been ejected and have secured the attachment.
- 10 If necessary, connect the hydraulic hoses for the attachment to the connections for the hydraulic assistance functions (A).


## 6.7 Uncoupling an attachment

### 6.7.1 Uncoupling with a manually operated locking pin



**Caution!**

If the attachment is connected to the hydraulic fast attachments, disconnect the assistance function connections first before uncoupling the attachment from the machine.

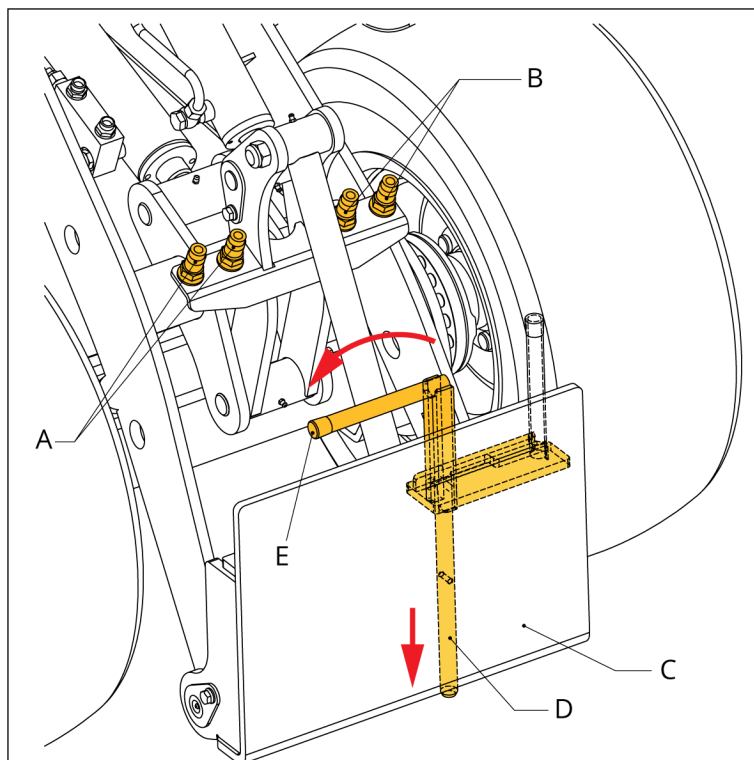

**Figure 24:** Uncoupling with a manually operated locking pin


- 1 Place the attachment on the ground.
- 2 If hydraulic assistance functions are connected, proceed as follows:
  - Switch the machine off completely.
  - Move the lever to operate the hydraulic assistance function that you wish to release back and forth to allow the pressure to escape from the hydraulic assistance functions.
  - Release the hydraulic hoses for the attachment from the connections for the hydraulic assistance functions (A) and (B).
  - Fit the dust covers to the connections for the assistance functions.
- 3 Move the locking pin lever (E) to the unlock position.  
The locking pin (D) slides inward and unlocks the attachment.
- 4 Carefully tilt the connector plate (C) forward until the attachment is released from the connector plate.

### 6.7.2 Uncoupling with a hydraulically operated locking pin



**Caution!**

If the attachment is connected to the hydraulic fast attachments, disconnect the assistance function connections first before uncoupling the attachment from the machine.

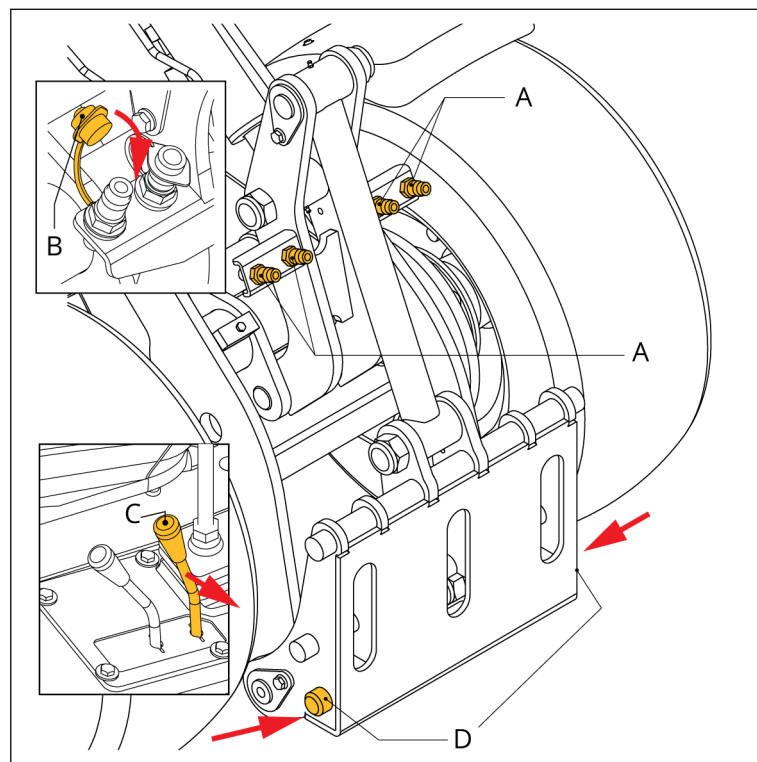

**Figure 25:** Uncoupling with a hydraulically operated locking pin

- 1 Place the attachment on the ground.
- 2 If hydraulic assistance functions are connected, proceed as follows:
  - Switch the machine off completely.
  - Move the lever to operate the hydraulic assistance function (C) that you wish to release back and forth to allow the pressure to escape from the hydraulic assistance functions.
  - Release the hydraulic hoses for the attachment from the connections for the hydraulic assistance functions (A).
  - Fit the dust covers to the connections for the assistance functions.
- 3 Push the lever for the hydraulic assistance function of the machine forward and at the same time, press on the Shurlock button until the locking pins (D) have retracted.
- 4 Release the lever for the hydraulic assistance function, and the Shurlock button.
- 5 Carefully tilt the connector plate forward until the attachment is released from the connector plate.



## 6.8 Checking the fuel tank

If you want to know how much fuel remains in the tank, there are two options.

### 6.8.1 Checking the fuel tank with dashboard type 1

For more information on the dashboard type that you have, see Dashboard [on page 14](#).

- 1 Turn the ignition key to the OFF position to switch the engine off.
- 2 Allow the engine to cool down sufficiently.
- 3 Remove the tank cap.
- 4 Check whether there is still sufficient fuel in the fuel tank using the level rod provided.



The level rod can be found at the front of the tank.

- 5 Fill the fuel tank if the fuel is nearly depleted.  
For more information, see Filling the fuel tank [on page 43](#).

### 6.8.2 Checking the fuel tank with dashboard type 2

For more information on the dashboard type that you have, see Dashboard [on page 14](#).

- 1 Check the fuel indicator on your dashboard.
- 2 Fill the fuel tank if the fuel is nearly depleted.  
For more information, see Filling the fuel tank [on page 43](#).






### 6.8.3 Checking the fuel tank with dashboard type 3


For more information on the dashboard type that you have, see Dashboard [on page 14](#).

- 1 Check the display on your dashboard.
- 2 Fill the fuel tank if the fuel is nearly depleted.  
For more information, see Filling the fuel tank [on page 43](#).



## 6.9 Filling the fuel tank

	<b>Warning!</b> The fuel is flammable and may be hazardous. Exercise caution when handling fuel and fill in a well-ventilated area away from naked flames and sparks.
	<b>Warning!</b> Do not smoke while filling.
	<b>Caution!</b> The fuel tank must never be allowed to run dry. Should this happen, air may enter the fuel system. In that case, a recognized maintenance engineer must remove the air from the fuel system.
	<b>Warning!</b> Only use the correct fuel and do not mix with petrol or alcohol. Doing so could damage the engine or cause an explosion.
	For further information on the correct type of fuel, see Consumables on <a href="#">page 94</a> .

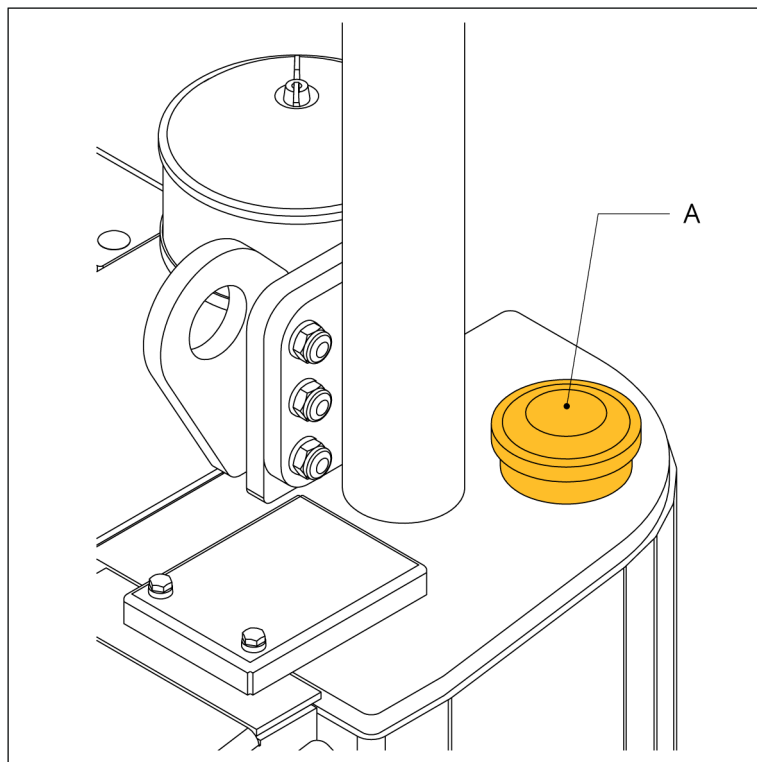

**Figure 26:** Fuel tank

- 1 Turn the ignition key to the OFF position to switch the engine off.
- 2 Allow the engine to cool down sufficiently.



- 3 Remove the tank cap (A).
- 4 Fill the fuel tank and refit the tank cap.



**Caution!**

Do not allow fuel to drip onto the machine. In the event of a spillage, clean it immediately.





## 6.10 Fitting counterweights

A minimum of two people are required to lift the counterweights. Each counterweight has a weight of more than 30 kg.




Fit only genuine parts developed for Knikmops to the rear of the machine.



**Warning!**

People are not allowed to stand at the rear of the machine to act as counterweights.

### 6.10.1 Installing the first weight

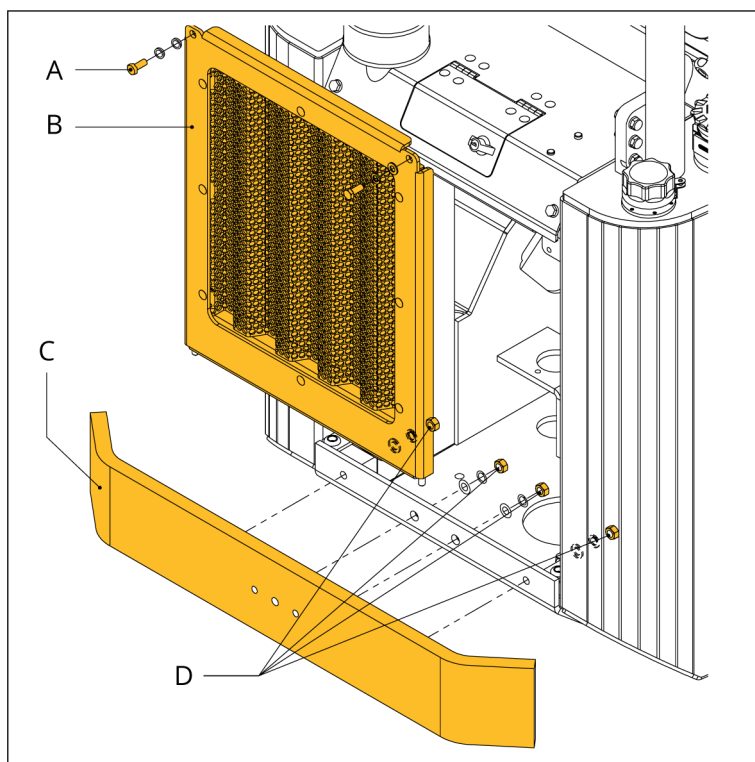


**Figure 27:** Installing the first weight

- 1 Remove the bolts (A).
- 2 Remove the panel (B).
- 3 Secure the counterweight (C) with the washers and nuts (D).
- 4 Secure the panel (B) with the bolts (A).



### 6.10.2 Installing the second and third weight

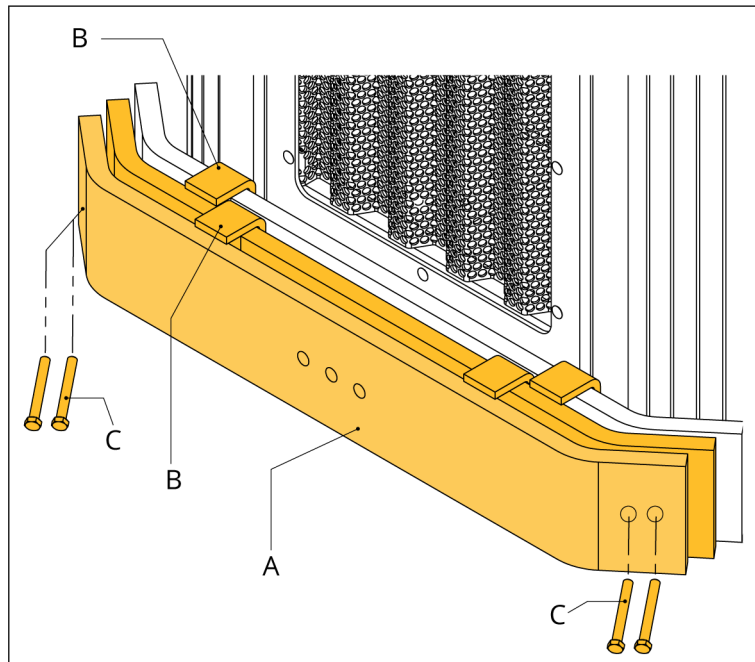

**Figure 28:** Installing the second and third weight


- 1 Suspend the counterweight (A) from the first counterweight using the hook (B).
- 2 Fit the counterweight with the locking bolts (C).



## 6.11 Installing and removing the articulation lock

The articulation lock prevents the machine from articulating in the event of a problem with the steering system.

### 6.11.1 Fitting the articulation lock

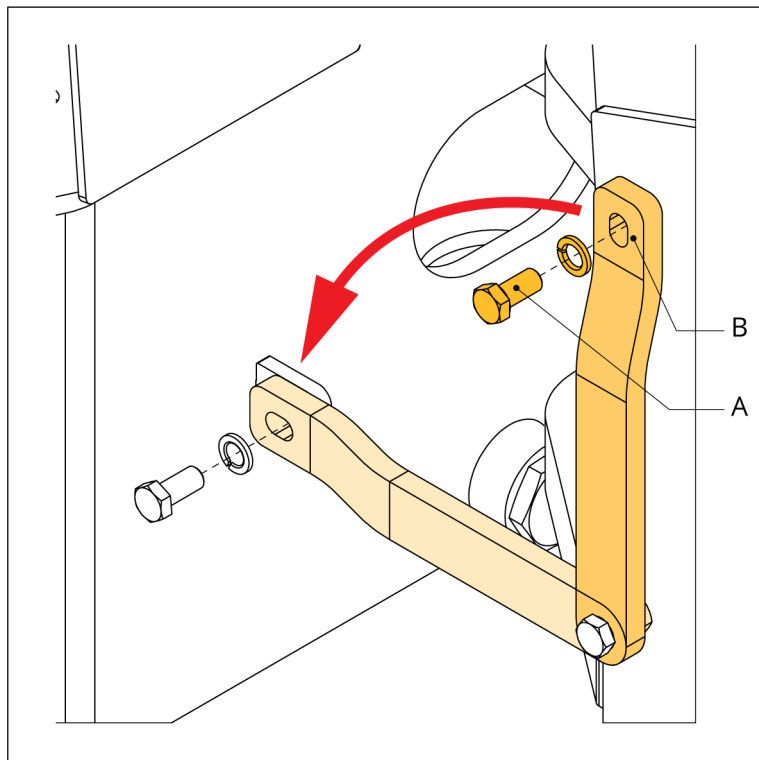


**Figure 29:** Fitting the articulation lock

- 1 Turn the ignition key to the OFF position to switch the engine off.
- 2 Remove the bolt (A).
- 3 Turn the articulation lock (B) toward the lug at the rear of the machine.
- 4 Use the bolt (A) to secure the articulation lock to the lug.



### 6.11.2 Removing the articulation lock

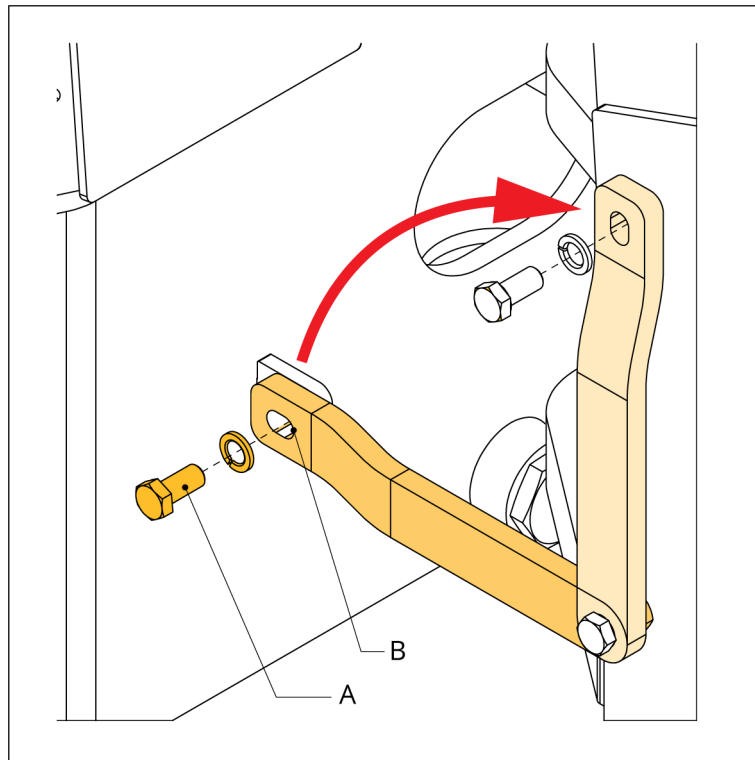

**Figure 30:** Removing the articulation lock

- 1 Remove the bolt (A).
- 2 Turn the articulation lock (B) toward the front of the machine.
- 3 Use the bolt (A) to refit the articulation lock to the machine.




## 6.12 Preheating



The machine may be fitted with an optional preheating element.



The figure in this section shows the cable connection for the KM 100.

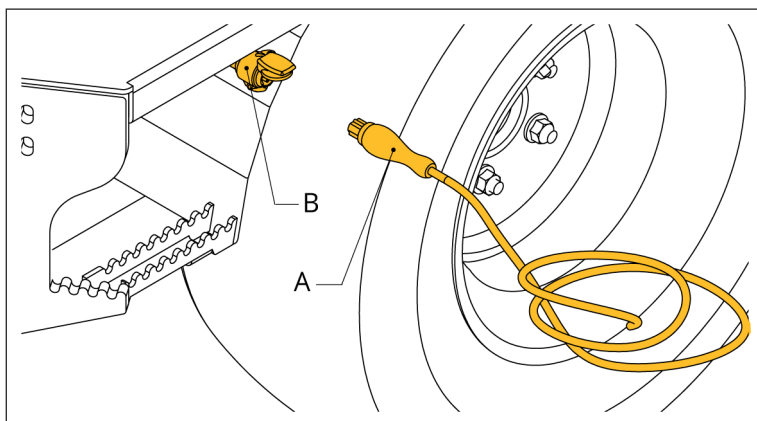

**Figure 31:** Connecting the cable to allow the machine to be preheated

- 1 Take the supplied cable (A) and connect the machine to the socket and the connection point (B) on the machine.




Start preheating at least 1.5 hours before you wish to start the machine. In the event of very low temperatures (below  $-10^{\circ}\text{C}/14^{\circ}\text{F}$ ), a longer preheating time may be required.



## 6.13 Operating the display

This section contains more information on how to operate the display.


### 6.13.1 Adjusting the language settings on the display

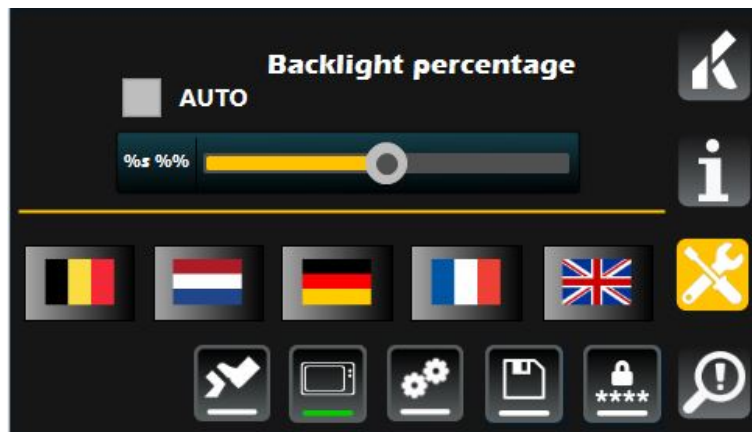

**Figure 32:** Language settings on display

- 1 Go to the service menu (yellow) on your display and press the screen symbol (underlined in green).
- 2 Select your language by pressing the flag for the country/language in question.

### 6.13.2 Adjusting the screen brightness

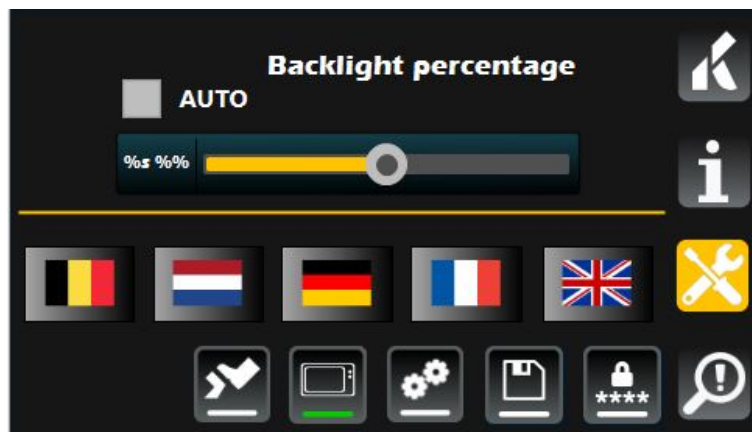

**Figure 33:** Brightness settings on display

- 1 Go to the service menu (yellow) on your display and press the screen symbol (underlined in green).
- 2 Do one of the following:
  - Move the slider to adjust the screen brightness.
  - Press AUTO for the brightness to adjust automatically.



### 6.13.3 Checking soot filter information

This section explains where to find the soot filter information. For more information on soil levels and soot filter regeneration, see Soot filter on page 83.

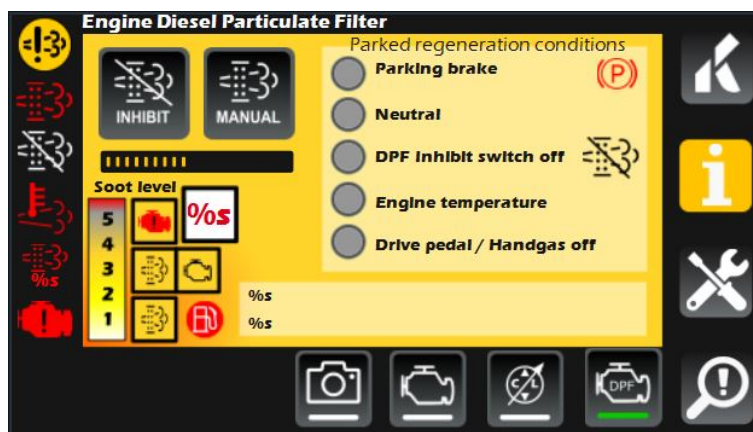


Figure 34: Soot filter information on the display

- 1 Go to the information menu (yellow) and press the DPF symbol (underlined in green).

### 6.13.4 Checking engine and control information

This section explains where to find information about the engine and related matters while driving the machine.

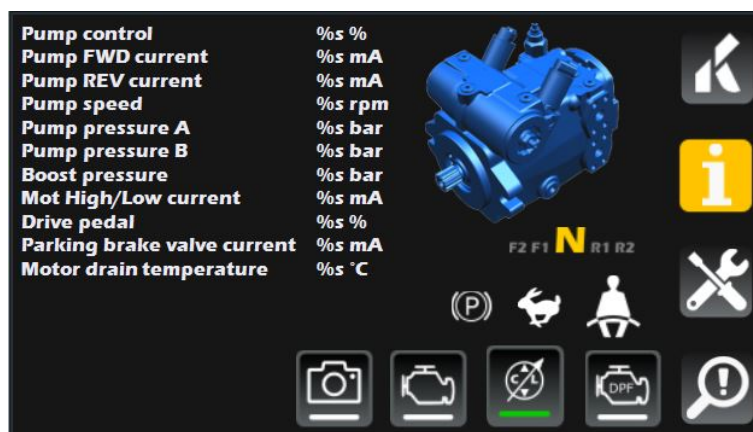


Figure 35: Engine and control information on the display


- 1 Go to the information menu (yellow) and press the control symbol.

### 6.13.5 Checking error messages

This section provides information on what to do if an error message appears and where you can find a list of error messages.



If you see an error message, always contact your dealer and specify the error code that you see in the error message menu. This is not the code on the main screen of the display. Endeavor to describe the error as accurately as possible.

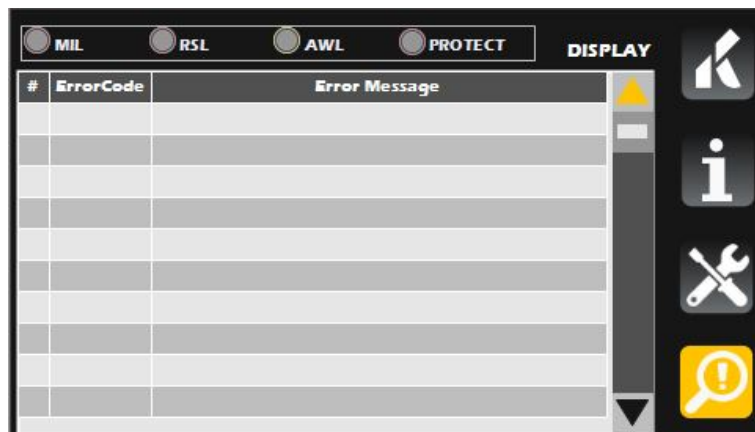

**Figure 36:** List of error messages on the display


- 1 Click on **OK** if an error message appears on your display.
- 2 Go to the error message menu (yellow) for a detailed description of the error message.  
You will see a submenu of three options.
- 3 Choose the error messages that you would like to see:
  - Display
  - Engine
  - Rexroth ECU





### 6.13.6 Checking other symbols

This section explains where to check the warning symbols.

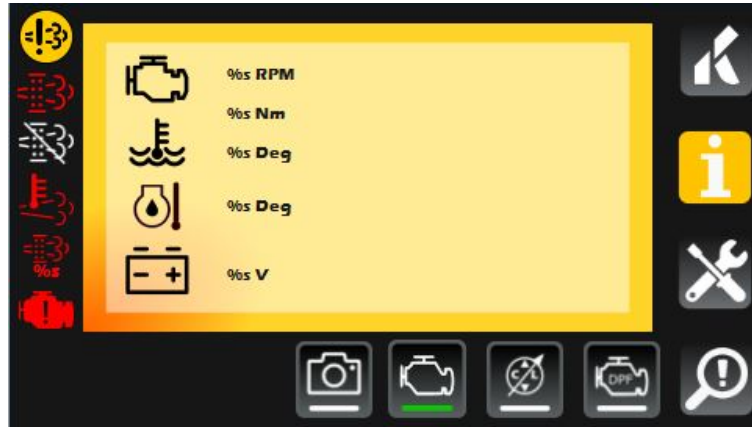


**Figure 37:** Overview other symbols

- 1 Go to the information menu (yellow) and press the engine symbol (underlined in green).
- 2 You can find information about the following:
  - Revolutions
  - Clutch
  - Coolant
  - Engine oil temperature
  - Battery voltage



## 7. Attachment – bucket

### 7.1 Overview

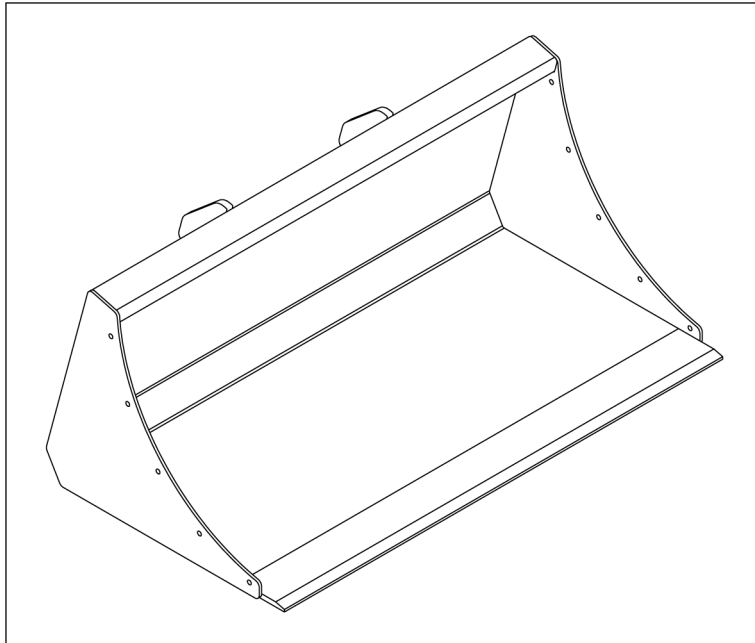

**Figure 38:** Example bucket

### 7.2 Commissioning

Before coupling the attachment to the machine, a number of items must be checked:

- The machine has sufficient capacity to be equipped with the attachment in all potential situations, e.g., when pivoting or rotating.
- The connection points on the machine are consistent with the connection points on the attachment.
- The requisite maintenance has been carried out.

For more information, see Maintaining the buckets and pallet fork [on page 89](#).

### 7.3 Coupling

This section covers attachment coupling.

For more information, see Coupling an attachment [on page 36](#).



## 7.4 Using

Pay close attention to the bucket while handling it. A bucket that is hanging too low may permanently damage the ground and the bucket.

Driving with the bucket raised high poses a risk of tipping.



**Caution!**

You must warn persons nearby that they must stay away from the area of the load.

Please familiarize yourself with the safety instructions before using the attachment. For more information, see Safety instructions [on page 5](#).

## 7.5 Driving

When driving a machine with a bucket, pay attention to the following:

- The bucket must not be suspended too far above the ground. Bulky goods may fall from the bucket and impact the operator if the bucket is too far from the ground, resulting in serious injury.
- The bucket must not be suspended too close to the ground to prevent the risk of damage to the bucket due to contact with the ground.

## 7.6 Uncoupling

- 1 Uncouple the attachment from the machine.

For more information, see Uncoupling an attachment [on page 39](#).


- 2 Place the attachment in a secure location.

For more information, see Storage [on page 60](#).



## 8. Attachment – pallet fork

### 8.1 Overview

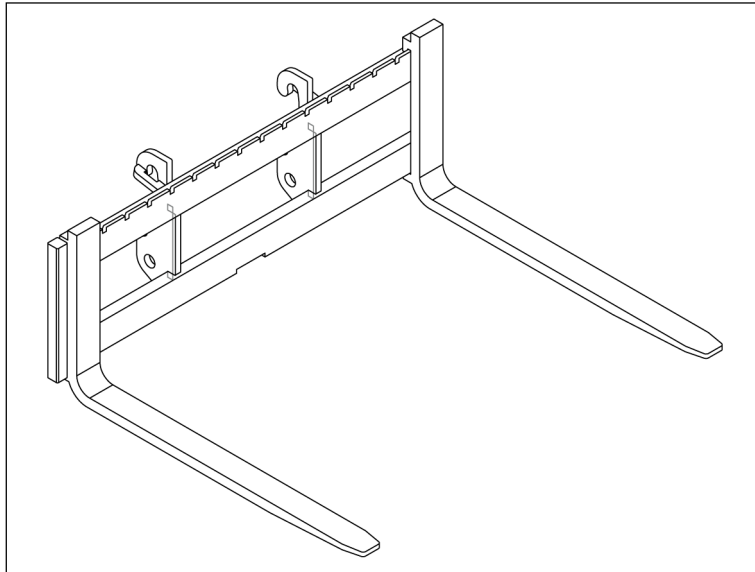

**Figure 39:** Example pallet fork

### 8.2 Commissioning

Before coupling the pallet fork to the machine, a number of items must be checked:

- The machine has sufficient capacity to be equipped with the attachment in all potential situations, e.g., when pivoting or rotating.
- The connection points on the machine are consistent with the connection points on the attachment.
- The requisite maintenance has been carried out.

For more information, see Maintaining the buckets and pallet fork [on page 89](#).

### 8.3 Coupling

This section covers attachment coupling.

For more information, see Coupling an attachment [on page 36](#).




## 8.4 Using

Please familiarize yourself with the safety instructions before using the attachment.

For more information, see Safety instructions [on page 5](#).

## 8.5 Driving

- 1 Set the loading buckets to the correct width for the pallet you wish to transport:
  - a Unlock the pallet fork by rotating the latch (see drawing) 90° upward.

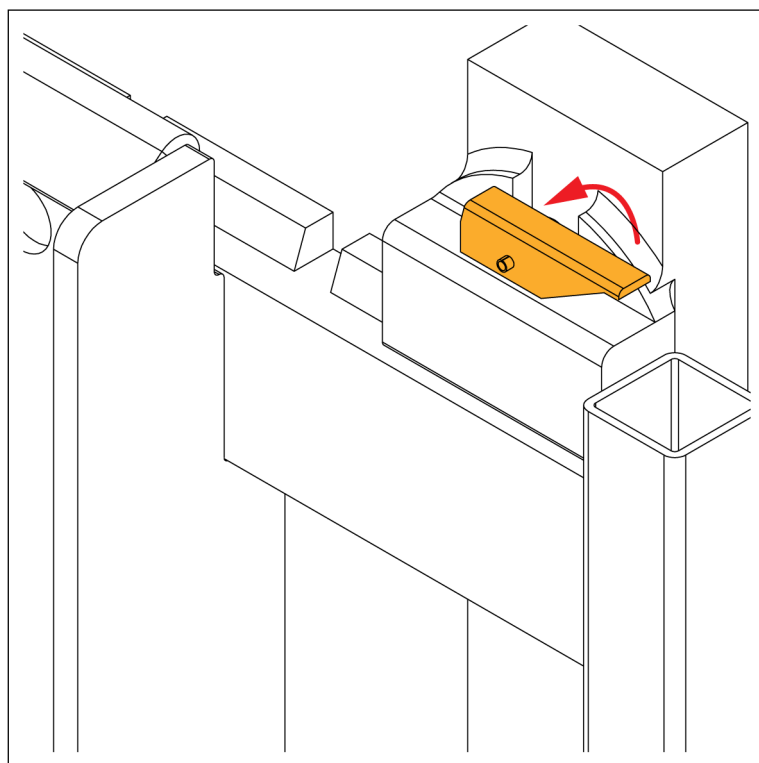

**Figure 40:** Adjusting the width of a pallet fork

- b Move the pallet forks to the desired width.
      - c Lock the pallet fork by rotating the latch 90° downward.
    - 2 Lower the loading buckets to around three centimeters above the ground.  
For more information, see Operating the arm [on page 33](#).
    - 3 Carefully drive forward with the machine until the loading buckets are in the pallet.
    - 4 Raise the pallet fork.  
For more information, see Operating the arm [on page 33](#).
- Result: you can now drive with the pallet on the pallet fork.



**Caution!**

Ensure that the load is as close to the center of the pallets as possible so that you can raise the load as centrally as possible. This is better for the stability and load on the Knikmops.



**Warning!**

Driving with the load raised high poses a risk of tipping.

## 8.6 Uncoupling

- 1 Uncouple the attachment from the machine.  
For more information, see Uncoupling an attachment [on page 39](#).
- 2 Place the attachment in a secure location.  
For more information, see Storage [on page 60](#).



## 9. Transport and storage

### 9.1 Transportation - safety instructions

- Do not tow the machine.
- Do not expose the machine to external shocks, vibrations, or impact.
- Protect the machine from external influences, such as rain, splashing (salt) water, dirt, and dust.
- Use a mode of transportation, such as a trailer, that is capable of bearing the weight of the machine and the attachments. The weight of the complete attachment is stated on the type plate.
- If you move the attachment, prevent the attachment from tipping or falling. Use appropriate lifting equipment for this.
- Check that the mode of transportation is dry before loading the machine onto it.

### 9.2 Driving onto the mode of transportation



**Warning!**

Ensure that the ramps are clean and dry.

- 1 Drive the machine onto the mode of transportation to which you will secure the machine for transportation in reverse.
- 2 Place the arm as close to the floor of the mode of transportation as possible.
- 3 Stop the machine.
- 4 Pull the parking brake upward.
- 5 Ensure that the machine is stable.
- 6 Place chocks around the front and rear wheels.
- 7 Lock the machine with tension straps that meet the legal requirements, and apply the handbrake.

### 9.3 Lifting the machine and attachments

Before you begin: Ensure that the machine is straight and not articulated.



**Caution!**

You must use proper hoisting equipment to move the machine or attachment. Beware of the risk of the machine and attachments tilting or falling.

- 1 Switch the machine off completely.



- 2 Always fit the articulation lock if there is a problem with the steering system.  
For more information, see Fitting the articulation lock [on page 47](#).

- 3 Attach the lifting equipment to the lifting eyelets.

**Caution!**

The lifting equipment must not make contact with the hydraulic control.

**Caution!**

The lifting chains or straps must all be of the same length so that the machine remains horizontal during lifting.

- 4 Raise the machine.
- 5 Place the machine on a mode of transportation or in a storage location.
- 6 Remove the lifting equipment.
- 7 Remove the articulation lock.  
For more information, see Removing the articulation lock [on page 48](#).

## 9.4 Storage

If the machine is temporarily out of use, park the machine in a location that is protected from the weather.

The "bucket" attachment must always be stored horizontally and stable. Ensure that the attachments cannot tip or fall over. Support the attachments, if necessary.





## 10. Maintaining the machine

### 10.1 Daily maintenance

The operator of the machine or someone with an equivalent level of training may carry out daily maintenance.



**Warning!**

Do not touch hot parts of the machine, such as the engine, exhaust, and hydraulic system.



If you notice that something is wrong with a component, look for a solution promptly. Where specified, the operator may resolve the problem. Contact a recognized maintenance engineer for a resolution to other problems.

- 1 Lubricate the hinge points of the machine.  
For more information, see Lubricating the hinge points [on page 71](#).
- 2 Check that all requirements from the maintenance table have been satisfied with the machine switched off.  
For more information, see Maintenance table – maintenance of machine when switched off [on page 62](#).
- 3 Check that all requirements from the maintenance table have been satisfied with the machine switched on.  
For more information, see Maintenance table – maintenance of machine when switched on [on page 63](#).
- 4 Check that all requirements from the maintenance table have been satisfied in terms of periodic maintenance.  
For more information, see Periodic maintenance (accredited maintenance engineer) [on page 63](#).



## 10.2 Maintenance table - maintenance of machine when switched off

Machine part	Procedure	Rejection criterion	Action on rejection
Tires	Visually inspect for damage or sharp objects on in the tires.	Damage or sharp objects on in the tires.	Contact an accredited maintenance engineer.
	Check the tire pressure.	Tire pressure is outside of the specification on the tires.	Adjust the tire pressure to 1.5 bar.
Wiring	Visually inspect for damage to the wires.	Damage to the wires.	Contact an accredited maintenance engineer.
Fuel filter	Check for water in the filter.	There is water in the filter.	Contact an accredited maintenance engineer.
Fuel lines.	Check for cracks and leaks.	There are cracks in the lines or fuel is leaking.	Contact an accredited maintenance engineer.
Hydraulic fluid	Check the level.	The hydraulic fluid level is not OK.	Adjust the hydraulic fluid level.
	For more information, see Checking/topping up the hydraulic fluid <a href="#">on page 77</a> .		For more information, see Checking/topping up the hydraulic fluid <a href="#">on page 77</a> .
Coolant	Check the level.	The coolant level is not OK.	Adjust the coolant level.
	For more information, see Checking/topping up the coolant <a href="#">on page 76</a> .		For more information, see Checking/topping up the coolant <a href="#">on page 76</a> .
Engine cooling	Check for leaks.	There is a leak in the system.	See the operating instructions for the diesel engine.
Engine oil	Check the level.	The engine oil level is not OK.	Adjust the engine oil level.
	For more information, see Checking/topping up the engine oil <a href="#">on page 74</a> .		For more information, see Checking/topping up the engine oil <a href="#">on page 74</a> .
Parking brake	Check operation.	The parking brake does not work properly.	Contact an accredited maintenance engineer.
	For more information, see Checking the parking brake <a href="#">on page 70</a> .		
Pins on the connector plate	Lubricate the pins.	-	For more information, see Lubricating via the lubrication nipples <a href="#">on page 73</a> .
Cyclone filter (if present)	Check for soiling. For more information, see Cleaning the cyclone filter <a href="#">on page 68</a> .	The cyclone filter is soiled on the inside.	Replace the cyclone filter.



Machine part	Procedure	Rejection criterion	Action on rejection
Fan belt	Check the tension.  For more information, see Checking the fan belt tension <a href="#">on page 70</a> .	The belt moves more than 9 mm or less than 7 mm.	Contact an accredited maintenance engineer.
Soot filter	Check on the dashboard for the zone in which the soot filter is located.	The soot filter is in zone 4 and is saturated.	Contact a Knikmops service point. The soot filter should be exchanged at Yanmar for a clean version.
Safety stickers	Check legibility.	The sticker is illegible.	Replace the sticker(s).
Complete machine	Visually inspect for damage.	Visible damage.	Contact an accredited maintenance engineer.
	Visually inspect for fluid leaks.	Leaks of hydraulic fluid, fuel, coolant, or battery acid.	Contact an accredited maintenance engineer.
Water separator	Check the water separator.	The filter in the water separator is saturated.	Replace the water separator.

### 10.3 Maintenance table - maintenance of machine when switched on

Machine part	Procedure	Rejection criterion	Action on rejection
Controls	Test all controls – levers, steering wheel, and pedals.	Not all controls work correctly.	Contact an accredited maintenance engineer.
Arm (TE version)	Extend and retract the arm.	The arm does not slide in and out properly.	Contact an accredited maintenance engineer.
Lamps on the dashboard	All lamps on the dashboard must light up briefly, with the exception of the engine temperature lamp, when the machine is started.	Not all lamps on the dashboard come on or go off again.	Contact an accredited maintenance engineer.
Lighting (if present)	Switch the lighting on.	The lighting does not switch on.	Contact an accredited maintenance engineer.
Interchangeable equipment	Test the attachment's functioning.	The attachment does not work correctly.	Contact an accredited maintenance engineer.

### 10.4 Periodic maintenance (accredited maintenance engineer)

An accredited maintenance engineer must carry out periodic maintenance on the machine. The table below lists the frequency at which certain maintenance activities must be carried out.



**Caution!**  
Lubricate the machine after maintenance

Frequency	Activity	Procedure
First 50 hours	Replace the engine oil.	See the operating instructions for the diesel engine.
	Replace the engine oil filter.	See the operating instructions for the diesel engine.
	Drain the water separator.	See the operating instructions for the diesel engine.
	Check and, if necessary, clean the air filter.	Open the housing and check the air filter for soiling. If the air filter is soiled, it must be cleaned.
Every 150 hours	Lubricate the other lubrication points.	For more information, see Location of other lubrication points <a href="#">on page 73</a> .
	Check the fuel tank for soiling, rust formation, and damage (inside and outside).	-
	Check the radiator lines and clamps.	See the operating instructions for the diesel engine.
	Check the air inlet.	See the operating instructions for the diesel engine.
Every 250 hours	Replace the engine oil	See the operating instructions for the diesel engine.
	Replace the engine oil filter	See the operating instructions for the diesel engine.
	Replace the air filter.	Open the housing and check the air filter for soiling. If the air filter is soiled, it must be replaced. For more information, see Replacing the air filter <a href="#">on page 79</a> .
Every 450 hours	Clean the inside of the radiator.	See the operating instructions for the diesel engine.
Every 500 hours	Replace the fuel filter.	See the operating instructions for the diesel engine.
	Clean the water separator.	See the operating instructions for the diesel engine.
	Replace the air filter.	For more information, see Replacing the air filter <a href="#">on page 79</a> .
First 600 hours	Replace the hydraulic fluid.	For more information, see Replacing hydraulic fluid filters <a href="#">on page 80</a> .
Every 600 hours	Replace the hydraulic fluid filter.	For more information, see Replacing hydraulic fluid filters <a href="#">on page 80</a> .
Every 750 hours	Check the valve play.	See the operating instructions for the diesel engine.



Frequency	Activity	Procedure
Every 1,200 hours	Replace the hydraulic fluid	For more information, see <a href="#">Replacing hydraulic fluid filters on page 80.</a>
	Replace the fine filter.	For more information, see <a href="#">Replacing the air and fine filter on page 80.</a>
	Replace the return filter.	For more information, see <a href="#">Replacing the return filter on page 82.</a>
Every 1,500 hours	Check the injector pressure.	See the operating instructions for the diesel engine.
Every 3,000 hours	Check the turbo (if present).	See the operating instructions for the diesel engine.
	Check the injection pump.	See the operating instructions for the diesel engine.
	Check the injection timer.	See the operating instructions for the diesel engine.
Every 3,500 hours	Check the injection pressure.	See the operating instructions for the diesel engine.
Every 6,000 hours	Replace the soot filter.	Contact an accredited maintenance engineer or the dealer.
Every year	Check for damage to electrical wires and for loose connectors.	-
Every two years	Replace the coolant.	See the operating instructions for the diesel engine.



## 10.5 Opening the engine compartment


**Warning!**

Do not touch hot engine parts. The engine compartment may only be opened when the engine is stationary.



The procedure for opening the engine compartment depends on the type of machine. Check the machine type and select the correct procedure.

### 10.5.1 Opening the engine compartment - type 1

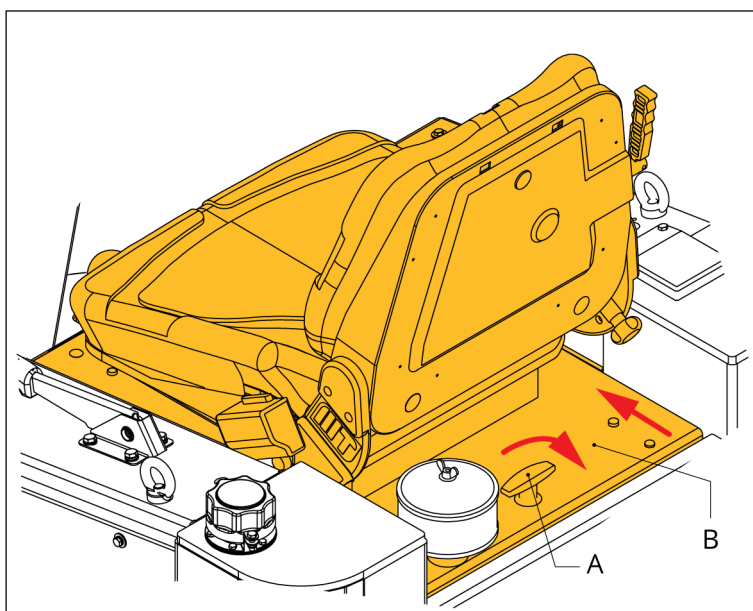


**Figure 41:** Opening the engine compartment – type 1 standard version

- 1 Set the lever (A) to the horizontal position.
- 2 Open the cover, including the operator's seat (B).



### 10.5.2 Opening the engine compartment - type 2

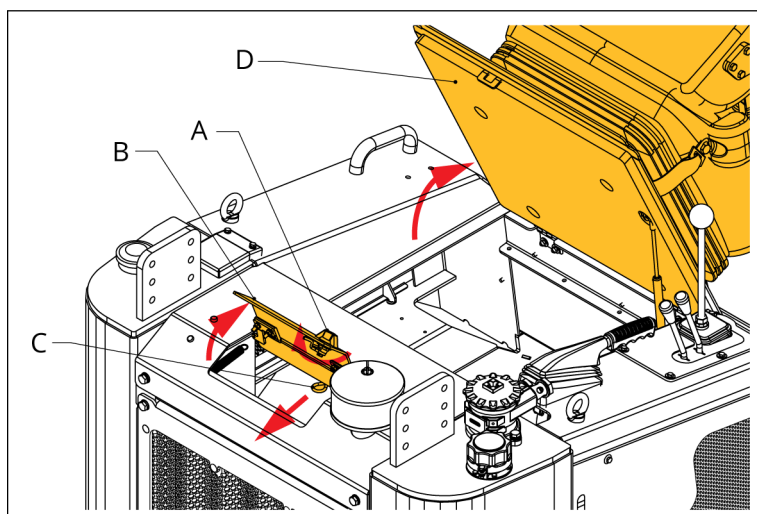

**Figure 42:** Opening the engine compartment – type 2 TE version


- 1 Set the lever (A) to the horizontal position.
- 2 Open the cover (B).
- 3 Pull the lever (C) and open the cover, including the operator's seat (D).



### 10.5.3 Opening the engine compartment - type 3



Engine compartment type 3 is an obsolete model and is no longer in production.

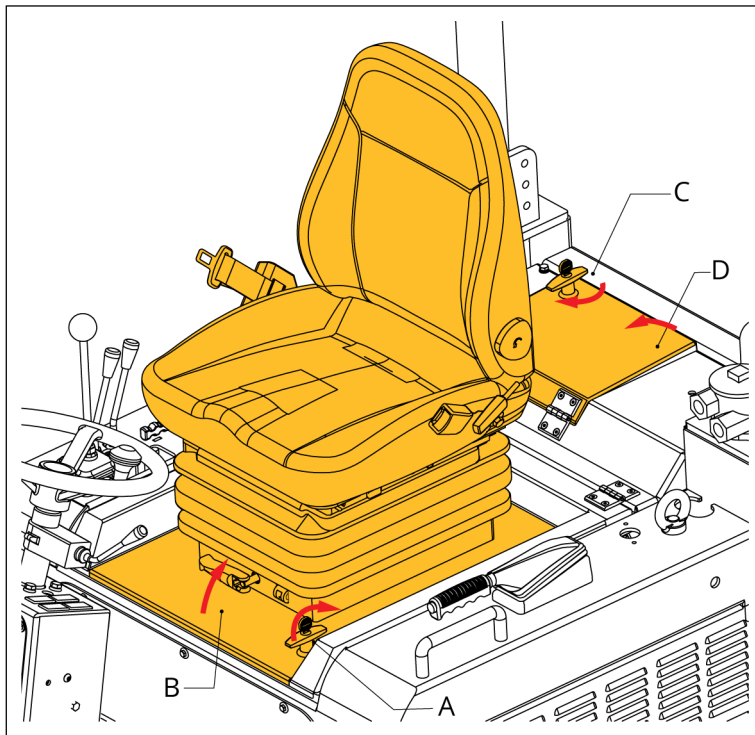

**Figure 43:** Opening the engine compartment – type 3 eHC version

- 1 Set the lever (A) to the horizontal position.
- 2 Open the cover, including the operator's seat (B).
- 3 Set the lever (C) to the horizontal position.
- 4 Open the cover (D).


## 10.6 Cleaning the cyclone filter

The cyclone filter is located at the rear of the machine and filters coarse dust from the air before it reaches the air filter.



Not all machines have a cyclone filter.



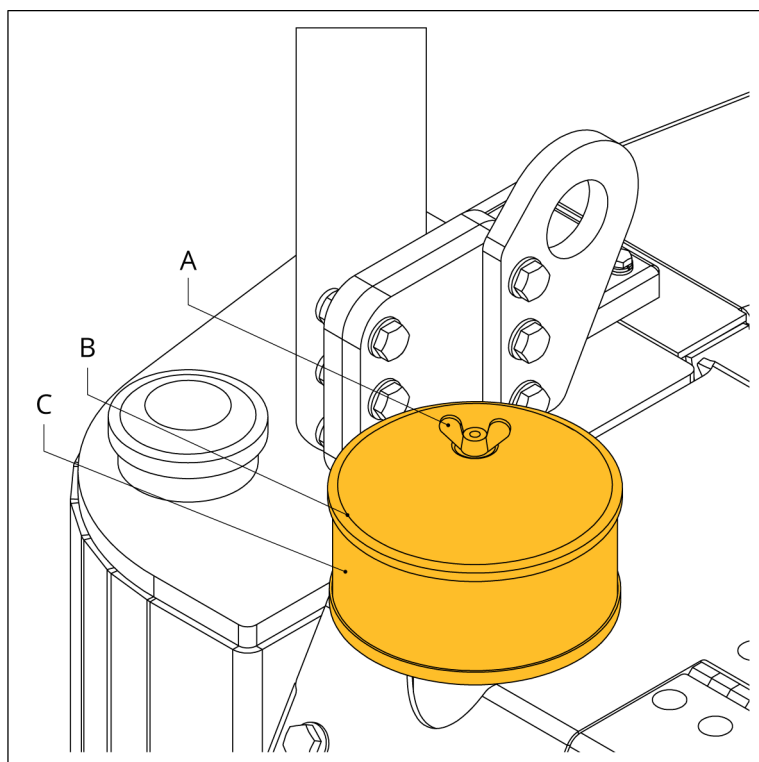

**Figure 44:** Cyclone filter

- 1 Undo the wing nut (A) on the cover.
- 2 Remove the wing nut, the cover (B), and the filter housing (C) in that order.
- 3 Clean the filter housing with compressed-air or water.




If you clean the filter housing with water, ensure that the filter housing is completely dry after cleaning.

- 4 Fit the filter housing, cover, and wing nut in that order.
- 5 Tighten the wing nut.



## 10.7 Checking the fan belt tension

Switch the machine off to check the tension of the belt. Allow the machine to cool sufficiently before starting.

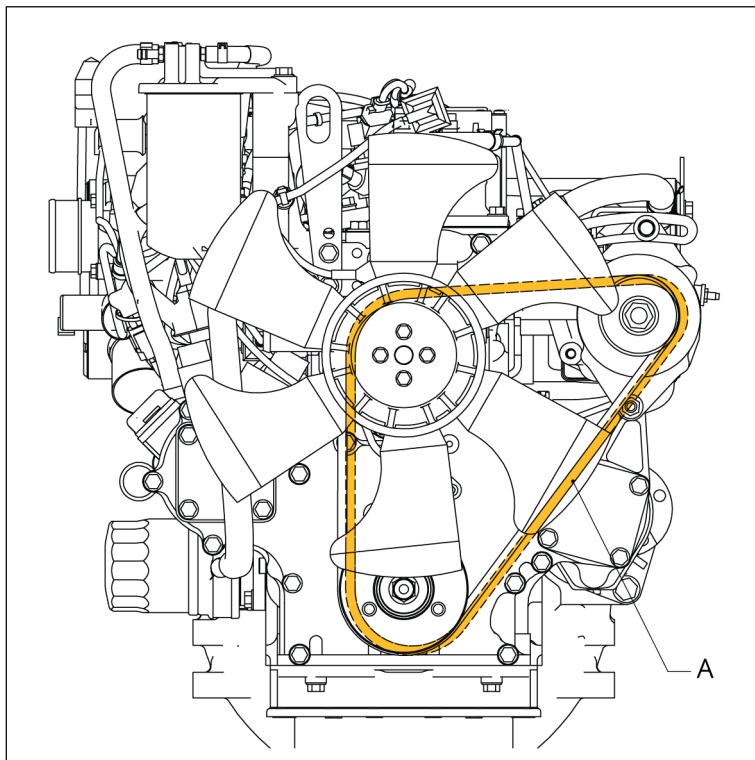

**Figure 45:** Yanmar fan belt tension

- 1 Open the engine compartment.

For more information, see Opening the engine compartment [on page 66](#).

- 2 Use your thumb to press on the belt (A) at the longest span.



There should be between 7 and 9 mm of play. If the belt moves more or less than the permitted play, contact a recognized maintenance engineer.

- 3 Close and lock the engine compartment.

## 10.8 Checking the parking brake

- 1 Pull the handbrake upwards as far as it will go.
- 2 Attempt to move forward and backward.




The machine should not move. If the machine does move, contact a recognized maintenance engineer.



## 10.9 Lubricating the hinge points

### 10.9.1 Location of the lubrication nipples - standard version

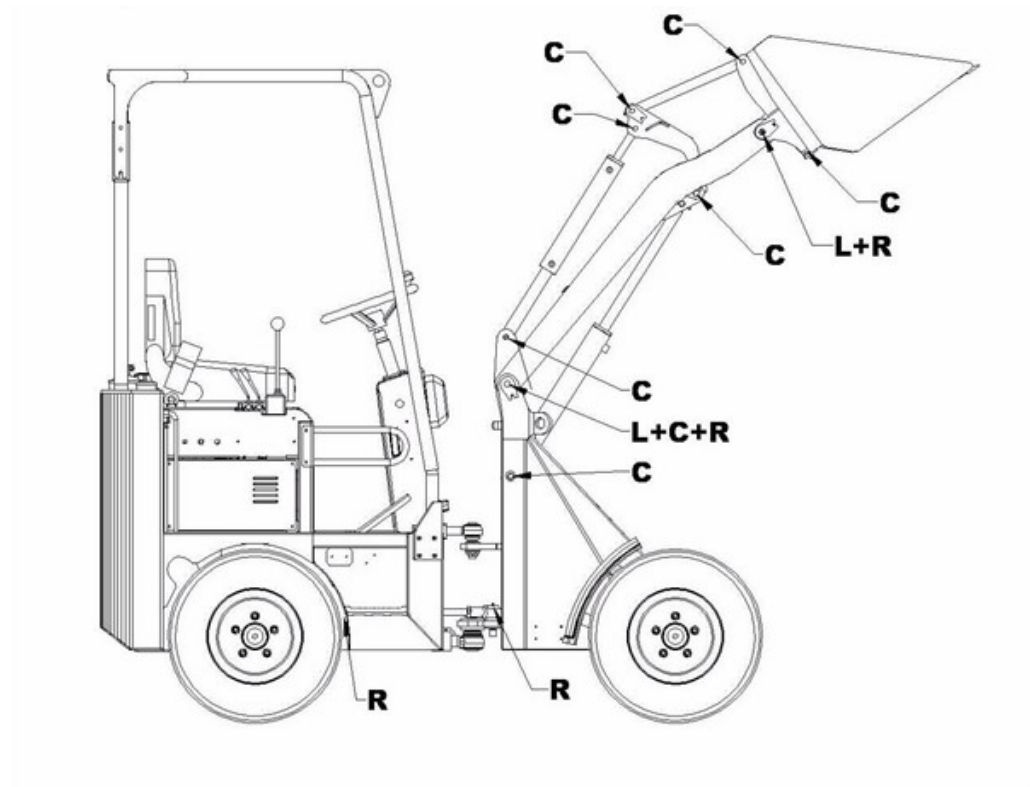

**Figure 46:** Location of the lubrication nipples – standard version


C Lubrication nipple, center

L Lubrication nipple, left

R Lubrication nipple, right



## 10.9.2 Location of the lubrication nipples - TE version

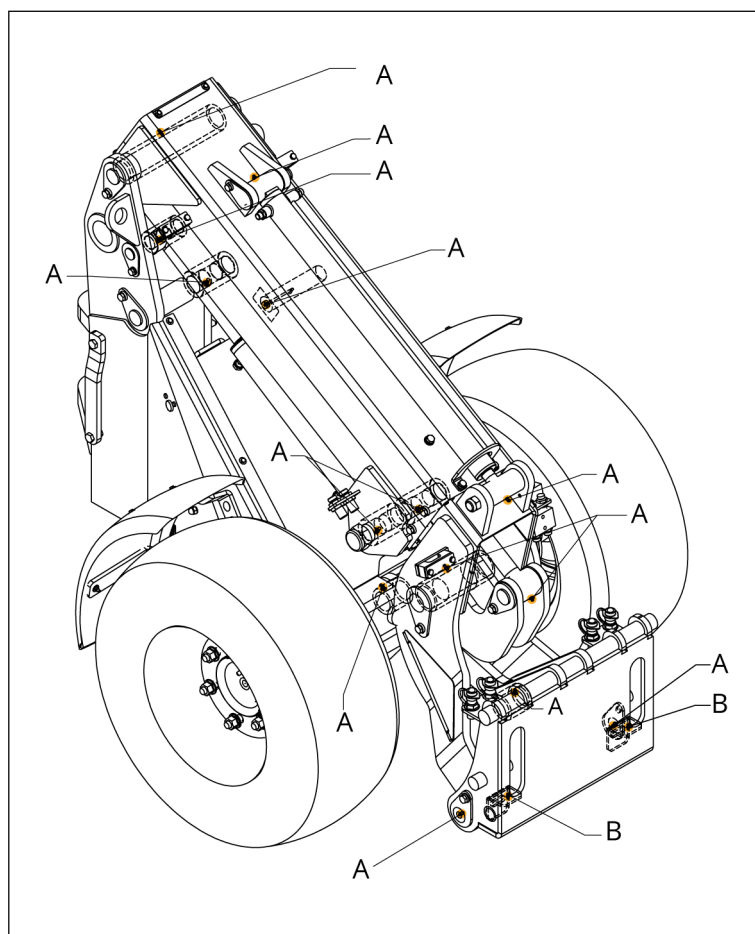


**Figure 47:** Location of the lubrication nipples – TE and eHC version

A Lubrication nipple

B Lubrication nipple for a horizontal, hydraulically operated locking pin.



### 10.9.3 Location of other lubrication points

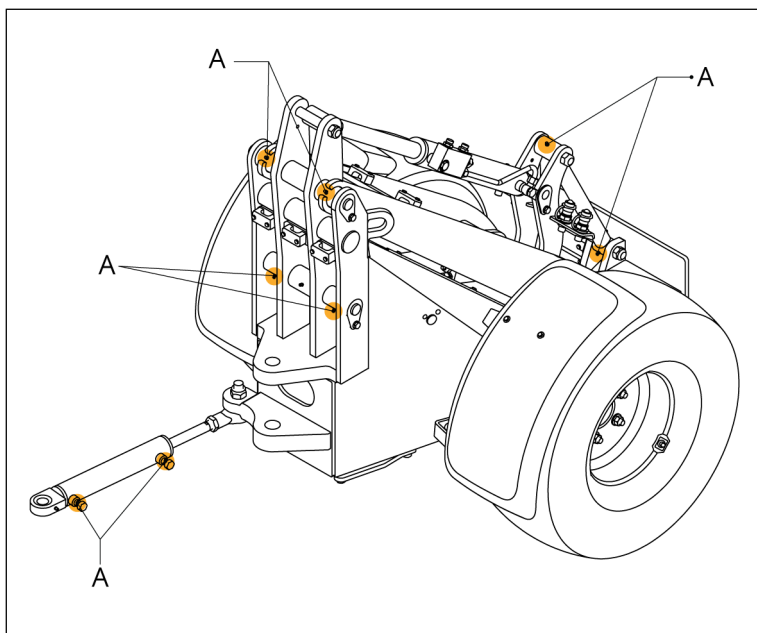

**Figure 48:** Location of other lubrication points

A Lubrication nipple

### 10.9.4 Lubricating via the lubrication nipples

Before you begin: Ensure that you have a grease gun to hand.

- 1 Attach the grease gun to a lubricating nipple.
- 2 Inject lubricating grease using the grease gun until it begins to emerge from the bearing.
- 3 Remove the grease gun from the lubrication nipple.
- 4 Remove excess grease.
- 5 Repeat for all points that you wish to lubricate.



Some grease may be released after lubrication, which is perfectly normal.




## 10.10 Checking/topping up the engine oil

### 10.10.1 Checking the engine oil level

**Warning!**

The engine must be off while carrying out this procedure. Allow the engine to cool down sufficiently.

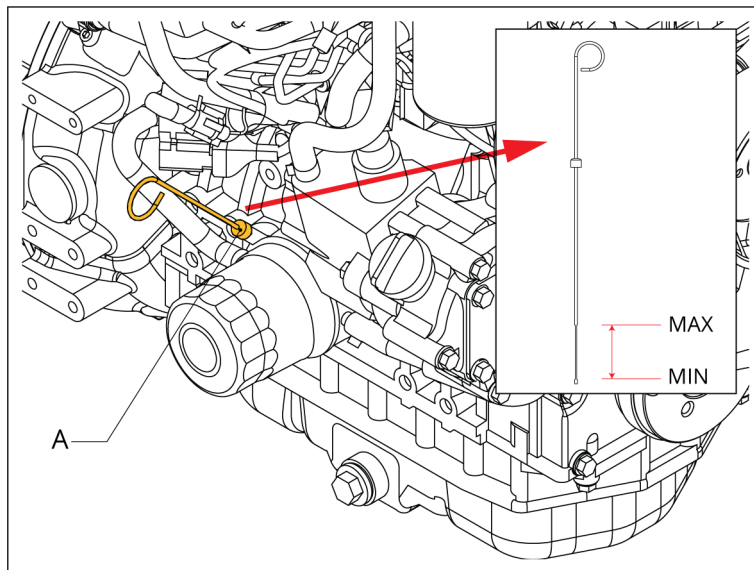

**Figure 49:** Checking the engine oil level – Yanmar

- 1 Open the engine compartment.  
For more information, see Opening the engine compartment [on page 66](#).
- 2 Remove the engine oil dipstick (A) from the holder.
- 3 Clean the engine oil dipstick and insert it back into the holder.
- 4 Remove the engine oil dipstick from the holder again.
- 5 Verify that the engine oil level is between the **MIN** and **MAX** markings.




If the engine oil level is too low, follow the steps in Topping up the engine oil [on page 74](#).

- 6 Insert the engine oil dipstick back into the holder.
- 7 Close and lock the engine compartment.

### 10.10.2 Topping up the engine oil

**Warning!**

The engine must be off while carrying out this procedure. Allow the engine to cool down sufficiently.

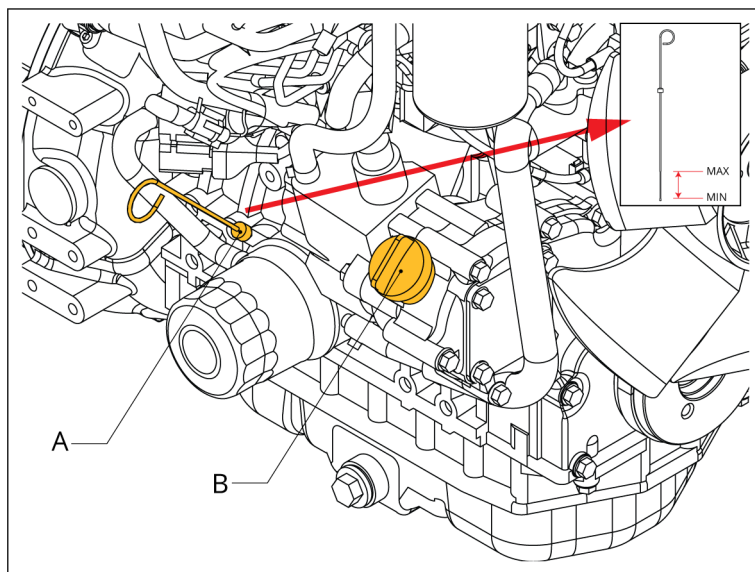

**Figure 50:** Topping up Yanmar engine oil

- 1 Open the engine compartment.  
For more information, see Opening the engine compartment [on page 66](#).
- 2 Remove the engine oil cap (B).
- 3 Top up the oil tank and wait for five minutes.  
For the correct type of engine oil, see Consumables [on page 94](#).
- 4 Remove the engine oil dipstick (A) from the holder.
- 5 Clean the engine oil dipstick and insert it back into the holder.
- 6 Remove the engine oil dipstick from the holder again.
- 7 Verify that the engine oil level is between the **MIN** and **MAX** markings.
- 8 Insert the engine oil dipstick back into the holder.
- 9 Close the engine oil cap if the engine oil level is OK. If the engine oil level is not OK, repeat steps 3 to 8.
- 10 Close and lock the engine compartment.




## 10.11 Checking/topping up the coolant

### 10.11.1 Checking the coolant level

**Warning!**

The engine must be off while carrying out this procedure. Allow the engine to cool down sufficiently.

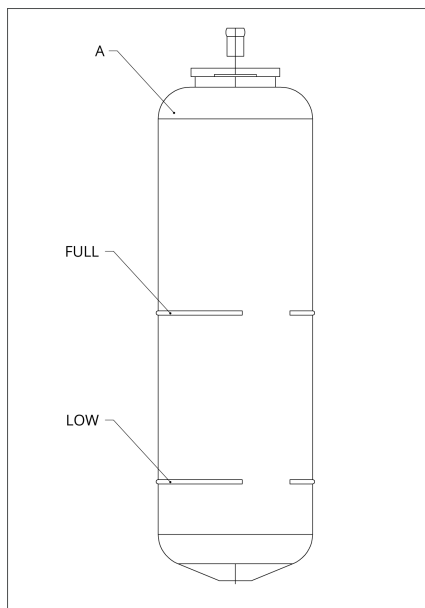

**Figure 51:** Checking the coolant level – Yanmar


- 1 Open the engine compartment.  
For more information, see Opening the engine compartment [on page 66](#).
- 2 Check whether there is sufficient coolant in the reservoir (A).  
The coolant level must be between **FULL** and **LOW**.
- 3 If the level is too low, top up the coolant.  
For more information, see Topping up the coolant [on page 76](#).
- 4 Close and lock the engine compartment.

### 10.11.2 Topping up the coolant

**Warning!**

The engine must be off while carrying out this procedure. Allow the engine to cool down sufficiently.



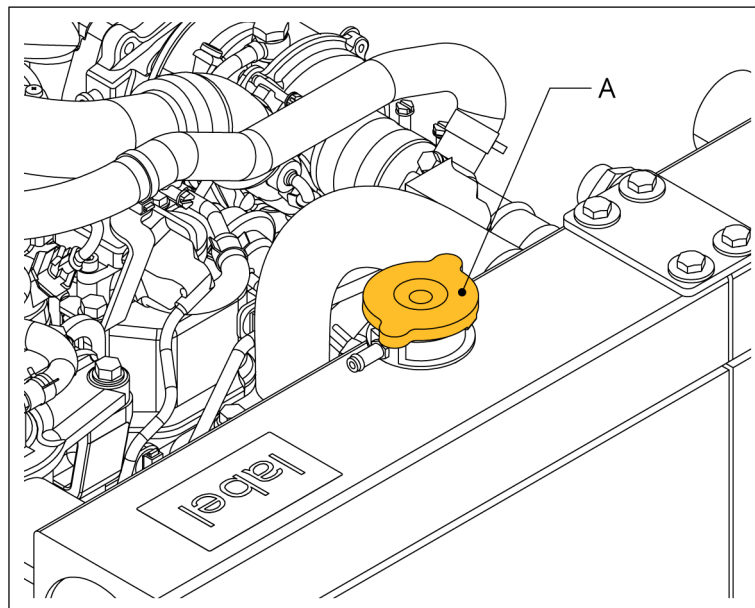

**Figure 52:** Topping up the coolant

- 1 Open the engine compartment.  
For more information, see Opening the engine compartment [on page 66](#).
- 2 Remove the cap (A) from the radiator.




Allow excess pressure to escape before fully removing the cap.

- 3 Top up the coolant to the FULL mark on the reservoir.  
For the correct type of coolant, see Consumables [on page 94](#).
- 4 Screw the cap back onto the radiator.
- 5 Close and lock the engine compartment.

## 10.12 Checking/topping up the hydraulic fluid

Before starting – the temperature of the hydraulic fluid must be approx. 20°C, the hydraulic attachment must be in the lowermost position, and all other cylinders must be retracted.

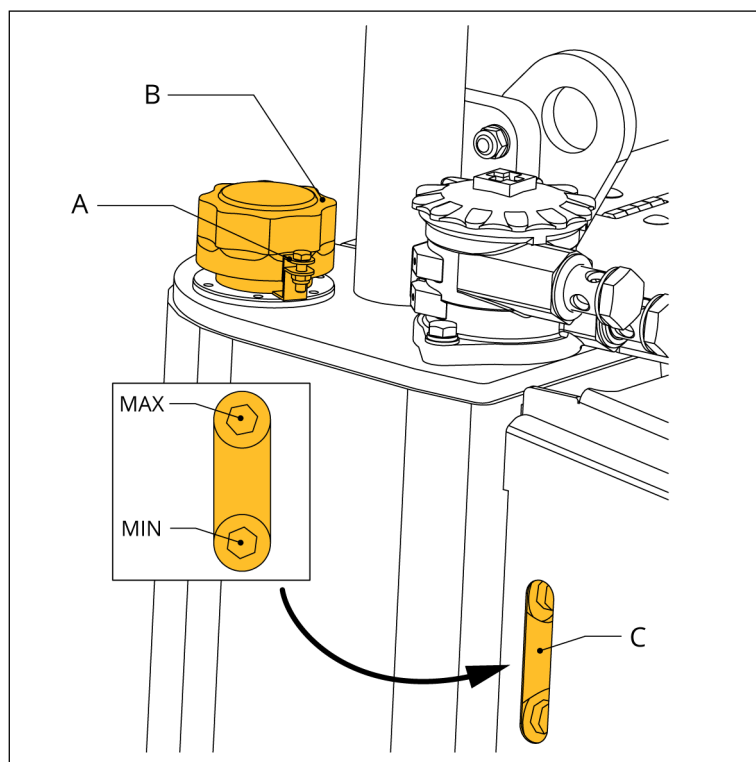

**Figure 53:** Checking/topping up the hydraulic fluid

### 10.12.1 Checking the hydraulic fluid level

- 1 Verify that the fluid level in the sight glass (C) is between the MIN and MAX markings.
- 2 If the fluid level is too low, top up the hydraulic fluid.  
For more information, see Topping up the hydraulic fluid [on page 78](#).
- 3 Contact a recognized maintenance engineer if the fluid level is too low.

### 10.12.2 Topping up the hydraulic fluid

- 1 Remove the bolt and nut (A).
- 2 Unscrew the filler cap (B).
- 3 Top up the tank.



For the correct type of hydraulic fluid, see Consumables [on page 94](#).



**Caution!**  
Exercise caution when handling hydraulic fluid.

- 4 Screw the filler cap (B) back on.
- 5 Secure the filler cap with the bolt and nut (A).



## 10.13 Replacing the air filter



Please contact the manufacturer for the correct replacement parts.




Only an accredited maintenance engineer may carry out this procedure.



It is recommended that the air filter be replaced whenever maintenance is carried out.

### 10.13.1 Removing the cover

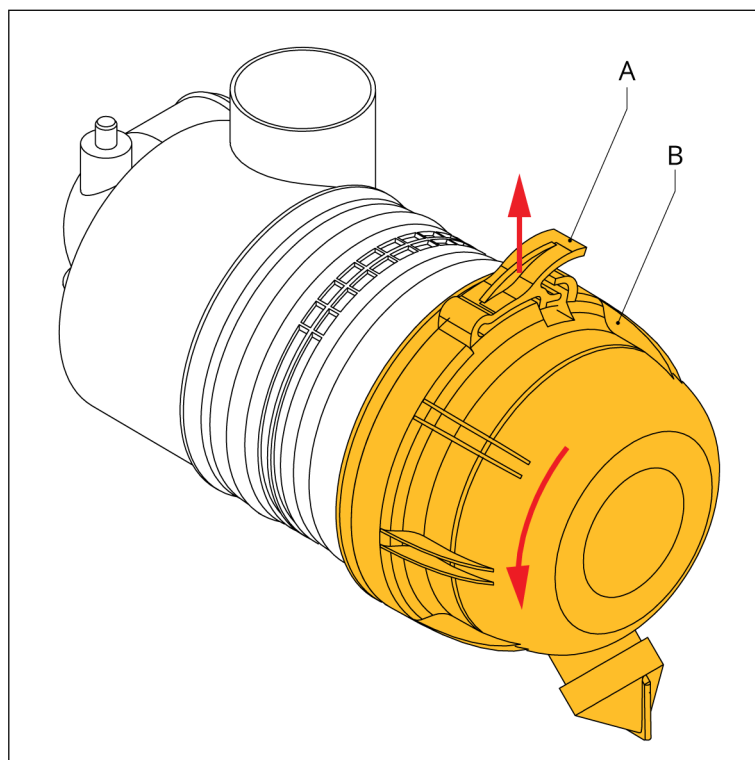


**Figure 54:** Removing the cover from the air filter

- 1 Open the engine compartment.  
For more information, see Opening the engine compartment [on page 66](#).
- 2 Press the retaining clip (A) upward and turn the cover (B) counter-clockwise to remove it.



### 10.13.2 Replacing the air and fine filter

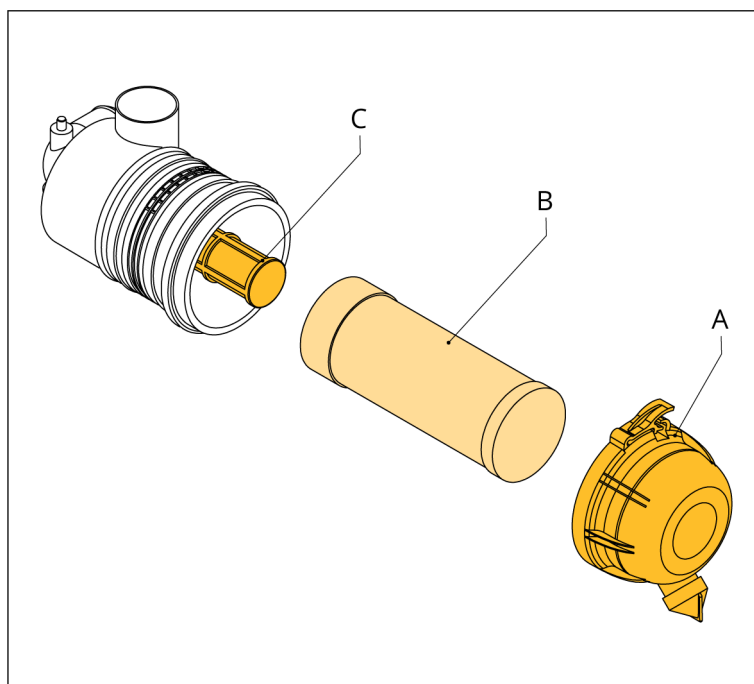

**Figure 55:** Replacing the air filter


- 1 Remove the old air filter (B).
- 2 Remove the old fine filter (C).
- 3 Fit the new fine filter (C).
- 4 Fit the new air filter (B).
- 5 Replace the cover (A) and turn it clockwise until the retaining clip engages.
- 6 Close and lock the engine compartment.

## 10.14 Replacing hydraulic fluid filters

	Please contact the manufacturer for the correct replacement parts.
	Only an accredited maintenance engineer may carry out this procedure.



### 10.14.1 Replacing the suction filter

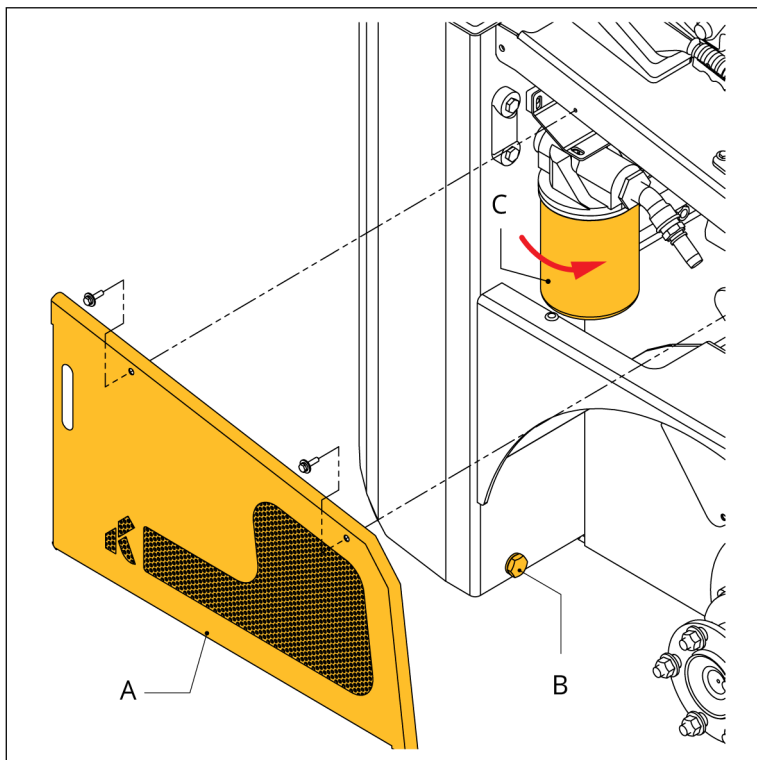

**Figure 56:** Replacing the suction filter

- 1 Remove the side panel (A).
- 2 Place a contain under the release cap (B).
- 3 Remove the release cap.  
Result: hydraulic fluid runs from the release opening.
- 4 Remove the suction filter (C).
- 5 Replace the side panel.
- 6 Top up the hydraulic fluid.

For more information, see Topping up the hydraulic fluid [on page 78](#).



Always use new hydraulic fluid when topping up.



### 10.14.2 Replacing the return filter




The return filter filters all oil that is returned from the system, shortly before it enters the hydraulic tank again.



The return filter is only fitted on certain machine types.



The return filter should only be replaced by a recognized maintenance engineer or dealer.

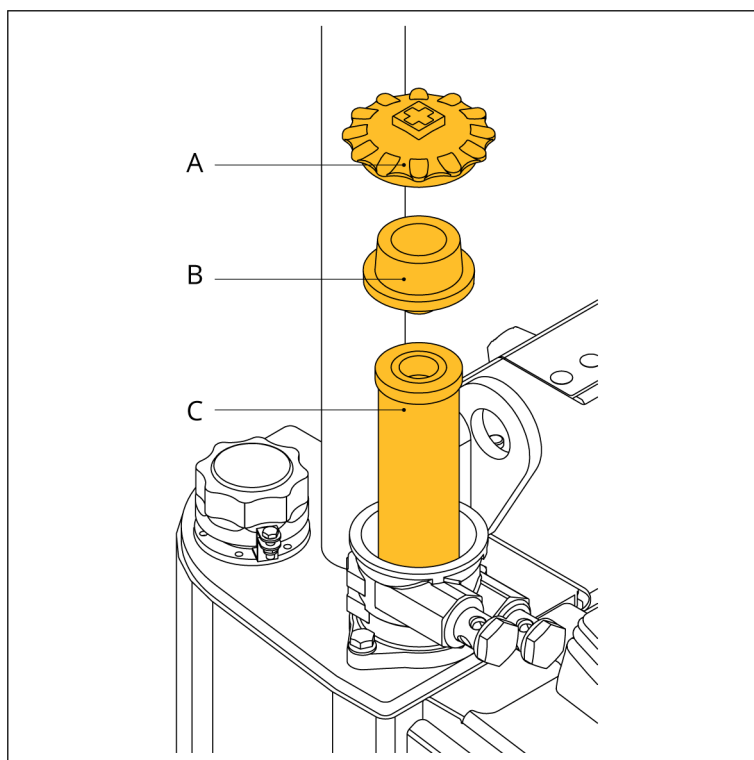

**Figure 57:** Replacing the return filter

- 1 Remove the side panel (A).
- 2 Place a contain under the release cap (B).
- 3 Remove the release cap.  
Result: hydraulic fluid runs from the release opening.
- 4 Remove the return filter (C).
- 5 Install the new return filter.
- 6 Replace the side panel.
- 7 Top up the hydraulic fluid.

For more information, see Topping up the hydraulic fluid [on page 78](#).



Always use new hydraulic fluid when topping up.

## 10.15 Soot filter

### 10.15.1 Description and operation of the soot filter

Knikmops Stage V models >19 kW are fitted with a soot filter. The filter captures fine particulate and burns it until it becomes ash.

To ensure optimal use of the soot filter:

- allow the engine to idle
- warm the engine up
- the quality of the diesel must satisfy EN 590 or EN 15940

The soiling level of the soot filter is divided into five different zones. The zones can be checked on the dashboard. The machines have been designed so that regeneration of the soot filter takes place while work is being carried out if the soiling level is between zone 0 and 2. Manual regeneration is required from zone 3. The dashboard will then display a warning.

For more detailed information on the zones, see [Soiling level of the soot filter on page 83](#).

For more detailed information on manual regeneration of the soot filter, see [Carrying out the manual regeneration process on page 84](#) and [Stopping/preventing the regeneration process on page 85](#).

### 10.15.2 Soiling level of the soot filter

This section provides more information of the five different zones or soiling levels of the soot filter. Either active regeneration or manual regeneration can take place, depending on the zone.


Zone	Type of regeneration	Description
0	Active regeneration	While driving, soot will be captured and burned, where necessary.
1	Active regeneration	While driving, soot will be captured and burned, where necessary.
2	Active regeneration, but manual regeneration possible	While driving, soot will be captured and burned, where necessary. The number of particles in the soot filter is increasing.
3	Manual regeneration	The soot filter is saturated and the dashboard displays a warning. Press <b>OK</b> and start manual regeneration.
4	Manual regeneration no longer possible.	The soot filter is saturated and the engine is losing power. Manual regeneration is no longer possible. Make an appointment with an accredited Knikmops service point.
5	Regeneration no longer possible	The soot filter is saturated and the engine is losing power. Make an appointment with an accredited Knikmops service point.




### 10.15.3 Carrying out the manual regeneration process


With the manual regeneration process, the operator regenerates the filter manually. This takes between 30 and 60 minutes.


Regeneration is best done outside and in a well-ventilated area.

	Manual regeneration is only possible if the notification is active on the instrument panel.
---	---


	<b>Warning!</b> During the process, you must not drive the machine.
---	--

- 1 Bring the machine to a halt but allow the engine to run for around ten minutes to keep the engine temperature at a sufficient level.

	<b>Warning!</b> Ensure that the exhaust gases are not blown against flammable objects.
---	---

	<b>Caution!</b> Ensure that machine is at least one meter from people, objects, and flammable substances in the environment.
--	---


- 2 Pull the parking brake upward and move the transmission to neutral.
- 3 Switch the DPF inhibit switch off via the display.
- 4 Release the accelerator pedal and switch the handle throttle off.
- 5 Select the information (i) symbol on the dashboard.

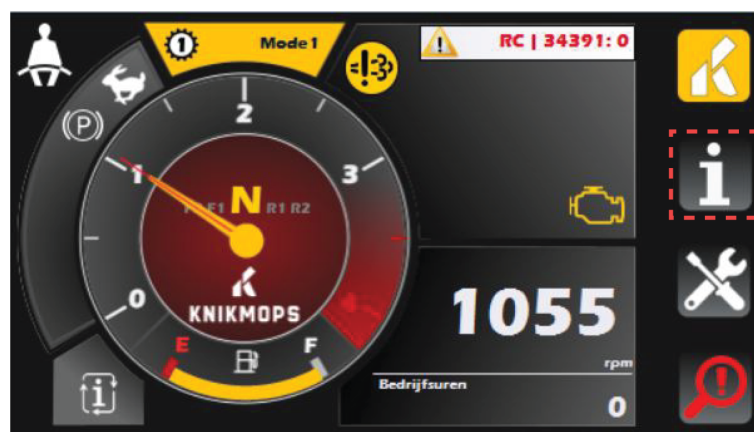







- 6 Select the submenu for regeneration (A).

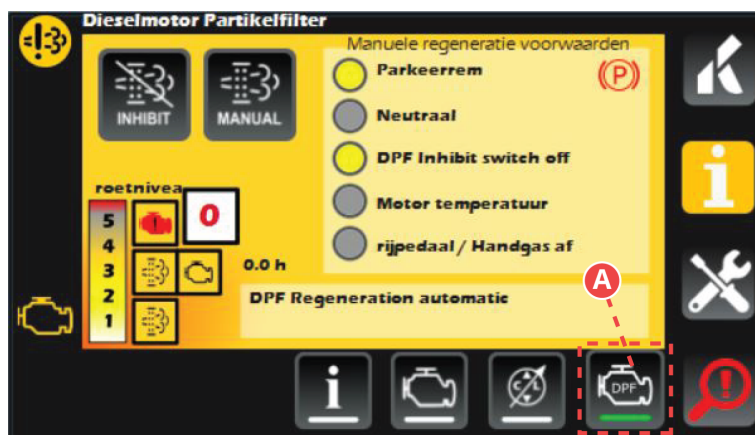

- 7 Select the MANUAL option (B).

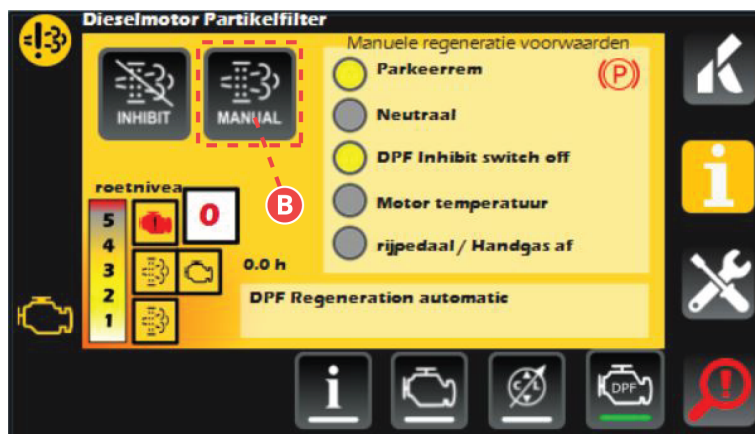


You will see the following screen:

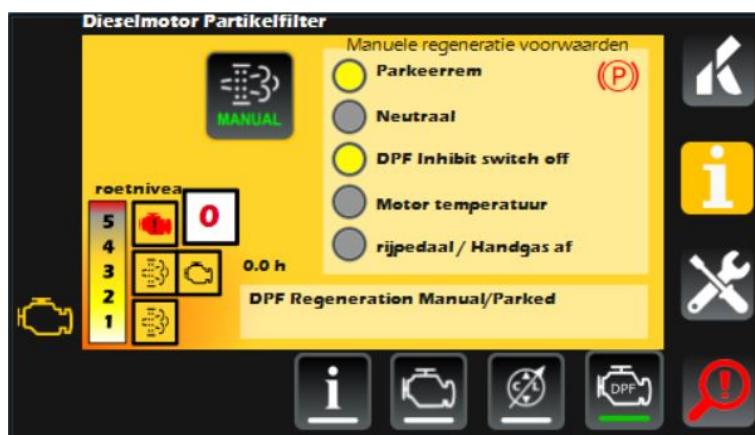


#### 10.15.4 Stopping/preventing the regeneration process

You can stop or prevent the regeneration process if the situation demands it. You should only use this mode if you are in an area in which regeneration is impossible or undesirable.


- 1 Select the information (i) symbol on the dashboard.

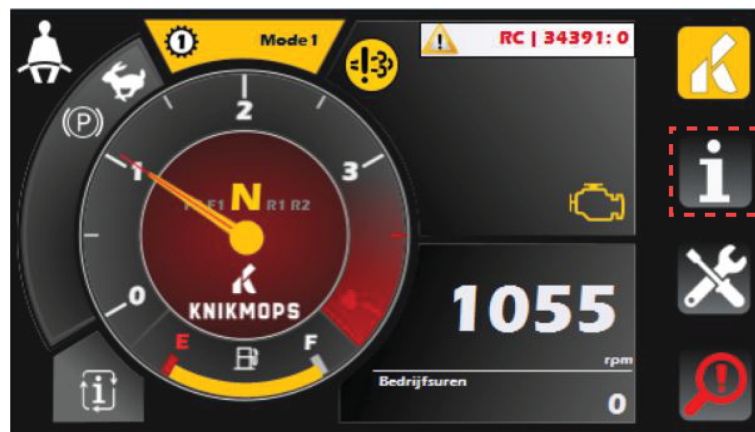

2 Select the submenu for regeneration (A).

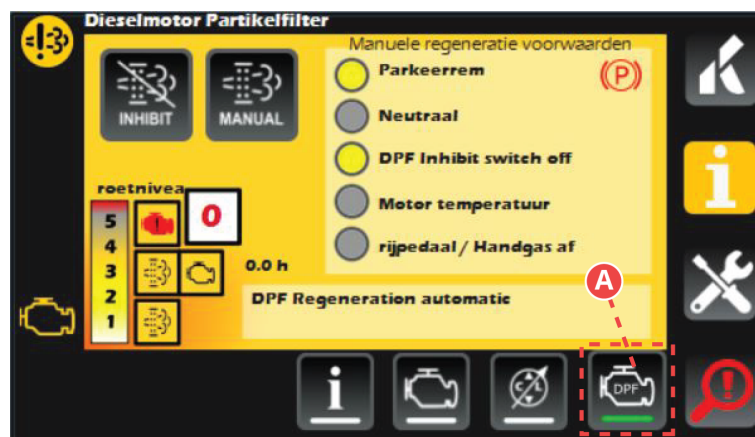

3 Select the INHIBIT option (B).

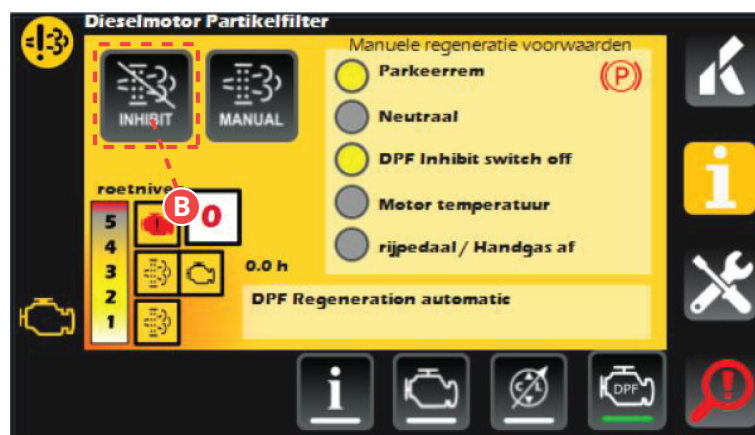



You will see the following screen:



## 10.16 Cleaning the machine

You must clean the machine at regular intervals. That way, you will keep the machine in good condition and make it easier to operate the arm and other controls.

You can clean the machine in a number of different ways. Remember to exercise caution when using certain cleaning agents. They must be properly diluted in clean water before use, otherwise there is a risk of damaging the machine.

If using a high-pressure cleaner, follow the instructions in [Cleaning with a high-pressure cleaner](#) on page 87.



### Note!

Gebroeders Geens cannot be held liable for damage resulting from a failure to observe the points above.

### 10.16.1 Cleaning with a high-pressure cleaner



### Caution!

Lubricate the lubrication points again after cleaning the machine.

If cleaning the machine with a high-pressure cleaner, the following must be taken into account:

- Do not direct the high-pressure cleaner at electrical components.
- Do not direct the high-pressure cleaner at bearings, hinges, or lubrication points.
- For the first three months, only use water with a temperature of up to 15°C and a maximum pressure of 40 to 60 bar.
- The temperature may be increased to 60°C after three months.
- Keep the high-pressure cleaner at least 50 cm away from the chassis.



Failure to follow these instructions may give rise to paint damage and impair the functioning of the machine itself.

### 10.16.2 Problems caused by improper cleaning

Problem	Cause
Machine remains dirty after cleaning.	Poor choice of cleaning agent, water temperature too low, or machine not rinsed off properly.
Residue of a solid substance on the paint surface after the machine has dried.	The machine was not rinsed off properly which has caused the cleaning solution to dry on the paint surface.
The machine has a mat appearance after drying.	The cleaning agent has had a corrosive effect on the paint. This is usually due to incorrect dilution of the cleaning agent or inadequate rinsing.
Lime or cement residue not removed.	Incorrect cleaning agent.
Change of color, reduced gloss, small cracks in the paint.	Pigment affected due to very strong acids or bases.



# 11. Maintaining the buckets and pallet fork

## 11.1 Daily maintenance



The operator of the machine or someone with an equivalent level of training may carry out daily maintenance.

- 1 Lubricate the hinge points.  
For more information, see Lubricating the hinge points [on page 71](#).
- 2 Check whether a recognized maintenance engineer has carried out the other periodic maintenance.
- 3 Check the attachment for visible damage and for leaks of hydraulic oil while the machine is switched off.
- 4 Start the machine and check whether the hydraulic functions of the attachment are working correctly.

## 11.2 Maintenance and repair



A specialist must carry out maintenance and repair work.



Attachments may not be modified without the written consent of the manufacturer.



If in doubt, consult the manufacturer.

- 1 Check hydraulic couplings, hoses, lines, and connections regularly for leaks, wear, and aging.
- 2 Replace damaged lines, hoses, lamps, or pressure gages promptly.  
New hoses must satisfy the generally applicable requirements for medium pressure.
- 3 Inspect the attachment every 250 operating hours for wear, deformation, and crack formation. The attachment must also be inspected in full for wear, deformation, and crack formation in the event of unforeseen events which may have caused the attachment to be damaged.



## 12. Decommissioning and disposal

If the machine or attachments are no longer suitable for further use, you must separate the materials and send them individually to designated organizations or businesses.

In the case of the pallet fork, you must also remove the hydraulic hoses and drain the hydraulic oil.



## 13. Troubleshooting

### 13.1 Procedure

- 1 Use the table to help you to resolve problems.
- 2 Contact a recognized maintenance engineer or the manufacturer if you are unable to find a resolution to the problem.
- 3 Tell the service engineers the software version of your display when you communicate with them by telephone or e-mail. That way, they will be able to provide the correct information.
- 4 Describe the problem in as much details possible and clearly indicate the steps that you had already taken before contacting the recognized maintenance engineer or manufacturer.

### 13.2 Troubleshooting

If you encounter a malfunction or problem that is not listed in this table, contact your dealer immediately.

Problem	Possible cause	Possible solution
The engine does not start and the starter motor does not turn.	The starter motor is broken.	Contact an accredited maintenance engineer or the manufacturer.
	The battery is flat.	Contact an accredited maintenance engineer or the manufacturer.
The engine does not start but the starter motor turns.	Insufficient fuel in the tank.	Top up the fuel and bleed the system.
	The glow plugs were not on for long enough.	Hold the ignition key in the GL position for longer when starting the machine.
	A hydraulic function is still switched on.	Move all levers for hydraulic assistance functions to the neutral position.  For more information on the positions of the levers, see Hydraulic operation <a href="#">on page 17</a> .



Problem	Possible cause	Possible solution
The engine does not output sufficient power.	The cyclone filter is soiled.	Clean the cyclone filter. For more information, see <a href="#">Cleaning the cyclone filter on page 68.</a>
	The fuel filter is soiled.	Replace the fuel filter. See the operating instructions for the diesel engine.
	The air filter is soiled.	Replace the air filter. See <a href="#">Replacing the air and fine filter on page 80.</a>
	A hydraulic function is still switched on.	Move all levers for hydraulic assistance functions to the neutral position. For more information on the positions of the levers, see <a href="#">Hydraulic operation on page 17.</a>
	Wrong fuel.	Contact an accredited maintenance engineer or the manufacturer.
The machine does not move.	There is insufficient hydraulic fluid.	Top up the hydraulic fluid. See <a href="#">Topping up the hydraulic fluid on page 78.</a>
	The clutch is broken.	Contact the dealer.
	There is an electronic problem.	Contact the dealer.
The machine has tipped over.	-	<ol style="list-style-type: none"> <li>1 Keep the safety belt on.</li> <li>2 Remain in the machine.</li> <li>3 Turn the ignition key to the OFF position to switch the engine off.</li> <li>4 Do not restart the machine. Oil on top of the piston can damage the engine.</li> <li>5 Exit the machine.</li> </ol> Contact an accredited maintenance engineer or the manufacturer.





Problem	Possible cause	Possible solution
The hydraulic connection of the attachment cannot be coupled.	The machine is still pressurized.	<ol style="list-style-type: none"><li>1 Turn the ignition key to the OFF position to switch the engine off.</li><li>2 Move the levers for the hydraulic assistance functions back and forth a few times to allow the hydraulic pressure to escape.</li></ol>
	The attachment is still pressurized.	Release the hydraulic pressure from the attachment by unscrewing the hose. Be aware of the risk of spraying hydraulic fluid.
		Couple the depressurized hose to the machine and repeat the solution above.



## 14. Technical specification


The technical file, detailed drawings, structural calculations, and the original CE declarations are available from the manufacturer for inspection.

### 14.1 Consumables

Consumables	Specification
Fuel	Diesel class EN 590. If in doubt, consult the user manual for the diesel engine. Check the regulations for the country in which you are located and observe them carefully. In certain countries, "red diesel" is prohibited.
Engine oil	Oil API class CJ-4. Pallas 900 10W40 from Unil
Hydraulic fluid	AZOLLA Z546 or UNIL HFO46.
Coolant	COOLELF AUTO SUPRA -26 °C or Unil Paradian.
Lubricating grease	General lubricating grease classification NLGI 2.



## 14.2 Machine dimensions

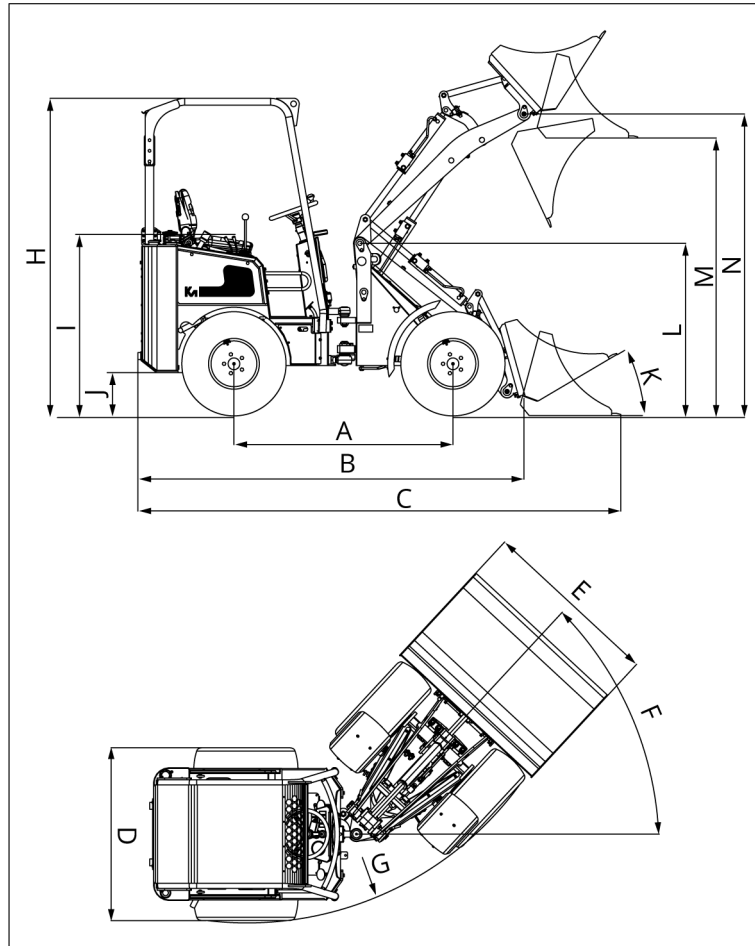

**Figure 58:** Machine dimensions

A	Wheelbase	H	Rollbar height/ROPS FOPS height
B	Total length without shovel bucket	I	Seat height
C	Total length with shovel bucket	J	Ground clearance
D	Overall width	K	Tipping-in angle from ground surface
E	Width	L	Arm hinge height
F	Maximum turning angle	M	Transfer height
G	Turning radius outside edge	N	Connector plate hinge maximum height

Dimensions					
Position	Parameter	KM80	KM85	KM90	KM100
A	Wheelbase (mm)	1,415	1,415	1,445	1,445
B	Total length without shovel bucket (mm)	2,360	2,360	2,400	2,400
C	Total length with shovel bucket (mm)	2,935	2,935	2,940	2,940
D	Overall width (mm)	750/1,020	750/1,020	930/1,180	930/1,180



Dimensions					
Position	Parameter	KM80	KM85	KM90	KM100
E	Width of shovel bucket (mm)	800/1,100	800/1,100	960/1,250	960/1,250
F	Maximum turning angle (°)	50	50	45	45
G	Turning radius outside edge (mm)	2,120	2,120	2,380	2,380
H	Rollbar height/ROPS FOPS height (mm)	2,040/2,100	2,040/2,100	2,225/2,250	2,225/2,250
I	Seat height (mm)	1,070	1,070	1,125	1,125
J	Ground clearance (mm)	205	205	245	245
K	Tipping-in angle from ground surface (°)	30	30	32	32
L	Arm hinge height (mm)	1,060	1,060	1,165	1,165
M	Transfer height (mm)	1,715	1,715	1,775	1,775
N	Connector plate hinge maximum height (mm)	1,895	1,895	2,030	2,030

Dimensions					
Position	Parameter	KM100TE	KM120	KM120H	KM120TE
A	Wheelbase (mm)	1,530	1,550	1,585	1,650
B	Total length without shovel bucket (mm)	2,610	2,710	2,710	2,860
C	Total length with shovel bucket (mm)	3,250	3,390	3,390	3,540
D	Overall width (mm)	930/1,180	950/1,250	950/1,250	950/1,250
E	Width of shovel bucket (mm)	960/1,250	1,000/1,270	1,000/1,270	1,000/1,270
F	Maximum turning angle (°)	45	47	47	47
G	Turning radius outside edge (mm)	2,380	2,400	2,400	2,400
H	Rollbar height/ROPS FOPS height (mm)	2,225/2,250	2,170/2,260	2,170/2,260	2,170/2,260
I	Seat height (mm)	1,125	1,270	1,270	1,270
J	Ground clearance (mm)	245	315	315	315
K	Tipping-in angle from ground surface (°)	30	30	30	30
L	Arm hinge height (mm)	1,265	1,230	1,465	1,320
M	Transfer height (mm)	2,230/2,790	1,975	2,570	2,420/3,030
N	Connector plate hinge maximum height (mm)	2,405/2,965	2,145	2,740	2,590/3,200

Dimensions						
Position	Parameter	KM125	KM125H	KM125TE	KM130	KM130H
A	Wheelbase (mm)	1,550	1,585	1,650	1,550	1,585
B	Total length without shovel bucket (mm)	2,710	2,710	2,860	2,710	2,710



Dimensions						
Position	Parameter	KM125	KM125H	KM125TE	KM130	KM130H
C	Total length with shovel bucket (mm)	3,390	3,390	3,540	3,390	3,390
D	Overall width (mm)	950/1,250	950/1,250	950/1,250	950/1,250	950/1,250
E	Width of shovel bucket (mm)	1,000/1,270	1,000/1,270	1,000/1,270	1,000/1,270	1,000/1,270
F	Maximum turning angle (°)	47	47	47	47	47
G	Turning radius outside edge (mm)	2,400	2,400	2,400	2,400	2,400
H	Rollbar height/ROPS FOPS height (mm)	2,170/2,260	2,170/2,260	2,170/2,260	2,170/2,260	2,170/2,260
I	Seat height (mm)	1,270	1,270	1,270	1,270	1,270
J	Ground clearance (mm)	315	315	315	315	315
K	Tipping-in angle from ground surface (°)	30	30	30	30	30
L	Arm hinge height (mm)	1,230	1,465	1,320	1,230	1,465
M	Transfer height (mm)	1,975	2,570	2,420/3,030	1,975	2,570
N	Connector plate hinge maximum height (mm)	2,145	2,740	2,590/3,200	2,145	2,740

Dimensions				
Position	Parameter	KM130TE	KM140	KM140TE
A	Wheelbase (mm)	1,650	1,600	1,700
B	Total length without shovel bucket (mm)	2,860	2,810	2,960
C	Total length with shovel bucket (mm)	3,540	3,490	3,640
D	Overall width (mm)	950/1,250	950/1,250	950/1,250
E	Width of shovel bucket (mm)	1,000/1,270	1,000/1,270	1,000/1,270
F	Maximum turning angle (°)	47	47	47
G	Turning radius outside edge (mm)	2,400	2,500	2,500
H	Rollbar height/ROPS FOPS height (mm)	2,170/2,260	2,170/2,260	2,170/2,260
I	Seat height (mm)	1,270	1,270	1,270
J	Ground clearance (mm)	315	315	315
K	Tipping-in angle from ground surface (°)	30	30	30
L	Arm hinge height (mm)	1,320	1,230	1,320




Dimensions				
Position	Parameter	KM130TE	KM140	KM140TE
M	Transfer height (mm)	2,420/3,030	1,975	2,420/3,030
N	Connector plate hinge maximum height (mm)	2,590/3,200	2,145	2,590/3,200

Dimensions						
Position	Parameter	KM180	KM180TE	KM250	KM250H	KM250TE
A	Wheelbase (mm)	1,770	1,850	1,875	1,875	1,995
B	Total length without shovel bucket (mm)	2,990	3,240	3,180	3,400	3,440
C	Total length with shovel bucket (mm)	3,800	4,075	3,980	4,200	4,270
D	Overall width (mm)	1,135/1,400	1,135/1,400	1,180/1,520	1,180/1,520	1,180/1,520
E	Width of shovel bucket (mm)	1,400/1,500	1,400/1,500	1,500/1,700	1,500/1,700	1,500/1,700
F	Maximum turning angle (°)	50	50	50	50	50
G	Turning radius outside edge (mm)	2,760	2,760	2,800	2,800	2,950
H	Rollbar height/ ROPS FOPS height (mm)	2,300/2,380	2,300/2,380	2,220/2,430	2,220/2,430	2,220/2,430
I	Seat height (mm)	1,340	1,340	1,425	1,425	1,425
J	Ground clearance (mm)	335	335	360	360	360
K	Tipping-in angle from ground surface (°)	30	30	30	30	30
L	Arm hinge height (mm)	1,335	1,365	1,410	1,715	1,455
M	Transfer height (mm)	2,230	2,490/3,140	2,480	3,020	2,625/3,380
N	Connector plate hinge maximum height (mm)	2,405	2,660/3,310	2,650	3,190	2,275/3,550

## 14.3 Maximum machine load

	<b>Caution!</b> Do not exceed the maximum load.
	<b>Caution!</b> Avoid asymmetrical distribution of the load.

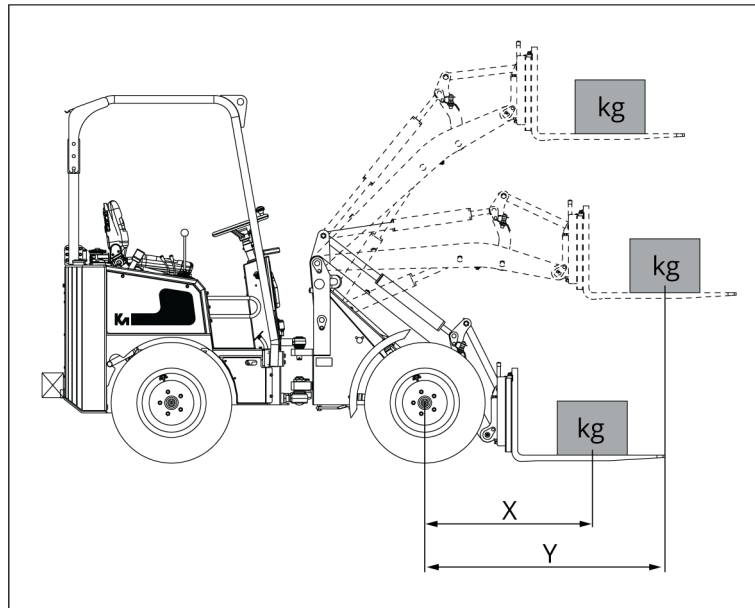

**Figure 59:** Maximum machine load

X Fully retracted arm (lowest torque)

Y Fully extended arm (highest torque)

Maximum load		KM80		KM85	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated	X = 820 mm	910 kg	X = 830 mm	700 kg
2	Not articulated	Y = 1,235 mm	730 kg	Y = 1,205 mm	460 kg
3	Not articulated	-	490 kg	-	550 kg

Maximum load		KM90		KM100		KM120H	
Position	Status	X/Y	Value	X/Y	Value	X/Y	Value
1	Not articulated	X = 820 mm	800 kg	X = 820 mm	910 kg	X = 985 mm	1,250 kg
2	Not articulated	Y = 1,235 mm	700 kg	Y = 1,235 mm	730 kg	Y = 1,620 mm	850 kg
3	Not articulated	-	460 kg	-	490 kg	-	630 kg

Maximum load		KM100TE		KM120	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated, telescopic arm retracted	X = 995 mm	800 kg	X = 1,020 mm	1,260 kg
1	Not articulated, telescopic arm extended	X = 1,800 mm	400 kg	-	-
2	Not articulated, telescopic arm retracted	Y = 1,475 mm	450 kg	Y = 1,450 mm	970 kg
2	Not articulated, telescopic arm extended	Y = 2,110 mm	260 kg	-	-



Maximum load		KM100TE		KM120	
Position	Status	X/Y	Value	X/Y	Value
3	Not articulated, telescopic arm retracted	-	230 kg	-	740 kg
	Not articulated, telescopic arm extended	-	230 kg	-	-

Maximum load		KM120TE		KM125TE	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated, telescopic arm retracted	X = 1,060 mm	1,100 kg	X = 995 mm	1,100 kg
1	Not articulated, telescopic arm extended	X = 1,925 mm	640 kg	X = 1,800 mm	640 kg
2	Not articulated, telescopic arm retracted	Y = 1,550 mm	840 kg	Y = 1,475 mm	840 kg
2	Not articulated, telescopic arm extended	Y = 2,250 mm	500 kg	Y = 2,110 mm	500 kg
3	Not articulated, telescopic arm retracted	-	520 kg	-	520 kg
	Not articulated, telescopic arm extended	-	380 kg	-	380 kg

Maximum load		KM125		KM125H	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated	X = 1,020 mm	1,260 kg	X = 985 mm	1,250 kg
2	Not articulated	X = 1,450 mm	970 kg	X = 1,620 mm	850 kg
3	Not articulated	-	740 kg	-	630 kg

Maximum load		KM130		KM130H	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated	X = 1,020 mm	1,260 kg	X = 985 mm	1,250 kg
2	Not articulated	X = 1,450 mm	970 kg	X = 1,620 mm	850 kg
3	Not articulated	-	740 kg	-	630 kg

Maximum load		KM130TE		KM170TE	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated, telescopic arm retracted	X = 1,060 mm	1,100 kg	X = 1,345 mm	1,240 kg
1	Not articulated, telescopic arm extended	X = 1,925 mm	640 kg	X = 1,785 mm	880 kg
2	Not articulated, telescopic arm retracted	Y = 1,550 mm	840 kg	Y = 2,200 mm	1,150 kg
2	Not articulated, telescopic arm extended	Y = 2,250 mm	500 kg	Y = 2,520 mm	710 kg
3	Not articulated, telescopic arm retracted	-	520 kg	-	820 kg
	Not articulated, telescopic arm extended	-	380 kg	-	610 kg





Maximum load		KM140	
Position	Status	X/Y	Value
1	Not articulated	X= 1,020 mm	1,600 kg
2	Not articulated	Y= 1,450 mm	1,155 kg
3	Not articulated	-	940 kg

Maximum load		KM140TE	
Position	Status	X/Y	Value
1	Not articulated, telescopic arm retracted	X= 1,060 mm	1,300 kg
1	Not articulated, telescopic arm extended	X= 1,925 mm	760 kg
2	Not articulated, telescopic arm retracted	X= 1,550 mm	980 kg
2	Not articulated, telescopic arm extended	X= 2,250 mm	600 kg
3	Not articulated, telescopic arm retracted	-	540 kg
3	Not articulated, telescopic arm extended	-	450 kg

Maximum load		KM170		KM180	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated	X = 1,120 mm	1,470 kg	X = 1,120 mm	1,470 kg
2	Not articulated	X = 1,645 mm	1,180 kg	X = 1,645 mm	1,180 kg
3	Not articulated	-	880 kg	-	880 kg

Maximum load		KM180TE		KM250TE	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated, telescopic arm retracted	X = 1,345 mm	1,240 kg	X = 1,290 mm	1,600 kg
1	Not articulated, telescopic arm extended	X = 1,785 mm	880 kg	X = 2,370 mm	1,050 kg
2	Not articulated, telescopic arm retracted	Y = 2,200 mm	1,150 kg	Y = 1,805 mm	1,350 kg
2	Not articulated, telescopic arm extended	Y = 2,520 mm	710 kg	Y = 2,690 mm	880 kg
3	Not articulated, telescopic arm retracted	-	820 kg	-	950 kg
	Not articulated, telescopic arm extended	-	610 kg	-	700 kg



Maximum load		KM250		KM250H	
Position	Status	X/Y	Value	X/Y	Value
1	Not articulated	X = 1,150 mm	2,400 kg	X = 1,370 mm	2,050 kg
2	Not articulated	X = 1,710 mm	1,630 kg	X = 2,060 mm	1,300 kg
3	Not articulated	-	980 kg	-	800 kg

## 14.4 Other technical machine data

Other technical data				
Parameter	KM80	KM85	KM90	KM100
Fuel tank capacity (l)	20	20	33	33
Diesel engine type	Kubota D722	Kubota D902	Kubota D1105	Kubota D1105
Soot filter	No	No	No	No
Engine power (kW/hp)	13/18	17/23	19/25	19/25
Number of cylinders	3	3	3	3
Output of work hydraulics (l/min)	28	28	33	33
Pressure of work hydraulics (bar)	180	180	180	180
Curb weight without attachment (kg)	820	820	1,000	1,050
Lifting power (kg)	460	460	550	700
Breakout force (kg)	450	450	640	640
Top speed (km/h)	13	13	16	18

Other technical data				
Parameter	KM100TE	KM120	KM120H	KM120TE
Fuel tank capacity (l)	33	37	37	37
Diesel engine type	Kubota D1105	Kubota D1105	Kubota D1105	Kubota D1105
Soot filter	No	No	No	No
Engine power (kW/hp)	19/25	19/25	19/25	19/25
Number of cylinders	3	3	3	3
Output of work hydraulics (l/min)	33	33	33	33
Pressure of work hydraulics (bar)	180	180	180	180
Curb weight without attachment (kg)	1,280	1,400	1,450	1,650
Lifting power (kg)	450	900	825	850
Breakout force (kg)	990	1,000	925	970
Top speed (km/h)	18	18	18	18



Other technical data					
Parameter	KM125	KM125H	KM125TE	KM130	KM130H
Fuel tank capacity (l)	37	37	37	37	37
Diesel engine type	Kubota D1105	Kubota D1105	Kubota D1105	Kubota V1505	Kubota V1505
Soot filter	No	No	No	No	No
Engine power (kW/hp)	19/25	19/25	19/25	19/25	19/25
Number of cylinders	3	3	3	4	4
Output of work hydraulics (l/min)	45	45	45	37	37
Pressure of work hydraulics (bar)	180	180	180	180	180
Curb weight without attachment (kg)	1,400	1,450	1,650	1,450	1,500
Lifting power (kg)	900	825	850	900	850
Breakout force (kg)	1,000	925	970	1,000	950
Top speed (km/h)	10/20	10/20	10/20	20	20

Other technical data			
Parameter	KM130TE	KM140	KM140TE
Fuel tank capacity (l)	37	40	40
Diesel engine type	Kubota V1505	Yanmar 3TNV88C	Yanmar 3TNV88C
Engine power (kW/hp)	19/25	27.5/37	27.5/37
Soot filter	No	Present	Present
Number of cylinders	4	3	3
Output of work hydraulics (l/min)	37	48	48
Pressure of work hydraulics (bar)	180	180	180
Curb weight without attachment (kg)	1,700	1,550	1,750
Lifting power (kg)	875	1,150	975
Breakout force (kg)	970	955	970
Top speed (km/h)	20	20	20

Other technical data					
Parameter	KM180	KM180TE	KM250	KM250H	KM250TE
Fuel tank capacity (l)	45	45	60	60	60
Diesel engine type	Yanmar 3TNV86CT	Yanmar 3TNV86CT	Yanmar 4TNV88C	Yanmar 4TNV88C	Yanmar 4TNV88C
Soot filter	Present	Present	Present	Present	Present
Engine power (kW/hp)	32.5/43	32.5/43	35.5/48	35.5/48	35.5/48
Number of cylinders	3	3	4	4	4
Output of work hydraulics (l/min)	50	50	63	63	63
Pressure of work hydraulics (bar)	180	180	180	180	180



Other technical data					
Parameter	KM180	KM180TE	KM250	KM250H	KM250TE
Curb weight without attachment (kg)	1,800	2,200	2,380	2,570	2,750
Lifting power (kg)	1,400	1,300	1,800	1,500	1,700
Breakout force (kg)	1,250	940	1,440	1,600	1,415
Top speed (km/h)	20	20	20	10/20	20



## 14.5 Sound level

Unit: dB(A)	
	LwA*
Knikmops	93

\*LWA: guaranteed sound power level for airborne sound.

## 14.6 Bucket dimensions


This section contains an overview of the different types of bucket available for each type of machine, as well as the dimensions.



These dimensions are the standard buckets for the machines. Other versions and sizes are available on request. Data and more information can be obtained from your Knikmops distributor.

The following are reference illustrations of the shovel bucket, volume bucket, and rubble bucket.


Shovel bucket 20139151 (1,250 mm)

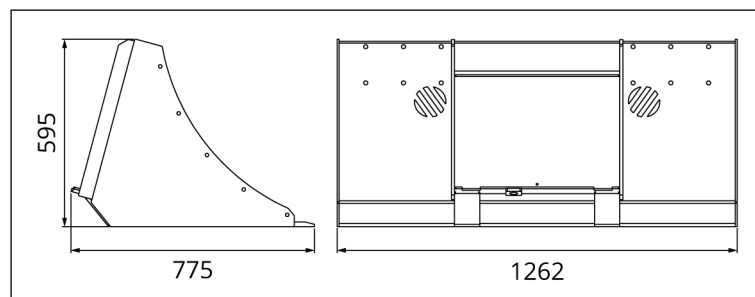

**Figure 60:** Shovel bucket 20139151 (1,250 mm)




Volume bucket 20139198 (1,270 mm)

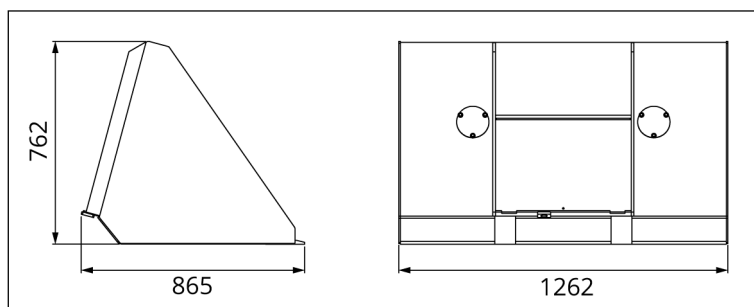

**Figure 61:** Volume bucket 20139198 (1,270 mm)

Rubble bucket 20099025 (1,250 mm)

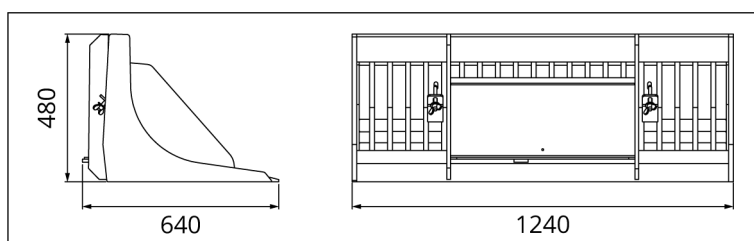


**Figure 62:** Rubble bucket 20099025 (1,250 mm)

Machine	Item number	Name	Weight (kg)	Volume (l)	Volume (l) + 25%
KM80	20099074	Shovel bucket 1.10 m wide SN110	72	160	200
	20099130	Volume bucket 1.10 m wide SG110	93	280	350
KM90/100	20099133	Shovel bucket 1.25 m wide SN125	78	185	231
	20099131	Volume bucket 1.25 m wide SG125	100	315	394
KM80/90/100	20099025	Rubble bucket 1.25 m wide	126	103	129
KM130	20139151	Shovel bucket 1.25 m wide SN125	112	240	300
	20139198	Volume bucket 1.27 m wide SG127	141	480	600
	20139150	Rubble bucket 1.25 m wide	156	175	219
KM180	20250011	Shovel bucket 1.40 m wide SN140	167	285	356
KM250	20250000	Shovel bucket 1.50 m wide SN150	178	306	383
KM180/250	20250007	Volume bucket 1.50 m wide SG150	285	984	1,230
	20250002	Rubble bucket 1.53 m wide	244	378	473



## 14.7 Pallet fork dimensions

This section contains an overview of the different types of pallet fork available for each type of machine, as well as the dimensions.

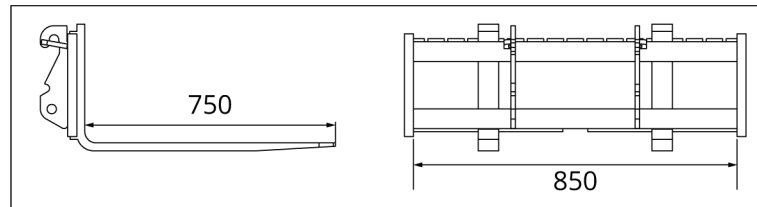

**Figure 63:** Pallet fork dimensions

Machine	Item number	Length	Width	Weight
KM80/KM85	20099082	0.75 m	0.85 m	96 kg
KM90/KM100	20099080	0.75 m	0.85 m	96 kg
KM120/KM125/KM130/ KM140	20139143	0.90 m	0.85 m	112 kg
KM180/KM250	20250100	1.10 m	1.10 m	144 kg
KM180/KM250	20250101	1.10 m	1.42 m	176 kg



# 15. Options and attachments

## 15.1 Options

Option name	Description
3-point lifting device	This lifting device allows you to couple mechanically propelled machines to the rear of your Knikmops. This is a lifting device as for a category 1 tractor.
Cutter teeth	This options allows you to loosen stony ground or rubble.
Bucket positioning rod	This option allows the attachment (shovel/leveling frame) to be placed neatly on the ground.
Tires	We offer various types of tire so that you can use the one that suits the work you are doing.
Custom or corporate color	We offer the option to have your machine sprayed in your custom or corporate color.
Ground weight	The ground weight increases stability and traction while working.
Drill bit	A drill bit for drilling holes in the ground for all manner of uses such as installing fence posts. Available with an extender (length 1 m) and in different drill diameters of 10 to 100 cm.
Cab	The cab is ideal for work in poor weather conditions. The cab is equipped with work lights, windscreen washers at the front and rear, and heating (if applicable).
Central lubrication	Central lubrication ensures that the hinge points of the arm are lubricated automatically, thus extending the service life of the components.
Counterweight	The counterweight provides greater lifting power and more stability when lifting heavy loads.
Electrical lock	This function allows the locking differential to be switched on and off electrically.
Additional hydraulic cooler	This cooler provides additional cooling during activities that require a constant and large hydraulic flow.
Galvanized attachment plate	Attachment that can be attached to a rubber snow scraper to allow a large mound of snow to be moved without the snow falling behind the shovel.
Toolbox	This toolbox helps to ensure that your tools are always with the Knikmops.
Hand throttle	The hand throttle provides a higher engine speed, independently of the travel speed. This allows implements to be propelled that require a greater hydraulic flow at a lower travel speed. The hand throttle can be installed by the user himself/herself on request. Gebroeders Geens can supply a self-build kit. Contact Gebroeders Geens for more informations.
Log splitter cross-piece	Cross-piece that can be mounted on a log splitter. The log splitter cross-piece can split a log into four pieces in a single movement.
Supports (for stone transportation clamp)	Clamping supports that allow the stone transportation clamp to be adjusted to the desired shape of the stones.
Hydraulic arm suspension	This function makes driving the machine at higher speeds more comfortable.
Hydraulic leakage line	A leakage line may be required on hydraulically driven machines that require a large hydraulic flow in order to lower the pressure and heat in the hydraulic system.





Option name	Description
Hydraulic fast attachment, rear	This allows you to operate hydraulically propelled devices that you can attach to the rear of the machine.
Hydraulic vacuum unit	Vacuum unit hydraulically propelled by the machine's engine, which means that there is no need for an additional petrol engine.
HyE control	This option allows you to operate multiple hydraulic functions at the same time. The additional function can be controlled with the joystick. This option also controls the Geco leveler.
HyF control	This option allows you to operate multiple hydraulic functions at the same time. The additional function can also be operated with the joystick.
Hydraulic fast attachment coupling	This option allows you to swap your attachment quickly without having to leave your Knikmops.
Joystick control	Joystick controls allow you to operate functions such as forward/reverse and the horn with the joystick lever that you use to control the arm.
Click clamp	The click clamp is a clamp that can be folded so that the Knikmops can be used in areas of low clearance.
LED strobes	LED strobes increase your visibility on site or in traffic. These are mounted to the bracket at the rear.
Manual inching	Manual inching is a means of setting the travel speed of the Knikmops and the drive mechanism of the hydraulic system to different speeds without affecting one another. You can then change the hydraulic transmission without affecting the speed of the engine – ideal when using a mower. You can also leave the inching pedal in a fixed position (this is the more cost-effective alternative to a system with a regular hand throttle).
Attachable claw	Claw that can be mounted to shovel buckets, tile forks, manure forks, rubble buckets, pallet forks, clamping arms, and more. The size and number of teeth vary according to the attachment to which it the claw is mounted.
License plate support	For attaching your license plate to the Knikmops.
Folding safety roof	Comprises a cab profile that you mount to the Knikmops. The safety roof can be folded in and collapsed with ease.
Raised edges	Can be fitted to a shovel bucket to add volume to the bucket.
ROPS-FOPS bar	Protects your machine in the event of tipping over (rolling over protection system) and from falling objects (falling objects protection system).
Folding ROPS-FOPS bar	This bar protects your machine from tipping over (rolling over protection system) and from falling objects (falling objects protection system). You can fold the ROPS-FOPS bar in to move through areas of low clearance.
Fast attachment coupling	A different fast attachment coupling to the standard connection system of the Knikmops.
Mudguard extensions	Prevents your Knikmops from becoming unnecessarily dirty.
Towbar	Allows you to move a trailer around the site.
Extender bar for screed beam	Extender bars can be mounted to the screed beam to lengthen it or shorten it.
Suction cups	For use with a frame and arm; fit the suction cups for a vacuum system on a Knikmops/Rollmops. You can use the suction cups to position and move coping stones, tiles, and other materials that can be moved by suction force. The suction cups are available in different sizes depending on the use.



Option name	Description
Fixed stop	Ensures that you don't need to constantly hold the lever for the additional hydraulic function when mowing, brushing, etc., but that the lever stays in position.
Spring steel slat for screed beam	Spring loaded slats mounted on the left and right of the stone transportation clamp to push the stones together so that they are tighter.
Safety roof (ROPS-FOPS)	Cab frame that can be optionally mounted to the Knikmops to protect against rolling if the Knikmops should tip.
Raised frame	An raised frame for attachment to the pallet forks. Provides higher support for material; also improves safety for the operator.
Extender	Extender for the drill so that you can drill deeper holes.
Heating hydr. + engine	Keeps the machine's engine and hydraulic system at the correct temperature in the cold winter months. This helps the machine to start more smoothly and drive more smoothly after being started up. This option is recommended in locations where the temperature is lower than -10°C/14°F. This option operates on mains power.
Water tank for dust suppression for brush with collector bin	Can be optionally attached to the brush with collector bin to prevent blowing dust.
Road lighting	This option helps to ensure safety on the road. The option includes two headlights and tail lights with side lights, low beam, and turn indicators.
Work lighting	This option is ideal for enabling work at dusk or at night. The option includes two work lights at the front and one at the rear.
Tarp	Tarp cover to cover the steering console and operator's seat.
Comfort seat	This seat is more comfortable and has improved springs when compared to the standard seat.
Side brush for brush with collector bin	Option for brush with collector bin. This brush allows you to more easily clean edges, corners, and similar.
Side plates for tile fork	For optional attachment to the tile fork.
Beacon	The beacon is ideal for ensuring that you are visible on the road or on site. Mounted to the bracket at the rear.
Floating boom	This option allows you to deactivate the lifting cylinder so that the arm can move freely. This then allows an attachment such as a leveler/cutter to follow the ground free from the machine.

## 15.2 Attachments

Name of attachment	Description
Screed beam	Levels beds for paved surfaces such as roads, cycle paths, driveways, squares, and more.
Asphalting bucket	For asphalting small areas such as driveways, parking lots, and business premises. It is also ideal for work on road surfaces.
Bale clamp	Grips, stacks, and transports straw, hay, and grass bales.
Concrete transportation bucket	Transports large quantities of liquid concrete and discharges them in hard-to-access areas.
Tree clamp	Transports sawn tree trunks and branches, also fitted with a rotator to maneuver tree trunks to any angle. The tree clamp can also be used to remove limited amounts of shrub.



Name of attachment	Description
Stone gripping clamp	Lays heavy grass sections and coping stones and is available in two versions – grass clamp and the edging stone clamp.
Brush with collector bin	Cleans large surfaces and is fitted with a collector bin in which dirt can be easily collected. The collector bin can be emptied mechanically; there is also the option of a side brush that makes it easier to clean edges, gutters, and corners.
Overhead tipping bucket	Can tip bulky materials such as stones, rubble, and sand into a truck or high container.
Rotary mower	Mows short grass; can also be fitted with a side or rear grass ejection channel. The mower is available with a mulching kit and collecting bin. The mulching kit allows the grass to be mowed extra short.
Three-point lifting device	Can be used for implements without PTO shaft and comprises two side arms in a V shape between which a third arm can be moved up and down.
Double stone transportation clamp	Grips twice as much as the standard stone transportation clamp.
Leveling bucket	Excavates, levels, and moves large volumes of soil and be used both forward and in reverse. When driving in reverse, small quantities of soil can be leveled and flattened with the necessary force.
Geco leveler with laser control (eHC)	Can level or flatten a foundation layer for paving or concreting.
Grass edge cutter	Cuts the edge of a grass area quickly and efficiently and comprises a disk that vertically borders the sod of grass, followed by a blade that severs the roots.
Shovel bucket	Can transport various materials as well as scoop sand, etc.
Sweeping brush for bucket	Quickly cleans large surfaces, combined with a shovel bucket.
Shovel bucket with claw	Transports unconventional or lightweight materials, such as straw, branches, pruning waste, and more.
Post hole borer	Easily drills holes for fence posts or plants; can also be used when pouring concrete, planting trees, and installing a meadow fence.
Earth dumper	Moves large quantities of soil to hard-to-access areas and fits easily through narrow passages.
Ground leveling frame	Levels ground quickly. Useful for flattening large, uneven areas, driveways, and lawn seed beds.
Rotary tiller	Tills uncultivated plots, vegetable gardens, and lawns.
Large volume bucket	Transports large quantities and can carry almost twice as much as the standard shovel bucket.
Hedge trimmer	Trims hedges both horizontally and vertically. The hedge trimmer can also be extended to trim high hedges.
Height gage	Tool for smoothing paver beds to the correct size.
Wood chipper	Chips branches.
Log splitter	Splits large logs and stumps into smaller pieces.
Hydraulic vacuum system	Positions coping stones, tiles, etc. using a vacuum pump so that there is no damage such as from clamping tools.
Hydraulically adjustable scraper	Scraper that, with the aid of a cylinder, is tilted to push material to the side (hydraulic tilt adjustment).
Hydraulic arm	Can lift and move loads with added range.
Sand brush	Sweeps sand between newly laid pavers or quickly sweeps pruning waste and decomposition waste to keep the site clear or to prepare for the next day.



Name of attachment	Description
Flail mower	Mows tall grass, areas with significant weed growth, and even light forms of wood structure.
Paver clamp	Automatic paver to mechanically lay all kinds of paver from a pallet onto a bed.
Pinching bucket	Can dig trenches and pits.
Jib	Suitable for minor excavation work such as trenches in the ground for pipes or lines.
Jib with controls	Suitable for minor excavation work such as trenches in the ground for pipes or lines with control from the jib itself.
Layer clamp	Grips and moves pavers horizontally.
Mixing bucket	Mixes sand and cement. The mixing bucket can be used to prepare screed or cement and move it to the right location.
Fertilizer spreader	Spreads fertilizer evenly over a specific area.
Manure fork	Can clamp and move hay, straw, manure, and pruning waste.
Mortar mixer	Mixes gravel, sand, cement, and water into mortar. Attached to the Knikmops, transports the mortar to the desired location.
Mulch mower	Trims a hedge as desired, without straining the body.
Weed brush	Comprises braided steel cables, whether or not with a cover, to remove stubborn weeds from paved surfaces.
Mobile ramps	Ramps for moving implements and vehicles to a higher level.
Ramp	Ramp for driving a pallet onto.
Pole mower	Mows in tight locations where conventional mowers find it hard to access, such as around poles, trees, next to fences, under barbed wire, and more.
Pallet transporter	Moves heavy pallets, which is useful for a smaller machine.
Pallet fork	Moves pallets.
Pallet fork with claw	Transports goods with a less conventional shape, such as tree trunks. The goods can then be additionally clamped so that they cannot move from one place to another.
Rubble bucket	Scoops loose stones and rubble.
Rubble bucket with insert	Functions as a shovel bucket thanks to an insert.
Rubble bucket with claw	Loads and transports loose materials such as branches, logs, straw, manure, construction waste, and more.
Radial sweeper	Brushes paved surfaces. The brush is available as a polypropylene version that is soft and perfect for sweeping loose and lightweight items. To remove small weeds, the radial sweeper for your Knikmops is made with steel wire.
Ripper	Removes shrubs and roots by severing them or sawing through them and then pulling them up.
Rotating brush	Can rotate to clean squares and paths.
Rotary harrow	Levels the ground and crumbles up clods of earth.
Scraper	Cleans paved areas of sand, mud, and manure. The scraper itself has a rubber material so that it does not damage the surface.
Scraper, U-shaped	Scraper with folded edges.
Trencher	Can dig trenches to 120 cm in depth for cables, pipes, or hoses.
Snow scraper	Clears snowed-in squares, cycle paths, public roads, and driveways.



Name of attachment	Description
Gravel bucket with roller	Spreads sand and other fine material dosed over a surface such as asphalt. The gravel bucket with roller is often used for paving work. The gravel bucket with roller can distribute the material more finely and evenly than a regular gravel spreader.
Gravel spreader	Spreads sand and other fine material dosed over a certain area.
Sprayer tank	Cleans tools after having been covered with dust. This attachment is equipped with a motor that allows you to remove the material, as well as with a high-pressure pump.
Stack holder	Holds stacked stones in place in the stone transportation clamp while being moved. The stack holder is hydraulically controlled.
Automatic paver	Grips batches of paver on the pallet to move them.
Stone transportation clamp	Moves large quantities of paver.
Bale fork	Moves straw with the aid of two height-adjustable support pillars that stop the bales from falling backward.
Tile clamp	Hydraulically controlled clamp that clamps the object being lifted with a cylinder.
Tile fork	Breaks out old paving.
Tile fork with claw	Scoops and/or moves cobblestones, pruning waste, manure, and other objects that can be clamped.
Vacuum frame	Frame to which you can mount your chosen suction cups. The size depends on the type of Knikmops/Rollmops and what the frame is being used for.
Vacuum system with petrol engine	Positions coping stones, tiles, and heavier materials through suction force so that there is no damage, e.g., from clamping tools.
Four-in-one bucket	Scrapes the ground, scoops sand or stones, grips all kinds of object, and can discharge its load high up.
Batching bucket	Transports and doses sand, screed, and ready-mixed concrete to backfill coping stones and to seal trenches.
Feed bucket	Helps livestock farmers supply animals with feed.
Implement trailer	Can carry the implements of mini tractors.
Sawdust spreader bucket	Spreads sawdust, chopped straw, fine wood chips, compost, and more.

## 16. Maintenance carried out

[illegible]



## 17. Glossary

Words	Description
Fine filter	A filter that can effect a certain level of filtering. The fine filter is not intended to filter coarse dirt particles from a fluid but to filter micro-particles of dirt from a pre-filtered fluid.
Hydraulic hose	Flexible hollow pipe for the transportation of hydraulic fluids from one location to another.
Inching pedal	Pedal with which the operator can drive slowly forward or in reverse over a short distance for precise machine positioning.
Cyclone filter	Cleans the air to the desired level before the air passes to other filters for further purification.
Red diesel	Diesel or gasoil with a lower rate of excise duty.
Shurlock button	Prevents the machine from being operated unexpectedly when the operator enters and exits the machine.
Water separator	Filter for diesel engines to remove condensation from the diesel.



## 18. CE declaration of conformity

EC declaration of conformity for machinery

Gebroeders Geens N.V.

Hinnenboomstraat 5, 2320 Hoogstraten

Belgium

Hereby declares that Knikmops types KM80, 85, 90, 100, 120, 125, 130, 140, 170, 180, 250 and all H and TE versions for transportation in road construction, the construction industry, agricultural industry, or related industries satisfy the stipulations of the Machinery Directive 2006/42/EC, ROPS:EN ISO 3471, and FOPS:EN ISO 3449 in accordance with the test procedures as specified in NEN-ISO 21299:2009(E).

From year of construction

With serial number from

The volume bucket, shovel bucket, rubble bucket, and other types of bucket as attachments for use in road construction satisfy the provisions of the Machinery Directive (Directive 98/37/EC, including 89/392/EEC, 91/368/EEC, and 93/68/EEC), as well as NEN-EN 292-1/2 and 1050.

The pallet fork as an attachment for use in road construction satisfies the provisions of the Machinery Directive (Directive 2006/42/EC, including 98/37/EC, 89/392/EEC, 91/368/EEC, 93/44/EEC, and 93/68/EEC), as well as NEN-EN10028-1/7 EN-ISO 14121-1 and ISO/TR 14121-2.

Compiled by Gebroeders Geens N.V., Hoogstraten (Belgium).

Prepared in Hoogstraten (Belgium), March 25, 2019

Manager, F. Geens



